

82106570

33485

FACSIMILE USER INTERFACE WITH TOUCH-SENSITIVE DISPLAY AND  
METHOD OF USE

Abstract of the Disclosure

A system and method for controlling facsimile communications is disclosed. A facsimile machine contains a touch-sensitive display that displays a plurality of display screens containing step-by-step instructions allowing a user to use complex facsimile functions. The facsimile machine displays a plurality of menus on the touch-sensitive display, and the user can select the desired option by touching the touch-sensitive display in the location corresponding to the desired option. The touch-sensitive display also displays a prompt that provides the user with instructions related to the particular screen display. The predetermined input locations on the touch-sensitive display are designed to appear like buttons and are labeled to correspond to their function. A button appears to be depressed when the user touches it. The facsimile machine indicates the selection of a button by displaying the button in a depressed position when the user touches the touch-sensitive display, and the facsimile machine performs the function associated with the button when the user removes his finger from the touch-sensitive display. This allows the user to slide his finger to a different button and perform a different function if so desired. An optional hardware keypad with a plurality of buttons, some of which correspond to buttons on the touch-sensitive display, can be used to enter commands into the facsimile machine.

**BEST AVAILABLE COPY**

Description

FACSIMILE USER INTERFACE WITH TOUCH-SENSITIVE DISPLAY  
AND METHOD OF USE

5

Technical Field

This application relates generally to a user interface for an intelligent facsimile machine (IFAX) and, more specifically, to a system and method for controlling user interaction with the IFAX.

10

Background of the Invention

The modern workplace has become increasingly dependent on electronic devices. Machines such as photocopiers, computers, modems, and facsimiles are now considered essential tools for the office. Many of these tools are extremely sophisticated, which can make them difficult to use. The increased capability of these tools has often outpaced the ability of the average user to efficiently operate them.

For example, an old style facsimile (FAX) machine had few options and was relatively easy to operate. Early FAX machines used an acoustical modem to couple the FAX signal to a standard telephone handset. The person sending a facsimile message simply dialed the FAX telephone number of the recipient and plugged the telephone handset into the acoustical modem when they heard an audible tone generated by the recipient's FAX machine over the handset. The FAX machine was easy to use, but had few or no options.

More modern IFAX machines have direct telephone lines as well as a long list of sophisticated options. For example, the user can elect to send a facsimile message immediately, or delay transmission to a later time at which it is automatically sent, such as at nighttime when the telephone rates decrease. The facsimile message is read by the IFAX and a digital image of the message is stored in memory within the IFAX until the designated transmission time.

With another option, the user may elect to send a facsimile message to a group of recipients that can be specified by a group identifier. The IFAX stores a list of facsimile telephone numbers, sometimes called addresses, and can be programmed to recognize various groups. The user need only provide the IFAX with the instruction to send a facsimile message to a group, such as "Sales Managers", for example, and the IFAX will automatically send

the facsimile message to each facsimile telephone number associated with the group of sales managers.

5 Numerous other features such as speed dialing, automatic redialing, confidential facsimile transmission and reception, facsimile forwarding, facsimile relaying and facsimile polling are now available on modern IFAXs.

10 One problem with the advanced technological features of the modern IFAX is that they are difficult for the average user utilize without extensive training. Further, once learned, if a new IFAX is purchased, the user may have to be retrained to efficiently utilize the same features on the new IFAX.

Therefore, it can be appreciated that there is a significant need for a system and method of facsimile communication that allows a user to easily interact with the IFAX without extensive training.

### Summary of the Invention

The invention is embodied in a system for facsimile communication comprising a touch sensitive display, displaying a plurality of menu options, each of which has a corresponding predetermined location on the display with each predetermined location being sensitive to the touch of the user and including a label corresponding to the menu option. A prompt displayed on a portion of the display provides the user with operational instructions. An input interface is coupled to the display and senses a user input in proximity with the display in one of the predetermined locations in response to the instructions. An activation means activates the facsimile function corresponding to the user input.

In one embodiment, the facsimile machine may further include a hardware keypad with a plurality of buttons with at least one button corresponding to one of the predetermined locations. The input interface senses user input on the hardware keypad and in response to sensing the user input, the activation means activates the facsimile function corresponding to the user input.

The inventive method involves displaying a plurality of menu options on the touch sensitive display and displaying an instruction to the user on a portion of the display. The facsimile machine senses the user input in proximity with the display in one of the predetermined locations in response to the instructions and, in response to sensing the user input, the facsimile machine activates a facsimile function corresponding to the user input.

In one embodiment, the facsimile machine initially displays a main menu listing with a plurality of categories of menu options. The main menu categories comprise sending a facsimile message, examining received facsimile messages, changing parameters of the facsimile machine, selecting preprogrammed sequences of facsimile functions, and a sign-in option to log in the user. Following the sign-in procedure, the facsimile machine displays one of the plurality of menu options in the selected menu category.

The step of activating a user selected facsimile function causes the display of one of the plurality of menu options on the display. In one embodiment, the plurality of menu options are system parameters and the facsimile machine senses user input to select a particular one of the system parameters. The system parameters may be selected by touching a first time the predetermined location on the display screen corresponding to the system parameter, and the particular system parameter may be subsequently deselected by touching the predetermined location on the display a second time.

The facsimile machine may include a scrolling control displayed on the display screen and a screen indicator moveable on the display screen and controlled by the scrolling control.

Alternatively, the scrolling control may cause a facsimile machine  
5 to scroll through a plurality of menu options if the number of menu options exceeds a display capacity of the display.

The facsimile machine can store a plurality of facsimile messages in storage locations within the facsimile machine. The user may select menu options to display a list of the stored facsimile messages. The user may  
10 subsequently select a selected facsimile message from the list of stored facsimile messages displayed on the display. The facsimile machine may include a display option in the plurality of menu options, and the method further includes the step of displaying the user selected facsimile message on the display.

If the stored facsimile message is an outgoing facsimile message,  
15 the user may cancel the transmission of the selected outgoing facsimile message. In one embodiment, the plurality of menu options include a transmit option and the method further includes the step of transmitting the user selected outgoing facsimile message in response to sensing the user input of the transmit option.

In another alternative embodiment, the plurality of menu options  
20 includes a transmit later option and the method further includes the step of selecting a transmission time for transmitting the user selected outgoing facsimile message. The facsimile machine transmits the user selected outgoing facsimile message at the selected transmission time.

The facsimile machine may further include a cancel option in the  
25 plurality of menu options. The method further includes the step of canceling the transmit later option of the user selected outgoing facsimile message whereby the user selected outgoing facsimile message is not transmitted.

The plurality of menu options may further include a transmission parameter option, and the method includes the further steps of changing a  
30 transmission parameter of the user selected outgoing facsimile message whereby the user selected facsimile message is transmitted in accordance with the user selected transmission parameter. The transmission parameter may include the time of transmission of the user selected outgoing facsimile message.

In one embodiment, the touch sensitive screen senses the  
35 placement of a finger of the user in proximity with the display and alters the display to indicate the selection of a user selected facsimile function. The facsimile machine subsequently senses the removal of the finger of the user from

5

proximity with the display and, in response to sensing the removal of the finger of the user, activates the user selected facsimile function.

### Brief Description of the Drawings

Figure 1 is a functional block diagram of an IFAX according to the present invention.

5 1. Figure 2 is an operational flowchart of the IFAX shown in Figure 1.

Figure 3 is a screen display of the main menu of the IFAX of Figure 1.

Figures 4A-K are operational flowcharts used by the IFAX of Figure 1 to send a facsimile.

10 Figure 5 is a screen display of the IFAX of Figure 1 used to enter a facsimile telephone number.

Figure 6 is a screen display of the IFAX of Figure 1 used to enter a name of a facsimile recipient.

15 Figure 7 is a screen display of the IFAX of Figure 1 used to enter information to select a facsimile telephone number.

Figure 8 is a screen display of the IFAX of Figure 1 used to select a facsimile telephone number from a facsimile phonebook.

Figure 9 is a screen display of the IFAX of Figure 1 used to select facsimile transmission options.

20 Figure 10 is a screen display of the IFAX of Figure 1 used to display recipients of facsimile messages.

Figure 11 is a screen display of the IFAX of Figure 1 used to confirm the transmission of facsimile messages.

25 Figure 12 is a screen display of the IFAX of Figure 1 used to select a transmission time for facsimile messages.

Figure 13 is a screen display of the IFAX of Figure 1 used to complete a cover page for facsimile messages.

Figure 14 is a screen display of the IFAX of Figure 1 used to select a cover page style for facsimile messages.

30 Figure 15 is a screen display of the IFAX of Figure 1 used to add a file to a facsimile message.

Figure 16 is a screen display of the IFAX of Figure 1 used to select a source location for the enclosed file of Figure 15.

35 Figure 17 is a screen display of the IFAX of Figure 1 used to display and select options for facsimile messages.

Figure 18 is a screen display of the IFAX of Figure 1 used to display error messages to the user.

Figure 19 is a screen display of the IFAX of Figure 1 used to display and select scanner settings.

Figure 20 is a screen display of the IFAX of Figure 1 used to display and select security settings.

5 Figure 21 is a screen display of the IFAX of Figure 1 used to display and select department code information.

Figure 22 is a screen display of the IFAX of Figure 1 used to display and select other facsimile options.

10 Figure 23 is a screen display of the IFAX of Figure 1 used to display and select options in a mailbox inbox.

Figure 24 is a screen display of the IFAX of Figure 1 used to display and select options when viewing a stored facsimile message.

Figure 25 is a screen display of the IFAX of Figure 1 used to confirm the printing of a selected facsimile message.

15 Figure 26 is a screen display of the IFAX of Figure 1 used to display a message confirming deletion of a selected facsimile message.

Figure 27 is a screen display of the IFAX of Figure 1 used to confirm the saving of a selected facsimile message to disk.

20 Figure 28 is a screen display of the IFAX of Figure 1 used to confirm the forwarding of a selected facsimile message.

Figure 29 is a screen display of the IFAX of Figure 1 used to display and select options in a mailbox outbox.

Figure 30 is a screen display of the IFAX of Figure 1 used to display an error message to the user.

25 Figure 31 is a screen display of the IFAX of Figure 1 used to display and select options when viewing a stored facsimile message.

Figure 32 is a screen display of the IFAX of Figure 1 used to confirm printing of a selected facsimile message.

30 Figure 33 is a screen display of the IFAX of Figure 1 used to confirm the cancellation of transmission of a selected facsimile message.

Figure 34 is a screen display of the IFAX of Figure 1 used to select a transmission time for a selected facsimile message.

Figure 35 is a screen display of the IFAX of Figure 1 used to display and select set up options.

35 Figure 36 is a screen display of the IFAX of Figure 1 used to display and select user setting options.



Figure 37 is a screen display of the IFAX of Figure 1 used to display and select personal information for editing.

Figure 38 is a screen display of the IFAX of Figure 1 used to enter a new user name.

5        Figure 39 is a screen display of the IFAX of Figure 1 used to enter a new voice telephone number.

Figure 40 is a screen display of the IFAX of Figure 1 used to display and select routing of incoming facsimile messages.

10       Figure 41 is a screen display of the IFAX of Figure 1 used to display and select parameters for printing of incoming facsimile messages.

Figure 42 is a screen display of the IFAX of Figure 1 used to display and select security options.

Figure 43 is a screen display of the IFAX of Figure 1 used to enter an old password.

15       Figure 44 is a screen display of the IFAX of Figure 1 used to enter a new password.

Figure 45 is a screen display of the IFAX of Figure 1 used to confirm entry of the new password.

20       Figure 46 is a screen display of the IFAX of Figure 1 used to confirm changing of a password.

Figure 47 is a screen display of the IFAX of Figure 1 used to confirm that a password has not been changed.

Figure 48 is a screen display of the IFAX of Figure 1 used to confirm selection of a new encryption key.

25       Figure 49 is a screen display of the IFAX of Figure 1 used to display and select personal cover page styles.

Figure 50 is a screen display of the IFAX of Figure 1 used to confirm selection of a personal cover page style.

30       Figure 51 is a screen display of the IFAX of Figure 1 displaying a message concerning public access of the selected cover page style of Figure 50.

Figure 52 is a screen display of the IFAX of Figure 1 confirming installation of the personalized cover page style of Figure 50.

Figure 53 is a screen display of the IFAX of Figure 1 used to display and select initial screen options.

35       Figure 54 is a screen display of the IFAX of Figure 1 used to display and select system setting parameters.

Figure 55 is a screen display of the IFAX of Figure 1 used to select addition system setting parameters.

Figure 56 is a screen display of the IFAX of Figure 1 used to enter administrator password and access code.

5 Figure 57 is a screen display of the IFAX of Figure 1 used to select discount phone rate periods.

Figure 58 is a screen display of the IFAX of Figure 1 used to display and select system identification information.

10 Figure 59 is a screen display of the IFAX of Figure 1 used to identify an individual to receive remote trouble notification messages.

Figure 60 is a screen display of the IFAX of Figure 1 used to select automatic redial parameters.

Figure 61 is a screen display of the IFAX of Figure 1 used to select facsimile access restriction parameters.

15 Figure 62 is a screen display of the IFAX of Figure 1 used to display and select individual mailbox accounts.

Figure 63 is a screen display of the IFAX of Figure 1 used to enter information related to a new mailbox account.

20 Figure 64 is a screen display of the IFAX of Figure 1 used to display and select options for hardware settings.

Figure 65 is a screen display of the IFAX of Figure 1 used to display and select time and date information.

Figure 66 is a screen display of the IFAX of Figure 1 used to display and select phone line parameters.

25 Figure 67 is a screen display of the IFAX of Figure 1 used to display and select options for advanced facsimile features.

Figure 68 is a screen display of the IFAX of Figure 1 used to select automated reporting parameters.

30 Figure 69 is a screen display of the IFAX of Figure 1 used to display and select automated G3 facsimile message routing.

Figure 70 is a screen display of the IFAX of Figure 1 used to display and select parameters related to facsimile message overflow.

Figure 71 is a screen display of the IFAX of Figure 1 used to display and select automatic facsimile message relay parameters.

35 Figure 72 is a screen display of the IFAX of Figure 1 used to add additional facsimile relay information to the list of Figure 71.

Figure 73 is a screen display of the IFAX of Figure 1 used to display and select facsimile load balancing parameters.

Figure 74 is a screen display of the IFAX of Figure 1 used to display and select options for IFAX reports.

5 Figure 75 is a screen display of the IFAX of Figure 1 used to display and select additional IFAX reports.

Figure 76 is a screen display of the IFAX of Figure 1 used to display an error message to the user.

10 Figure 77 is a screen display of the IFAX of Figure 1 used to confirm printing of a selected IFAX report.

Figure 78 is a screen display of the IFAX of Figure 1 used to display and select options for IFAX tools.

Figure 79 is a screen display of the IFAX of Figure 1 used to display an error message to the user.

15 Figure 80 is a screen display of the IFAX of Figure 1 used to display and select options for copying a facsimile message.

Figure 81 is a screen display of the IFAX of Figure 1 used to confirm copying of a selected facsimile message.

20 Figure 82 is a screen display of the IFAX of Figure 1 used to display and select options for scanning a document.

Figure 83 is a screen display of the IFAX of Figure 1 used to enter the name of the document scanned in the screen display of Figure 82.

Figure 84 is a screen display of the IFAX of Figure 1 confirming scanning of a selected facsimile message.

25 Figure 85 is a screen display of the IFAX of Figure 1 displayed when installing a new IFAX tool in Figure 78.

Figure 86 is a screen display of the IFAX of Figure 1 confirming installation of a selected new tool.

30 Figure 87 is a screen display of the IFAX of Figure 1 requesting information concerning public access of the newly installed tool.

Figure 88 is a screen display of the IFAX of Figure 1 confirming installation of a new IFAX tool.

Figure 89 is a screen display of the IFAX of Figure 1 displayed when a user selects a feature not yet implemented.

35 Figure 90 is a screen display of the IFAX of Figure 1 used to display and select Autokey options when selecting the Autokey function of Figure 3.

Figure 91 is a screen display of the IFAX of Figure 2 used to display and select individual mailbox accounts when selecting the Sign in button of Figure 3.

5 Figure 92 is a screen display of the IFAX of Figure 1 used to enter a password for the individual account selected in Figure 91.

Figure 93 is a screen display of the IFAX of Figure 1 confirming the Sign in of an individual account.

Figure 94 is a screen display of the IFAX of Figure 1 used by an individual following the Sign in procedure.

10 Figure 95 is a screen display of the IFAX of Figure 1 used to confirm the selection of the sign-out button of Figure 94.

Figure 96 is a screen display of the IFAX of Figure 1 used to confirm sign-out.

15 Figure 97 is a flowchart of the setup phase for sending the facsimile.

Figure 98 is a flowchart of the transmit phase for sending the facsimile.

Figure 99 is a flowchart of the close phase for sending the facsimile.

20 Figure 100 is a flowchart used by the present invention for receiving a facsimile message.

Figure 101 is a flowchart used by the present invention for a poll store operation.

25 Figure 102 is a flowchart used by the present invention for a poll retrieve operation.

Figure 103 is a flowchart used by the present invention for automatic redial.

Figure 104 is a flowchart used by the present invention for a power-on procedure.

30 Figure 105 is a flowchart used by the present invention for an idle loop.

Figure 106 is a flowchart used by the present invention for a copy document setup operation.

35 Figure 107 is a flowchart used by the present invention for a copy document operation.

Figure 108 is a flowchart used by the present invention for an autokey reporting operation.

Figure 109 is a flowchart used by the present invention for a cover page insulation operation.

Figure 110 is a flowchart used by the present invention for an automatic relay facsimile request operation.

5 Figure 111 is a flowchart used by the present invention for an advanced facsimile message store and forward operation.

Figure 112 is a flowchart used by the present invention for intelligent facsimile message queuing and multicasting.

10 Figure 113 is a flowchart used by the present invention for facsimile machine load balancing.

Figure 114 is a flowchart used by the present invention for a sign-in operation.

Figure 115 is a flowchart used by the present invention for a sign-out operation.

15

#### Detailed Description of the Invention

As shown in the drawings for purposes of illustration, the present invention is embodied in an IFAX 10 and a simple method for using the IFAX which does not require extensive training. A user interface described herein  
20 allows a user with little or no training in the use of the IFAX to take full advantage of all the highly sophisticated technical features provided on the modern IFAX. The various menus and displays utilized allow the user to see at a glance, all the relevant options available to the user. When the user selects a particular option, the user interface displays other appropriate menus or takes  
25 some action dependent on the particular menu and the particular user selection.

The IFAX 10 containing the user interface of the present invention is shown in the functional block diagram of Figure 1. The IFAX 10 contains a central processing unit 12, and a memory 14, which may comprise a random access memory (RAM), a nonvolatile RAM (NV-RAM), and a read-only  
30 memory (ROM). In addition, the IFAX 10 has a timer 16 and a user interface element 18. The user interface element 18 contains a display 20, which utilizes a touch-sensitive screen 22. The touch-sensitive screen 22 overlays the display 20 in a well-known manner to form a touch-sensitive display 24. A selection is entered on the touch-sensitive display 24 by pressing on a predetermined position of the touch-sensitive display. The selection is indicated on the  
35 display 20 by showing the predetermined portion of the touch-sensitive display 24 as a button in a depressed, or selected, position when the user initially touches

the touch-sensitive display. The action associated with the selection is performed when the user removes his finger from the predetermined portion of the touch-sensitive display 24. Thus, the IFAX 10 indicates a selection when the user touches the touch-sensitive display 24, and reacts to the user removing his  
5 finger by performing the action associated with the selection. The user may change selections by sliding his finger to a different location before removing his finger from the touch-sensitive display 24. The selection process will be discussed in detail below. The user interface element 18 also includes an optional hardware numeric keypad 26 to provide an alternative method of  
10 selection by data entry.

The IFAX 10 has a file storage unit 28 such as a floppy disk unit or a hard disk. The IFAX 10 may also include serial and parallel interface hardware (not shown) to allow the FAX machine to be coupled to an external computer (not shown) or a second IFAX of the same construction. A local area  
15 network (LAN) interface 30 allows the IFAX 10 to be coupled to a LAN 32.

The IFAX 10 has a scan engine 36 to scan paper documents and create a digital image of the scanned document and a print engine 38 to print documents received from another IFAX of the same construction or prior art FAX machines. The print engine 38 may be a thermal print engine as is common  
20 in prior art FAX machines or a laser print engine. Alternatively, the IFAX 10 may be coupled to an external printer such as a laser printer. The scan engine 36 and the print engine 38 are well known in the art and will not be described in detail herein.

A data bus 40 interconnects the above-described portions of the  
25 IFAX 10 and operates in a manner well known to those of ordinary skill in the art. The IFAX 10 with a laser print engine 38 may act as a laser printer when coupled to the external computer (not shown). A FAX modem 42 couples the IFAX 10 to a telephone line 44. The FAX modem 42 provides the necessary circuitry to provide the standard facsimile tone frequencies. The standards for  
30 facsimile transmission are established by The International Telegraph and Telephone Consultative Committee (CCITT). References to CCITT standards will be made throughout this disclosure. The CCITT standards are well known and will not be discussed in detail.

An operational flowchart for the IFAX 10 is shown in Figure 2.  
35 When the IFAX 10 is first powered up, or is reset, a Main Menu 50, shown in the screen display of Figure 3, is displayed on the touch-sensitive display 24. The following description is best understood in conjunction with the flowchart of

Figure 2 and the display of Figure 3. The Main Menu 50 includes entries for the most important and frequently used options that a user selects. The user may select a Send a Fax option by touching a "Send A Fax" button 52, a Mailbox option by touching a "Mailbox" button 54, a Toolbox option by touching a "Toolbox" button 56, an AutoKeys option by touching an "AutoKeys" button 58, or a Sign In option by touching a "Sign In" button 60. Details of operation of each of these options is provided below.

The touch-sensitive display 24 is designed so that the options are displayed with the appearance of buttons. A selected option appears to have its associated button in a depressed position so that the user can determine at a glance which option is selected and which options are not selected. The buttons are labeled for easy interpretation by the user and provide the inputs for IFAX 10. The user simply touches the touch-sensitive display 24 in the location corresponding to a button corresponding to the option desired, such as the Send A Fax button 52. As the IFAX 10 changes from one menu to another, the touch-sensitive display 24 is also changed so that the predetermined input portions to be touched by the user always correspond to the labeled buttons.

The IFAX 10 uses a series of context-sensitive display menus to simplify the user interaction. For example, entering numbers on the optional hardware numeric keypad 26 (see Figure 1) relates to entering a facsimile telephone number if the user is sending a facsimile message, but relates to entering a new recipient telephone number if the user is in a different mode of operation.

A prompt 48 is displayed on a portion of each menu to provide the user with instructions or information related to the operation of the IFAX 10. The prompt 48 may contain graphical symbols and words to instruct the user what action may be taken next. The prompt 48 changes for each of the screen displays displayed on the touch-sensitive display 24.

Selection of the Send A Fax option by touching the Send A Fax button 52 begins the process of sending a facsimile message. This option permits the user to send one or more facsimile messages to designated recipients as well as the selection of various options related to sending a facsimile message. The Send a Fax option may involve the use of the numeric keypad 26 (see Figure 1) and a phonebook 62 (see Figure 2) that stores the telephone numbers of other IFAX of the same construction and prior art FAX machines. The user can select a stored cover page 64 for a facsimile message and may attach enclosures 66 such as a data file that will accompany the facsimile message, and can alter

settings 68 on the IFAX 10 associated with scanning a document, such as contrast.

Selection of the Mailbox option by touching the Mailbox button 54 allows the user to view and print received facsimile messages as well as modify  
5 outgoing facsimile messages. The Mailbox option uses an inbox 70 that stores received facsimile messages, and an outbox 72 that stores outgoing facsimile messages. The designation of inbox 70 and outbox 72 are terms easily understood by the user to describe documents waiting to be read (Inbox) and documents waiting to be transmitted (Outbox). The number of received  
10 facsimile messages and outgoing facsimile messages is updated on the touch-sensitive display 24.

Selection of the Toolbox option by touching the Toolbox button 56 allows the user to change both user and system settings, print reports or install, remove, or run IFAX Tool applications. The Toolbox option uses a setup control  
15 74 to alter the user and system settings, a reports control 76 to print reports on usage of the IFAX 10, and tool applications 78. Tool applications 78 will be explained in greater detail below.

Selection of the AutoKeys option by touching the AutoKeys button 58 allows the user to define or run macros. The Sign In option selected  
20 by touching the Sign In button 60 allows the user to log in with his particular password. When a user logs in, any previously altered user settings are updated. These features will be explained in greater detail below.

Operation of the IFAX 10 can be best understood in conjunction with the operational flowcharts of Figure 4A-4L. The main menu flowchart is  
25 shown in Figure 4A. As seen in Figure 4A, the IFAX detects a user input at step 1000. In decision 1002, the IFAX determines whether the Send Fax button was depressed. If the Send Fax button was depressed, the result of decision 1002 is YES, and the IFAX goes to the Send A Fax function in step 1004. If the Send Fax button was not depressed, the result of decision 1002 is NO, and in decision  
30 1006 the IFAX determines whether the Mailbox button was depressed. If the Mailbox button was depressed, the results of decision 1006 is YES and the IFAX 10 goes to the Mailbox function in step 1008. If the Mailbox button was not depressed, the result of decision 1006 is NO, and in decision 1010, the IFAX 10 determines whether the Toolbox button was depressed. If the Toolbox button  
35 was depressed, the result of decision 1010 is YES, and in step 1012 the IFAX 10 goes to the Toolbox function. If the Toolbox button was not depressed, the result of decision 1010 is NO, and in decision 1014 the IFAX 10 determines whether



the Autokeys button was depressed. If the Autokeys button was depressed, the result of decision 1014 is YES, and in step 1016 the IFAX 10 goes to the Autokeys function. If the Autokeys button was not depressed, the result of decision 1014 is NO, and in decision 1018 the IFAX 10 determines whether the  
5 Sign In button was depressed. If the Sign In button was depressed, the result of decision 1018 is YES, and in step 1020 the IFAX 10 goes to the Sign In function. If the Sign In button was not depressed, the result of decision 1018 is NO, and the IFAX 10 returns to step 1000.

The Send A Fax function flow chart is described in Figures 4B-4C.  
10 As seen in Figure 4B, the IFAX 10 displays a numeric keypad in step 1024. In step 1026, the IFAX 10 detects a user input. In decision 1028, the IFAX determines whether the detected input was from the numeric keypad. If the detected input was from the numeric keypad, the result of decision 1028 is YES, and in step 1030 the IFAX 10 stores the numeric keypad input. In decision 1032,  
15 the IFAX 10 determines whether the OK button was depressed. If the OK button was not depressed, the result of decision 1032 is NO, and the IFAX 10 returns to step 1026 to detect further user input. If the OK button was depressed, the result of decision 1032 is YES, and in decision 1034, the IFAX 10 determines whether the Send Now button was depressed. If the Send Now button was depressed, the  
20 result of decision 1034 is YES. In that event, in step 1036 the IFAX 10 sends the facsimile message. In step 1038 the IFAX 10 returns to the main menu function shown in Figure 4A. If the Send Now button was not depressed, the result of decision 1034 is NO and the IFAX 10 moves to decision 1056 in Figure 4C.

Returning momentarily to Figure 4B, if the detected user input is  
25 not from the numeric keypad, the result of decision 1028 is NO. In that event, in decision 1040, the IFAX 10 determines whether the Cancel button was depressed. If the Cancel button was depressed, the result of decision 1040 is YES, and in step 1042 the IFAX 10 returns to the main menu function of Figure 4A. If the Cancel button was not depressed, the result of decision 1040 is NO, and the  
30 IFAX 10 in decision 1044 determines whether the Phonebook button was depressed. If the Phonebook button was depressed, the result of decision 1044 is YES, and in step 1046 the IFAX 10 goes to the Phonebook function. If the Phonebook button was not depressed, the result of decision 1044 is NO, and in decision 1048 the IFAX determines whether the Name button was depressed. If  
35 the Name button was not depressed, the result of decision 1048 is NO and in decision 1050, the IFAX 10 determines whether the Letters button was depressed. If the Name button was depressed, the result of decision 1048 is

YES. Similarly, if the Letters button was depressed, the result of decision 1050 is YES. If the result of decision 1048 or decision 1050 is YES, in step 1052 the IFAX 10 displays a typewriter keyboard. If the Letters button was not depressed, the result of decision 1050 is NO, and in decision 1054 the IFAX 10 determines whether the Symbols button was depressed. If the Symbols button was depressed, the result of decision 1054 is YES, and in step 1056 the IFAX 10 displays the symbols keypad. If the Symbols button was not depressed, the result of decision 1054 is NO, and the IFAX 10 returns to step 1026 to detect further user input.

10 With reference to Figure 4C, in decision 1056 the IFAX 10 determines whether the Send Later button was depressed. If the Send Later button was depressed, the result of decision 1056 is YES, and in step 1058 the IFAX 10 instructs the user to select the desired transmission time. The IFAX 10 then returns to step 1026 to detect further user input. If the send later button was not depressed, the result of decision 1056 is NO, and in decision 1060 the IFAX 10 determines whether the Add Recipient button was depressed. If the Add Recipient button was depressed, the result of decision 1060 is YES, and in step 1062 the IFAX 10 instructs the user to add a facsimile recipient. Following step 1062, the IFAX 10 returns to step 1026 in Figure 4B, to detect further user input.

15 If the Add Recipient button was not depressed, the result of decision 1060 is NO, and in decision 1064, the IFAX 10 determines whether the Recipient List button was depressed. If the Recipient List button was depressed, the result of decision 1064 is YES and in step 1066, the IFAX 10 displays the Recipient List. If the Recipient List button was not depressed, the result of decision 1064 is NO, and in decision 1068 the IFAX 10 determines whether the Select Cover Page button was depressed. If the Select Cover Page button was depressed, the result of decision 1068 is YES, and in step 1070 the IFAX 10 instructs the user to select the desired cover page. Following step 1070, the IFAX 10 returns to step 1026, shown in Figure 4B, to detect further user input. If the Select Cover Page button was not depressed, the result of decision 1068 is NO and the IFAX 10, in decision 1072, determines whether the Enclose File button was depressed. If the Enclose File button was depressed, the result of decision 1072 is YES, and in step 1074 the IFAX 10 instructs the user to select and enclose a file. Following step 1074, the IFAX 10 returns to step 1026, shown in Figure 4B, to detect further user input. If the Enclose File button was not depressed, the result of decision 1072 is NO, and in step 1076, the IFAX 10 determines whether the Options button was depressed. If the Options button was depressed, the result of

decision 1076 is YES, and, in step 1078, the IFAX 10 goes to the Options function. If the Options button was not depressed, the result of decision 1076 is NO, and the IFAX 10 returns to step 1026, shown in Figure 4B, to detect further user input.

5           The Phonebook function flowchart is shown in Figure 4B. In step 1082, the IFAX 10 displays the phonebook on the touch-sensitive display 24. In step 1084, the IFAX 10 detects user input. In decision 1086, the IFAX determines whether the Public List button was depressed. If the Public List button was depressed, the result of decision 1086 is YES, and in step 1088, the  
10 IFAX 10 displays the public phonebook on the touch sensitive display 24. If the Public List button was not depressed, the result of decision 1086 is NO, and in decision 1090 the IFAX 10 determines whether the Index button was depressed. If the Index button was pressed, the result of decision 1090 is YES, and in step 1092, the IFAX 10 scrolls the phonebook to the location indicated by the Index  
15 button, and returns to step 1084 to detect further user input.

          If the Index button was not pressed, the result of decision 1090 is NO, and in decision 1094 the IFAX 10 determines whether the arrow keys have been depressed. If the arrow keys have been pressed, the result of decision 1094 is YES, and in step 1092 the IFAX 10 scrolls the phonebook in the direction  
20 opposite that indicated by the selected arrow keys. If the arrow keys were not depressed, the result of decision 1094 is NO, and in decision 1096 the IFAX determines whether the user selected an entry from the list displayed on the touch-sensitive display 24.

          If the user selected an entry, the result of decision 1096 is YES,  
25 and in step 1098 the IFAX 10 highlights the selected entry and moves to decision 1100. If the user has not selected an entry, the result of decision 1096 is NO, and the IFAX 10 moves to decision 1100. In decision 1100, the IFAX 10 determines whether the Edit button was depressed. If the Edit button was pressed, the result of decision 1100 is YES, and in decision 1102 the IFAX determines whether an  
30 entry was selected by the user. If an entry was selected by the user, the result of decision 1102 is YES, and in step 1104 the IFAX 10 goes to the Edit function. If an entry was not selected by the user, the result of decision 1102 is NO, and in step 1106 the IFAX 10 prints an error message and returns to step 1084 to detect further user input. If the Edit button was not pressed, the result of decision 1100  
35 is NO and in decision 1108, the IFAX 10 determines whether the Remove button was pressed. If the Remove button was pressed, the result of decision 1108 is YES and in decision 1100 the IFAX 10 determines whether an entry was

selected by the user. If an entry was selected by the user, the result of decision 1100 is YES, and in step 1112 the IFAX 10 removes the selected entry and returns to step 1084 to detect further user input. If an entry was not selected by the user, the result of decision 1110 is NO, and in step 1106, the IFAX 10 prints  
5 an error message and returns to step 1084 to detect further user input.

If the Remove button was not pressed, the result of decision 1108 is NO and in step 1114, the IFAX 10 determines whether the Cancel button was pressed. If the Cancel button was pressed, the result of decision 1114 is YES and in step 1116, the IFAX 10 goes to the main menu function. If the Cancel  
10 button was not pressed, the result of decision 1114 is NO and in decision 1118, the IFAX 10 determines whether the Okay button was pressed. If the Okay button was not pressed, the result of decision 1118 is NO and the IFAX 10 returns to step 1084 to detect further user input. If the Okay button was pressed, the result of decision 1118 is YES and the IFAX 10 goes to decision 1034 in  
15 Figure 4B to continue the process of sending a facsimile message.

The Mailbox Function Flowchart is described in Figures 4E - 4F. In step 1122, shown in Figure 4E, the IFAX 10 displays the In Box on the touch sensitive display 24. In step 1124, the IFAX 10 detects user input. In decision 1126, the IFAX determines whether the Menu button was pressed. If the Menu  
20 button was pressed, the result of decision 1126 is YES and in step 1128 the IFAX 10 goes to the Main Menu function. If the Menu button was not pressed, the result of decision 1126 is NO and in decision 1130, the IFAX 10 determines whether the Out Box button was pressed. If the Out Box button was pressed, the result of decision 1130 is YES and in step 1132 the IFAX 10 displays the Out  
25 Box and goes to step 1148, shown in Figure 4F, to detect user input.

If the Outbox button was not pressed, the result of decision 1130 is NO and in decision 1134, the IFAX 10 determines whether the user has selected a file from the list of files displayed on the touch sensitive display 24. If the user has selected a file, the result of decision 1134 is YES and in step 1136 the IFAX  
30 10 highlights the selected file. If the user did not select a file, the result of decision 1134 is NO and in decision 1138, the IFAX determines whether a function button was pressed. The function buttons include functions such as View, Print, Delete, Save, and Forward. If a function button was not pressed, the result of decision 1138 is NO and the IFAX 10 returns to step 1124 to detect  
35 further use input. If a function button was pressed, the result of decision 1138 is YES and in decision 1140, the IFAX 10 determines whether a file was selected by the user. If a file was not selected by the user, the result of decision 1140 is

NO and in step 1142, the IFAX 10 prints an error message and returns to step 1124 to detect further user input. If a file was selected by the user, the result of decision 1140 is YES and in step 1144, the IFAX 10 performs the selected function on the user selected file and returns to step 1124 to detect further user input.

As previously described, if the user had pressed the Outbox button, the result of decision 1130 is yes and in step 1132 the IFAX 10 displays the outbox and proceeds to step 1148, shown in Figure 4F, to detect further user input. As seen in Figure 4F, the IFAX 10 in decision 1150 determines whether the Menu button was pressed. If the Menu button was pressed, the result of decision 1150 is YES, and in step 1152 the IFAX 10 goes to the main menu function. If the Menu button was not pressed, the result of decision 1150 is NO, and in decision 1154 the IFAX 10 determines whether the Inbox button was pressed. If the Inbox button was pressed, the result of decision 1154 is YES, and in step 1156 the IFAX 10 displays the inbox and proceeds to step 1124, shown in Figure 4E, to detect further user input.

If the Inbox button was not pressed, the result of decision 1154 is NO, and in decision 1158 the IFAX 10 determines whether the user has selected a file. If the user has selected a file, the result of decision 1158 is YES and in step 1160, the IFAX 10 highlights the selected file. If the user has not selected a file, the result of decision 1158 is NO, and in decision 1162, the IFAX 10 determines whether a function button was pressed. The functions button associated with the outbox include View, Print, Cancel Fax, Edit, and Redial. If a function button was not selected, the result of decision 1162 is NO, and the IFAX 10 returns to step 1148 to detect further user input.

If a function button was selected, the result of decision 1162 is YES, and in decision 1164 the IFAX 10 determines whether a file was previously selected by the user. If a file was not selected by the user, the result of decision 1164 is NO, and in step 1166 the IFAX 10 prints an error message and returns to step 1148 to detect further user input. If a file was previously selected by the user, the result of decision 1164 is YES, and in step 1168 the IFAX 10 performs the selected function on the user selected file and returns to step 1148 to detect further user input.

The Toolbox function flowchart is shown in Figures 4G-4I. In step 1172, shown in Figure 4D, the IFAX 10 displays the setup toolbox. In step 1174, the IFAX detects user input. In decision 1176, the IFAX 10 determines whether the menu button has been pressed. If the menu button has been pressed,

the result of decision 1176 is YES and in step 1178 the IFAX 10 goes to the main menu function. If the menu button was not pressed, the result of decision 1176 is NO, and in decision 1180 the IFAX 10 determines whether the Reports button was pressed. If the Reports button was pressed, the result of decision  
5 1180 is YES, and the IFAX 10 goes to step 1206 shown in Figure 4H. If the Reports button was not pressed, the result of decision 1180 is NO, and in decision 1182 the IFAX 10 determines whether the Tools button was pressed. If the Tools button was pressed, the result of decision 1182 is YES, and the IFAX 10 goes to step 1234 shown in Figure 4I.

10 If the Tools button was not pressed, the result of decision 1182 is NO, and in decision 1184 the IFAX 10 determines whether the user has selected an entry. If the user has selected an entry, the result of decision 1184 is YES, and in step 1186 the IFAX 10 highlights the selected entry. If the user has not selected an entry, the result of decision 1184 is NO, and in decision 1188 the  
15 IFAX 10 determines whether the Change button was pressed. If the change button was not pressed, the result of decision 1188 is NO and the IFAX 10 returns to step 1174 to detect further user input. If the Change button was pressed, the result of decision 1188 is YES, and in decision 1190 the IFAX 10 determines whether the user has previously selected an entry. If the user has not  
20 previously selected an entry, the result of decision 1190 is NO, and in step 1192 the IFAX 10 prints an error message and returns to step 1174 to detect further user input.

If an entry was previously selected by the user, the result of decision 1190 is YES, and in decision 1194 the IFAX 10 determines whether the  
25 System Settings button is selected. If the Systems Settings button was not selected, the result of decision 1194 is NO, and in step 1196 the IFAX 10 changes the selected parameter and returns to step 1174 to detect further user input. If the System Settings button was selected, the result of decision 1194 is YES, and in decision 1198 the IFAX 10 detects a user entry of an access code.  
30 In decision 1200, the IFAX 10 determines whether the access code is that of an authorized user. If the access code is that of an authorized user, the result of decision 1200 is YES, and the IFAX 10 goes to step 1196 to change the selected parameter and returns to step 1174 to detect further user input. If the access code is not that of an authorized user, the result of decision 1200 is NO, and in step  
35 1202 the IFAX 10 denies access to system settings, and returns to step 1174 to detect further user input.

As previously described, if the Reports button was pressed, the result of decision 1180 is YES, and the IFAX 10 moves the step 1206 in Figure 4H. In step 1206, shown in Figure 4H, the IFAX 10 displays the reports toolbox. In step 1208, the IFAX 10 detects user input. In decision 1210, the IFAX 10  
5 determines whether the Menu button was pressed. If the Menu button was pressed, the result of decision 1210 is YES, and in step 1212 the IFAX 10 goes to the main menu function. If the Menu button was not pressed, the result of decision 1210 is no, and in decision 1214 the IFAX 10 determines whether the Setup button was pressed. If the Setup button was pressed, the result of decision  
10 1214 is YES and in step 1216 the IFAX 10 displays the setup toolbox and returns to step 1174, shown in Figure 4G, to detect further user input. If the Setup button was not pressed, the result of decision 1214 is NO, and in decision 1218 the IFAX 10 determines whether the Tools button was pressed.

If the Tools button was pressed, the result of decision 1218 is YES,  
15 and the IFAX 10 moves to step 1234, shown in Figure 4I. If the Tools button was not pressed, the result of decision 1218 is NO, and in decision 1220 the IFAX 10 determines whether the user has selected a report. If the user has selected a report, the result of decision 1220 is YES and in step 1222 the IFAX 10 highlights the selected report. If the user has not selected a report, the result  
20 of decision 1220 is NO, and in decision 1224 the IFAX 10 determines whether the Print button has been pressed. If the Print button has not been pressed, the result of decision 1224 is NO, and the IFAX 10 returns to step 1208 to detect further user input. If the Print button was pressed, the result of decision 1224 is YES, and in decision 1226 the IFAX 10 determines whether the user has  
25 previously selected a report. If the user has not previously selected a report, the result of decision 1226 is NO, and in step 1228 the IFAX 10 prints an error message and returns to step 1208 to detect further user input. If the user has previously selected a report, the result of decision 1226 is YES, and in step 1230 the IFAX 10 prints the selected report and returns to step 1208 to detect further  
30 user input.

If the Tools button had been pressed by the user, the result of decision 1182 or decision 1218 is YES, and the IFAX 10 moves to step 1234, shown in Figure 4I. In step 1234, the IFAX 10 displays the toolbox tools. In step 1236, the IFAX 10 detects user input. In decision 1238, the IFAX 10  
35 determines whether the Menu button has been pressed. If the menu button has been pressed, the result of decision 1238 is YES, and in step 1230 the IFAX 10 goes to the Main Menu function. If the Menu button was not pressed, the result

of decision 1238 is NO, and in decision 1242 the IFAX 10 determines whether the Setup button was pressed. If the Setup button was pressed, the result of decision 1242 is YES and in step 1244 the IFAX 10 displays the setup toolbox, and returns to step 1174, shown in Figure 4G, to detect further user input. If the  
5 Setup button was not pressed, the result of decision 1242 is NO, and in decision 1246 the IFAX 10 determines whether the user has selected an application. If the user has selected an application, the result of decision 1246 is YES, and the IFAX 10 highlights the selected application in step 1248. If the user has not selected an application, the result of decision 1246 is NO, and in decision 1250  
10 the IFAX 10 determines whether the Install New button has been pressed.

If the Install New button has been pressed, the result of decision 1250 is YES, and in step 1252 the IFAX 10 installs the new application and returns to step 1234 to display the toolbox with the new application. If the Install New button was not pressed, the result of decision 1250 is NO, and in decision  
15 1254 the IFAX 10 determines whether the Remove button has been pressed. If the remove button has been pressed, the result of decision 1254 is YES, and in decision 1256 the IFAX 10 determines whether an application has previously been selected by the user. If an application has been previously selected by the user, the result of decision 1256 is YES, and in step 1258 the IFAX 10 removes  
20 the selected application and returns to step 1234 to display the toolbox with the removed application no longer shown on the touch-sensitive display 24. If an application has not been previously selected by the user, the result of decision 1256 is NO, and in step 1260 the IFAX 10 prints an error message and returns to step 1236 to detect further user input. If the Remove button was not pressed, the  
25 result of decision 1254 is NO, and in decision 1262 the IFAX 10 determines whether the Start button has been pressed. If the Start button has not been pressed, the result of decision 1262 is NO, and the IFAX 10 returns to step 1236 to detect further user input. If the Start button has been pressed, the result of decision 1262 is YES, and in decision 1264 the IFAX 10 determines whether an  
30 application has previously been selected by the user. If an application has not been previously selected by the user, the result of decision 1264 is NO, and in step 1260 the IFAX 10 prints an error message and returns to step 1236 to detect further user input. If an application has been previously selected by the user, the result of decision 1264 is YES, and in step 1266 the IFAX 10 executes the  
35 selected application, and returns to step 1236 to detect further user input.

The AutoKey function flowchart is described in Figure 4J. In step 1270, the IFAX 10 displays the AutoKey menu. In step 1272, the IFAX 10



detects user input. In decision 1274, the IFAX 10 determines whether the Cancel button was pressed. If the Cancel button was pressed, the result of decision 1274 is YES, and in step 1276 the IFAX 10 goes to the main menu function. If the Cancel button was not pressed, the result of decision 1274 is NO, and in decision 5 1278 the IFAX 10 determines whether the user has selected a function. If the user has selected a function, the result of decision 1278 is YES, and in step 1280 the IFAX 10 highlights the selected function. If the user has not selected a function, the result of decision 1278 is NO, and in step 1282 the IFAX 10 determines whether the Start button has been pressed. If the Start button has 10 been pressed, the result of decision 1282 is YES, and in decision 1284 the IFAX 10 determines whether a function has previously been selected by the user. If a function has been previously selected by the user, the result of decision 1284 is YES, and in step 1286 the IFAX 10 executes the selected function and returns to step 1272 to detect further user input. If a function has not been previously 15 selected, the result of decision 1284 is NO, and in step 1288 the IFAX 10 prints an error message and returns to step 1272 to detect further user input.

If the Start button was not pressed, the result of decision 1282 is NO, and in decision 1290 the IFAX 10 determines whether the Remove button was pressed. If the Remove button was pressed, the result of decision 1290 is 20 YES, and in decision 1292 the IFAX 10 determines whether a function has previously been selected by the user. If a function has been previously selected by the user, the result of decision 1292 is YES, and in step 1294 the IFAX 10 removes the selected function and returns to step 1272 to detect further user input. If a function has not been previously selected by the user, the result of 25 decision 1292 is NO, and in step 1288 the IFAX 10 prints an error message and returns to step 1272 to detect further user input.

If the Remove button has not been pressed, the result of decision 1290 is NO, and in decision 1296 the IFAX 10 determines whether the Record button has been pressed. If the Record button has not been pressed, the result of 30 decision 1296 is NO, and the IFAX 10 returns to step 1272 to detect further user input. If the Record button has been pressed, the result of decision 1296 is YES, and in step 1298 the IFAX 10 goes to the main menu function. In step 1300, the IFAX 10 records all subsequent steps entered by the user. In decision 1302, the IFAX 10 determines whether a Stop button has been pressed by the user. If the 35 Stop button has not been pressed, the result of decision 1302 is NO, and the IFAX 10 returns to step 1300 to continue recording steps entered by the user. If the user has pressed the Stop button, the result of decision 1302 is YES, and in

step 1304 the IFAX 10 stores the sequence as an AutoKey function and returns to step 1272 to detect further user input.

The Sign In function flowchart is described in Figure 4K. In step 1308, the IFAX 10 displays a user list. In step 1310, the IFAX 10 detects user input. In decision 1312, the IFAX 10 determines whether the Cancel button was pressed. If the Cancel button was pressed, the result of decision 1312 is YES, and in step 1314 the IFAX 10 goes to the Main Menu function. If the Cancel button was not pressed, the result of decision 1312 is NO, and in decision 1316 the IFAX 10 determines whether the user has selected a name from the list displayed on the touch-sensitive display 24. If the user has not selected a name, the IFAX 10 returns to step 1310 to detect further user input.

If the user has selected a name from the list displayed on the touch-sensitive display 24, the result of decision 1316 is YES, and in step 1318 the IFAX 10 detects user password input. In decision 1320, the IFAX 10 determines whether the user has entered the correct password. If the user has not entered the correct password, the result of decision 1320 is NO, and in step 1322 the IFAX 10 denies access to the functions available on the IFAX, and returns to step 1310 to detect further user input. If the user has entered the correct password, the result of decision 1320 is YES, and in step 1324 the IFAX 10 logs in the user. In step 1326, the IFAX 10 loads the personal settings previously selected for that particular user. Personal settings may include display of a personal phonebook, selection of a personal facsimile cover page style, selection of initial screens and settings. Following step 1326, the IFAX 10 in step 1328 goes to the Main Menu function. The Main Menu function now indicates the user who has been logged into the IFAX 10. The Main Menu function also includes a Sign Out key in place of the Sign In key previously described in Figure 4A. In decision 1330, the IFAX 10 determines whether the Sign Out button has been pressed. If the Sign Out button has not been pressed, the result of decision 1330 is NO, and the IFAX 10 returns to step 1328 and the Main Menu function. From the Main Menu function, the user may select any of the facsimile functions available on the IFAX 10, as previously described. If the Sign Out button has been pressed, the result of decision 1330 is YES, and in step 1332 the IFAX 10 logs out the particular user and returns to step 1328 in the Main Menu function.

The description of the Send A Fax option is best understood in conjunction with the flowchart of Figures 4B-4C and the screen displays of Figures 5 to 7. When the user selects the Send a Fax option by touching the Send A Fax button 52, the IFAX 10 changes the touch-sensitive display 24 to the

display of Figure 5. As shown in Figure 5, the IFAX 10 displays a numeric keypad 80 on the touch-sensitive display 24 or the optional hardware numeric keypad 26 (see Figure 1). The optional hardware numeric keypad 26 contains a plurality of numbered buttons corresponding to the numeric keypad 80 displayed on the touch-sensitive display 24. The numeric keypad 80 operates in the same manner as the optional hardware numeric keypad 26.

A "Numbers" button 82 on the touch-sensitive display 24 is shown in a depressed position to indicate that the numeric keypad 80 is selected. The IFAX 10 selects the numbers button 82 as the default display because the most common user action is to enter a facsimile telephone number of a facsimile recipient. The prompt 48 at the top of the touch-sensitive display 24 instructs the user to enter a facsimile telephone number. The user enters the telephone number of the FAX machine to which a facsimile message will be sent (*i.e.*, a facsimile recipient) using the numeric keypad 80 on the touch-sensitive display 24 or the optional hardware numeric keypad 26 and presses an OK button 99. Alternatively, the user may enter the name of the person or company as the facsimile recipient. The user may cancel the facsimile telephone number selection at any time and return to the main menu shown in the screen display of Figure 3 by pressing a "Cancel" button 98.

If the user elects to enter the name of the facsimile recipient, the user selects a "Letters" button 84 on the touch-sensitive display 24. The IFAX 10 displays a typewriter style keyboard 86 on the touch-sensitive display 24, as shown in Figure 6, if the Letters button 84 is selected. Note that the Letters button 84 is now shown in the depressed position to indicate that the typewriter keyboard 86 is selected. Alternatively, the user may depress a "Fax Number" button 88 indicator or a "Name" button 90 on the touch-sensitive display 24 to select the numeric keypad 80 and the typewriter keyboard 86, respectively. The IFAX 10 recognizes either the Fax number or the Name as a valid selection of the facsimile recipient. Thus, the IFAX 10 is designed to permit the user to select options by a variety of different techniques, some of which are redundant, for the sake of simplifying operation by the user.

The user may also select a "Symbols" button 92 to enter symbols such as parentheses. The touch-sensitive display 24 displays a symbols keypad 94, shown in Figure 7, when the Symbols button 92 is selected. Note that the Symbol button 92 is shown in the depressed position in Figure 7 to indicate that the symbols keypad 94 has been selected.

A "Clear" button 96 may be used as a backspace to delete the previous digit in any of the displays of Figures 5 to 7. The user can cancel the entire selection process by pressing the Cancel button 98. The IFAX 10 will cancel the Send a Fax option 52 and return to the main menu shown in the screen display of Figure 3.

When preparing to send a facsimile message, the user may not recall the facsimile number or name of the facsimile recipient. The IFAX 10 uses the phonebook 62 (see Figure 2) to store a plurality of facsimile telephone numbers and names. The phonebook 62 is selected by depressing and releasing a "Phonebook" button 100 on the touch-sensitive display 24, shown in Figure 5. When the phonebook 62 is selected, the IFAX 10 changes to the screen display of Figure 8 on the touch-sensitive display 24. The operational flowchart of the phonebook 62 has been previously described in connection with Figure 4D.

The phonebook 62 contains an index 102 that allows the user to quickly move to the desired portion of the phonebook. In the example shown in Figure 8, the index 102 divides the phonebook 62 into five alphabetical portions, covering A-E, F-I, J-O, P-T, and U-Z, respectively. The index 102 can be divided into any desired number of portions for the convenience of the user. The user selects a portion of the phonebook 62 by selecting the corresponding portion of the index 102. Alternatively, the user may use a pair of arrow keys 104 to scroll up or down through the phonebook 62 in a well-known manner. The prompt 48 instructs the user to touch the desired names listed on the touch-sensitive display 24 and press an "OK" button 105 to indicate acceptance of the selection. The user selects the desired name and facsimile phone number from the phonebook 62 by touching the desired entry from the list displayed on the touch-sensitive display 24 in the manner described above. The user may cancel the selection process, and return to the main menu shown in the screen display of Figure 3, by pressing the Cancel button 98, as previously described.

The user may enter new names and numbers by selecting a "New" button 108. The IFAX 10 changes the prompt 48 to instruct the user to enter the new individual name, facsimile number, company name, voice number, and street address. Alternatively, the user may edit an existing entry in the phonebook 62 by selecting the entry to be edited and selecting an "Edit" button 110. The IFAX 10 changes the prompt 48 to instruct the user to edit the selected entry in the phonebook 62. The user may also remove an entry from the phonebook 62 by selecting the entry to be removed and selecting a "Remove" button 112. The IFAX 10 displays a message for the user to confirm the

deletion. If the user confirms the deletion, the IFAX 10 removes the selected entry and returns to the screen display of Figure 8.

When the user has selected an entry from the phonebook 62 or entered a name or facsimile number, the IFAX 10 automatically switches to the  
5 next menu to complete the transmission of the facsimile message. The touch-sensitive display 24 changes to the screen display shown in Figure 9. The IFAX 10 changes the prompt 48 to indicate to the user what facsimile telephone number has been selected by the user. The user presses a "Send Now" button 120, or a "Send Later" button 122 to select the desired time for facsimile  
10 transmission. The user may wish to send an important facsimile message immediately without regard to the cost for sending the facsimile message. Alternatively, the user may elect to delay sending the facsimile message until a later time, such as late at night when the telephone rates have decreased.

If the user selects the Send Now button 120, the IFAX 10 changes  
15 the touch-sensitive display 24 to that of Figure 11. The user confirms that the facsimile message should be sent immediately by selecting a "Continue" button 144. Alternatively, the user may stop the facsimile transmission by selecting a "Stop" button 142. The prompt 48 in Figure 11 uses a well-known symbol indicating that all is well with the IFAX 10.

20 If the user selects the Send Later button 122 (see Figure 9), the IFAX 10 changes the touch-sensitive display 24 to that shown in the screen display of Figure 12. The user presses a "Choose Time" button 146 to enter the desired transmission time, or a "Use Discount Rates" button 148 to use the discount telephone rates to determine the transmission time. The user can select  
25 the transmission time by pressing one of a pair of time set arrows 150 and the time display indicators. For example, the user can change "PM" to "AM" by simply touching an AM/PM button 152. Similarly, the hour can be changed by touching an hour button 153 and the time set arrows 150. The user can save the selected time as a default time by pressing a "Save as Default" button 154. The  
30 facsimile message is stored in the IFAX 10 along with the user-specified transmission time. The user may cancel the Send Later option and return to the menu shown in Figure 9 by pressing a "Cancel" button 156. The prompt 48 instructs the user to set the desired transmission time and touch a "Start" button 157. Thus, the prompt 48 provides simple instructions to the user that are menu  
35 dependent and allow a user with little or no training to select from the various options available on the IFAX 10. The prompt 48 is tailored to the particular options available on the IFAX 10.

The IFAX 10 can be configured to print a confirmation report when a facsimile message is transmitted. The confirmation report is printed immediately following the actual transmission of the facsimile message, whether the user presses the Send Now button 12 on the Send Later button 122.

5       The user may also add another recipient by selecting an "Add Recipient" button 124 (see Figure 9). Selecting the Add Recipient button 124 will return the user to the menu shown in Figure 5 and the prompt 48 instructs the user to enter the facsimile telephone number and name of the new facsimile recipient.

10       The user can review the entire list of recipients by pressing a "Recipient List" button 140 (see Figure 9). Selecting the Recipient List button 140 will cause the IFAX 10 to change the contents of the touch-sensitive display 24 to the screen display shown in Figure 10. The prompt 48 changes to indicate that a facsimile recipient telephone number has been selected. The user  
15       may add recipients manually using the Add Recipient button 124, or from the phonebook 62 by the selecting an "Add From Phonebook" button 139. The user may edit any facsimile recipient information by selecting the desired facsimile recipient and selecting an "Edit" button 134. The user may also remove a facsimile recipient from the list by selecting the desired facsimile recipient and  
20       pressing a "Remove" button 136. The user may add carbon copy (Cc) recipients by selecting a "Cc" button 138.

Returning now to Figure 9, the user may specify a facsimile cover page by pressing a "Select Cover Page" button 126. If the user presses the Select Cover Page button 126, the IFAX 10 changes to the screen display of Figure 13.  
25       The prompt 48 instructs the user to fill out the cover page. The user enters data into the appropriate portions of the touch-sensitive display 24. If the user presses a "Cover Style" button 160, a "Subject" button 161, or a "Comments" button 163, the IFAX 10 displays the typewriter keyboard 86 such as shown in Figure 6 on the touch-sensitive display 24, and the prompt 48 instructs the user to fill in the  
30       appropriate information. Similarly, if the user presses a "Number of Pages" button 165, the IFAX 10 displays the numeric keypad 80 such as shown in Figure 5 on the touch-sensitive display 24, and the prompt 48 instructs the user to fill in the appropriate information. The user can save this information as default values by selecting the Save as Default button 154 previously described.  
35       The user may cancel the selection process at any time and return to the menu shown in the screen display of Figure 9 by pressing the Cancel button 156. The user presses the OK button 158 to verify that the data entered is correct. The

user may also select a Facsimile cover page style from a list of stored facsimile cover pages by selecting the "Cover Style" button 160. The cover pages are stored in the memory 14 or the file storage unit 28 for future use.

In response to the selection of the Cover Style button 160, the IFAX 10 changes to the display of Figure 14 where a list of stored digital images of facsimile cover pages is displayed on the touch-sensitive display 24. The prompt 48 instructs the user to select the cover style. The stored facsimile cover pages are digital cover pages that can be customized for particular facsimile recipients or for particular facsimile messages. The IFAX 10 can store a plurality of digitized cover pages in the file storage unit 28 (see Figure 1). The user may create digitized cover pages in any number of manners well known to those skilled in the art. For example, the user could use the Microsoft® PaintBrush™ program to create a digital cover page. The user-created cover page is stored in the memory 14 or the file storage unit 28 and is added to the list of cover page styles shown in Figure 14. The digital cover page is stored in the form of a bit-map. The bit-map can be compressed by any number of well-known data compression routines in order to save space in memory 14 or the file storage unit 28. The user selects one of the facsimile cover pages from the list of Figure 14 by touching the touch-sensitive display 24 at the location where the desired facsimile cover page style is listed. If the list of facsimile cover pages exceeds the number that can be displayed at one time, the user may use the arrow keys 104 to scroll the list in the desired direction. When the user selects the desired facsimile cover page by touching one of the cover pages listed on the touch-sensitive display 24, the selection is verified by pressing the OK button 158. The user may also cancel the selection process at any time and return to the menu shown in the screen display of Figure 13 by pressing the Cancel button 156.

Returning again to the display of Figure 9, the user may also enclose one or more data files with the outgoing facsimile message by pressing an "Enclose A File" button 128. The enclosed data file may be any data file such as a word processor data file or a spreadsheet data file. The data file is typically stored in the file storage unit 28. When the user selects the Select A File button 128, the IFAX 10 changes to the display of Figure 15. The prompt 48 instructs the user to select the data file(s) to be transmitted as part of the facsimile message. In the screen display of Figure 15 no data files are enclosed. If data files are enclosed, they would be listed on the screen display of Figure 15. The user can remove a data file from the enclosure list, selecting the desired data file

by touching the one or more files listed on the touch-sensitive display 24, then pressing the Remove button 136 as previously described in connection with Figure 10.

The user may select a data file to enclose by pressing a "Select  
5 Files" button 164, which causes the IFAX 10 to change to the display of Figure 16. The prompt 48 instructs the user to select a file from one of the folders listed on the touch-sensitive display 24. The user can cancel the enclosure selection process by pressing the Cancel button 156, which causes the IFAX 10 to return to the menu shown in the screen display of Figure 15. In  
10 Figure 16, the folders shown are the inbox 70 (see Figure 2), where incoming facsimiles are stored by the IFAX 10, a floppy disk or other file storage unit 28 (see Figure 1), or special attachments. The user may touch one of the folders to open that folder and display the contents of the selected folder.

For example, the user can open the inbox 70 (see Figure 2) and  
15 display the files enclosed in the inbox by touching the inbox folder display location on the touch-sensitive display 24. The user selects a data file from the inbox 70 and encloses the selected file by pressing an "Enclose" button 170. This causes the IFAX 10 to return to the menu shown in the screen display of Figure 15 which shows the enclosed data file in the list displayed on the touch-  
20 sensitive display 24. The enclosed data file may be a binary data file or a scanned facsimile message stored in the well-known MH, MR, or MMR data formats used in Group 3 FAX machines. Thus, the IFAX 10 allows the user to easily attach a data file to the facsimile message. The user can close the select enclosure menu of Figure 15 by pressing a "Close" button 166. Pressing the  
25 Close button 166 causes the IFAX 10 to return to the menu shown in the screen display of Figure 9 so that the user can complete the process of sending the facsimile message.

Returning again to the display of Figure 9, the user can also set other option parameters by selecting a "Set Other Options" button 130. In  
30 response to the selection of the Set Other Options button 130, the IFAX 10 changes to the screen display shown in Figure 17. The prompt 48 instructs the user to select the parameters that the user wishes to change. The user selects the desired option by touching the desired option listed on the touch-sensitive display 24 and selecting a "Change" button 172. As seen in Figure 17, the user  
35 can alter scanner settings by selecting a "Scanner Settings" display location 176, the security settings by selecting a "Security Settings" display location 178, the department code settings by selecting a "Department Code" display location 180,



and the miscellaneous settings by selecting a "Miscellaneous" display location 182. It is obvious that the options presented herein are merely illustrative of the types of options that could be included in the menus. Other options could be added or revised to fit the particular needs of the user.

5           If the user selects the Change button 172 without first selecting a category to change, the IFAX 10 displays an error message, shown in the screen display of Figure 18, which instructs the user to first select a category to modify, then press the Change button 172. Thus, the IFAX 10 instructs the user when in  
10 inappropriate selection has been made. These instructions allow the user to easily recover from an error. In prior art FAX machines, the user may not be aware that an error has been made. Furthermore, the user is unlikely to recover from the error in such an easy manner on a prior art FAX machine. Typically, the user would have to start the entire process over again and hope that the error is not repeated. This lack of error recovery often leads to frustration of the user  
15 and subsequent intimidation of the user by the complicated process of sending a facsimile message. In contrast, the user friendly environment created by the IFAX 10 leads the user through a complex list of options and provides instructions to the user in the proper operation of the IFAX. The IFAX 10 also permits the user to send and receive facsimile messages without the selection of  
20 the sophisticated options and capabilities that the FAX machine may possess.

The Scanner Settings display location 176 shown in the screen display of Figure 17 allows the user to select settings such as resolution and contrast. If the user selects the Scanner Setting display location 176 and presses the Change button 172 the IFAX 10 changes to the display shown in Figure 19.  
25 The prompt 48 instructs the user to change the scanner settings and press the OK button 158. The user changes the settings by selecting any of the options shown in Figure 19 using the corresponding buttons. The user selects the desired setting and then presses the "OK" button 158 to confirm the choices. The user may save the selected options as default values by pressing the Save As Default button  
30 156. The user may also cancel the selection of scanner settings at any time by selecting the Cancel button 154. This cause the IFAX 10 to return to the menu shown in the screen display of Figure 17.

The Security Settings display location 178 shown in the screen display of Figure 17 allows the user to select options such as data encryption or  
35 authentication. If the user selects the Security Settings display location 178 and presses the Change button 172, the IFAX 10 changes to the screen display shown in Figure 20. The touch-sensitive display 24 shows which options are currently

selected, and the prompt 48 instructs the user to select security options and press the OK button 158. Options that have previously been selected may be deselected by touching the corresponding button and selecting the OK button 156. The IFAX 10 permits encryption of a facsimile message by selecting an  
5 "Encryption" button 190. In addition, the IFAX 10 permits the transmission of a digital signature by selecting a "Digital Signature" button 192, and an authentication option by selecting an "Authentication" button 194. The digital signature causes the IFAX 10 to transmit a checksum or other data portion in encrypted form along with the encrypted facsimile message. The digital  
10 signature allows the receiving facsimile machine to determine if the facsimile message has been tampered with during transmission. The authentication option attaches an instruction to the facsimile message requiring a password to be entered into the recipient facsimile machine for the facsimile recipient to read the facsimile message. Thus, there are varying degrees of security that may be  
15 easily selected by the user. The user may save the selected options as default values by selecting the Save As Default button 154. The user may also cancel the selection of security settings at any time by selecting the Cancel button 156. This cause the IFAX 10 to return to the menu shown in the screen display of Figure 17.

20 With reference to Figure 17, the Department Code display location  
~~180 allows the user to enter a department code. If the user selects the~~  
Department Code display location 180 and presses the Change button 172, the IFAX 10 changes to the screen display shown in Figure 21. The prompt 48 instructs the user to press a "Department Code" button 196 to enter the  
25 department code. The user enters the appropriate information and presses the "OK" button 158 to confirm the choice. The user may save the selected choices as default values by pressing the Save As Default button 154. The user may also cancel the selection of department code settings at any time by pressing the Cancel button 156. This cause the IFAX 10 to return to the menu shown in the  
30 screen display of Figure 17.

With reference to the screen display of Figure 17, the Miscellaneous display location 182 allows the user to select miscellaneous options such as sending from memory and including a fax header on the facsimile message. If the user selects the Miscellaneous display location 182 and  
35 presses the Change button 172, the IFAX 10 changes to the screen display shown in Figure 22. The prompt 48 instructs the user to select the desired options. The user can send a facsimile message from memory by pressing a "Send From

Memory" button 200. The user can also elect to include a header, number the pages, print a confirmation report on the IFAX 10, and enable turnaround polling by pressing an "Include Fax Header" button 202, a "Number Pages" button 204, a "Print Confirmation Report" button 206, and a "Turnaround Polling" button 5 208, respectively. The user selects the desired options and then presses the "OK" button 158 to confirm the choices. The user may save the selected options as default values by selecting the Save As Default button 154. The user may also cancel the selection of miscellaneous settings at any time by selecting the Cancel button 156. This cause the IFAX 10 to return to the menu shown in the screen 10 display of Figure 17.

Most of the miscellaneous options described above are self-explanatory. The Turnaround polling option causes the IFAX 10 to send a facsimile message to the facsimile recipient FAX machine and then inquire whether there any facsimile messages that are to be sent to the IFAX 10 from the 15 facsimile recipient FAX machine. If there are messages to be sent to the IFAX 10, the IFAX can receive these messages during the same telephone call thus minimizing both the time and cost for facsimile communication.

Thus, the IFAX 10 permits an untrained user to easily select from among the many options available on a facsimile machine to send a facsimile 20 message. The user can select the transmission time, enclose files, add stored digital cover pages, and use a sophisticated phonebook system to select recipients for the facsimile message. ~~The prompt 48 provides step-by-step~~ instructions and the screen displays allow the easy selection of options.

The IFAX 10 also provides for a simple user interface to permit the 25 user to retrieve facsimile messages received by the IFAX, and to edit stored outgoing facsimile messages that are to be sent at a later time. Returning now to the main menu shown in the screen display of Figure 3, the Mailbox button 54 allows the user to select the mailbox options. As seen in Figure 3, the IFAX 10 updates the touch-sensitive display 24 to show the number of messages 30 contained in the inbox 70 and the outbox 72. Thus, the user can determine at a glance whether there are any facsimile messages without having to actually use the mailbox features.

When the user presses the Mailbox button 54, the IFAX 10 changes to the display of Figure 23 which displays the features of the inbox 70. 35 The Mailbox function has been previously described in connection with the operational flowchart of Figures 4E-4F. The Mailbox icon, which is part of the prompt 48, provides the user with a simple indication that the user is using the

Mailbox function. The user may change to the outbox 72 by selecting an "Outbox" button 212 on the touch-sensitive display 24. The user can return to the main menu shown in the screen display of Figure 3 by pressing a "Menu" button 132. When the IFAX 10 is in the inbox 70, it display a list of all received facsimile messages on the touch-sensitive display 24. The list includes the sender and current status of each facsimile message. If the number of received facsimile messages exceeds the capacity of the touch-sensitive display 24, the user can scroll through the list using the arrow keys 104 in the manner previously described. The prompt 48 instructs the user to select the desired Mailbox activity. The user may view any of the received facsimile messages, selecting the desired message by touching one of the facsimile messages listed on the touch-sensitive display 24 and pressing a "View" button 214. The user may print any facsimile message, selecting the desired facsimile message by touching the facsimile message listed on the touch-sensitive display 24, and selecting a "Print" button 216. A facsimile message may be deleted from the inbox 70 by selecting the desired facsimile message and pressing a "Delete" button 218. The user may save a facsimile message by selecting the desired facsimile message and pressing a "Save" button 220. The user may also forward any facsimile message by selecting the desired facsimile message and pressing a "Forward" button 222.

If the user has selected a facsimile message and pressed the View button 214, the IFAX 10 will display the contents of the selected received facsimile message on the touch-sensitive display 24. A typical display of a selected received facsimile message is shown in Figure 24. The prompt 48 provides the user with status information such as the sender's name. The touch-sensitive display 24 includes an information box 226 showing the current page being displayed and the total number of pages in the facsimile message. The user can move back and forth through the facsimile message one page at a time by pressing one of a pair of arrow keys 228. The user can print a selected page by pressing a "Print Page" button 230, or may print the entire method by pressing a "Print Message" button 232. The user may close the viewing menu shown in Figure 24 by pressing a "Close" button 234. This causes the IFAX 10 to return to the menu shown in the screen display of Figure 23.

Returning now to Figure 23, the user may print a facsimile message by selecting the desired facsimile message in a manner previously described and pressing the Print button 216. If the user has selected a facsimile message and pressed the print button 216, the IFAX 10 changes to the menu shown in the screen display of Figure 25. The prompt 48 indicates that the IFAX

10 is operating satisfactorily. The IFAX 10 displays a message on the touch-sensitive display 24 to indicate that a facsimile message or messages are being printed. The user may stop the printing procedure by pressing a "Stop" button 240. The user may perform other facsimile procedures by pressing a "Continue" button 242. Pressing either the "Stop" button 240 or the Continue button 242 causes the IFAX 10 to return to the menu shown in the screen display of Figure 23.

Again, returning now to Figure 23, the user may delete a facsimile message by selecting the desired facsimile message and pressing the Delete button 218. This causes the IFAX to change to the screen display shown in Figure 26. The IFAX 10 displays a message to the user to verify that a facsimile message should be deleted from the inbox 70. The user can confirm deletion of the facsimile message by pressing a "Yes" button 246, or may cancel the deletion process by pressing a "No" button 248. Pressing either the Yes button 246 or the No button 248 causes the IFAX 10 to return to the menu shown in the screen display of Figure 23. The IFAX 10 updates the list displayed on the touch-sensitive display 24 so that deleted facsimile messages are no longer displayed.

The user may save a facsimile message by selecting the desired facsimile message and pressing the Save button 220 shown in Figure 23. This causes the IFAX 10 to change to the screen display shown in Figure 27. As seen in Figure 27, the IFAX 10 displays a message on the touch-sensitive display 24 indicating that the selected facsimile message is being saved to disk. The user may stop the process of saving a message to disk by pressing the Stop button 240, or may perform other facsimile operations by pressing the Continue button 242, as previously described. Pressing either the Stop button 240 or the Continue button 242 causes the IFAX to return to the menu shown in the screen display of Figure 23.

The user may forward a facsimile message to another FAX machine by selecting the desired facsimile message and pressing the Forward button 222 shown in Figure 23. This causes the IFAX 10 to switch to the screen display shown in Figure 28. As seen in Figure 28, the IFAX 10 displays a message on the touch-sensitive display 24 indicating that the selected facsimile message is being enclosed. The user may stop the enclosure process by pressing the Stop button 240. If the user presses the Stop button 240, the IFAX 10 returns to the menu shown in the screen display of Figure 23. The user may press the Continue button 242 to proceed with forwarding the selected facsimile message. Pressing the Continue button 242 causes the IFAX 10 to change to the menu

shown in the screen display of Figure 5 and the prompt 48 instructs the user to enter the facsimile telephone number of the facsimile recipient to whom the facsimile message is being forwarded. As previously discussed, the user may enter a fax number or name manually, or select a facsimile recipient from the phonebook 62 by pressing the Phonebook button 100 (see Figure 5).

The user may select the outbox 72 (see Figure 2) by pressing the Outbox button 212 shown in Figure 23. Pressing the Outbox button 212 causes the IFAX 10 to switch to the menu shown in the screen display of Figure 29. The prompt 48 instructs the user to select a mailbox activity associated with the outbox 72. Alternatively, the user may return to the inbox 70 (see Figure 2), and the menu of the screen display shown in Figure 23, by pressing an "Inbox" button 252. The user may also return to the main menu shown in the screen display of Figure 3 by pressing the menu button 132. As shown in Figure 29, the IFAX 10 displays a list of all outgoing facsimile messages stored in the outbox 72 on the touch-sensitive display. The list includes the name of the facsimile recipient as well as the current status. If the outgoing facsimile message is to be transmitted at a later time, the status information lists the selected transmission time. If there are more outgoing facsimile messages than can be shown on the touch-sensitive display 24 at one time, the user may use the arrow keys 104 to scroll through the list in a manner previously described. The user may view an outgoing facsimile message by selecting the desired facsimile message and pressing the View button 214. The user may also print a stored facsimile message by selecting the desired facsimile message and pressing the Print button 216. The user may cancel the transmission of a stored facsimile message by selecting the desired facsimile message and pressing a "Cancel Fax" button 254. The user may also edit transmission parameters for a stored facsimile message by selecting the desired facsimile message and pressing an "Edit" button 256. The user may send a stored facsimile message immediately by selecting the desired stored facsimile message and pressing a "Redial" button 258.

If the user selects a mailbox activity, such as view or print, without previously selecting the desired facsimile message associated with the mailbox activity, the IFAX 10 displays an error message, shown in Figure 30, on the touch-sensitive display 24. The message instructs the user to first select the desired facsimile message before selecting the mailbox activity. The user presses the OK button 158 as a response to the message. Pressing the OK button 158 causes the IFAX 10 to return to the menu shown in the screen display of Figure 29.

With reference to Figure 29, if the user has selected a desired facsimile message and pressed the View button 214, the IFAX changes to the display shown in Figure 31 in a format similar to the display of a facsimile message stored in the inbox 70, as shown in Figure 24. As seen in Figure 31, the IFAX 10 displays the selected facsimile message on the touch-sensitive display 24. The prompt 48 indicates the facsimile recipient and the current status of the selected facsimile message. As with Figure 24 described above, the information box 226 indicates the current page being displayed on the touch-sensitive display 24, as well as the total number of pages in the facsimile message. The user may move back and forth one page at a time through the facsimile message by pressing the arrow keys 228. The user may print a desired page of the facsimile message by pressing the Print Page button 230. Alternatively, the user may print the entire message by pressing the Print Message button 232. The user may close the screen display of Figure 1 by pressing the Close button 234. Pressing the Close button 234 causes the IFAX to return to the menu shown in the screen display of Figure 29.

If the user has selected a facsimile message and pressed the Print button 216 of Figure 29, the IFAX 10 switches to the screen display shown in Figure 32. The IFAX 10 displays a message on the touch-sensitive display 24 indicating that the selected facsimile message or messages are being printed similar to the confirmation message of Figure 25. The user may stop the printing process by pressing the Stop button 240 or may continue operation of the IFAX 10 by pressing the Continue button 242. Pressing either the Stop button 240 or the Continue button 242 causes the IFAX 10 to return to the menu shown in the screen display of Figure 29.

Again, with reference to Figure 29, if the user has selected a facsimile message and pressed the Cancel Fax button 254, the IFAX 10 switches to the screen display shown in Figure 33. As seen in Figure 33, the IFAX 10 displays a message on the touch-sensitive display 24 asking the user to confirm whether the selected facsimile message should be canceled. The user may press the Yes button 246 to confirm cancellation of the selected facsimile. The user presses the No button 248 if he does not wish to cancel the selected facsimile message. Pressing either the Yes button 246 or the No button 248 causes the IFAX 10 to return to the menu shown in the screen display of Figure 29. The IFAX 10 updates the list displayed on the touch-sensitive display 24 so that canceled facsimile messages are no longer shown in the list.

If the user has selected a facsimile message and pressed the Edit button 256 of Figure 29, the IFAX 10 changes to the screen display shown in Figure 34. As seen in Figure 34, the IFAX displays the transmission time for the selected facsimile message. The prompt 48 instructs the user to select the desired transmission time and touch the Start button 157. The process of selecting a desired transmission time has previously been described in detail in connection with Figure 12.

The IFAX 10 thus provides a simple technique for the user to select features associated with the Mailbox function by selecting the Mailbox button 54 (see Figure 3). The user may easily process facsimile messages in both the inbox 70 (see Figure 2) and the outbox 72. The main menu shown in the screen display of Figure 3 is updated whenever a facsimile message is placed in the inbox 70 or the outbox 72 so that the user may see whether any new facsimile messages have been stored by the IFAX 10. The error messages and error recovery associated with the mailbox provide the user with simple instructions. Thus, the sophisticated features associated with the Mailbox function can be easily used without extensive training.

Returning now to the main menu shown in the screen display of Figure 3, the IFAX incorporates additional options such as setup, features 74 (see Figure 2), reports 76, or IFAX Toolbox applications 78 that are available through the Toolbox function associated with the Toolbox button 56. If the user presses the Toolbox button 56, the IFAX switches to the menu shown in the screen display of Figure 35. The Toolbox function has been previously described in connection with the operation flowchart of Figures 4G-4I. As seen in Figure 35, the prompt 48 contains a toolbox icon to indicate to the user that they are in the toolbox menu. The prompt 48 instructs the user to select the desired setup topic and press the Change button 172. Alternatively, the user can select a reports menu by pressing a "Reports" button 262 or the tools menu by selecting a "Tools" button 264. The user can return to the main menu shown in the screen display of Figure 3 by pressing the Menu button 132.

Referring now to the menu shown in the screen display of Figure 35, the user may alter setup parameters for user settings by pressing a "User Settings" display location 266, system settings by pressing a "System Settings" display location 268, hardware settings by pressing a "Hardware Settings" display location 270, or advanced features by pressing an "Advanced Features" display location 272.



If the user presses the User Settings display location 266 the IFAX 10 displays on the touch-sensitive display 24 the various parameters listed under User Settings, as shown in the screen display of Figure 36. If there are more parameters than can be shown in the list, the user may use the scrolling  
 5 arrow keys 104 to scroll through the list in a manner previously described. The prompt 48 instructs the user to select a setup topic and press the Change button 172. The user may return to the main menu shown in the screen display of Figure 5 by pressing the Menu button 132.

The user may change personal information by pressing a "Personal  
 10 Information" display location 276, handling of incoming faxes by pressing a "Handling of Incoming Faxes" display location 278, security keys by pressing a "Security Keys" display location 280, a cover page style by pressing a "Cover Page Styles" display location 282, a preferred initial screen by pressing a "Preferred Initial Screen" display location 284, or a phonebook by pressing a  
 15 "Phonebook" display location 286.

If the user presses the Change button 172 without first selecting a topic the IFAX 10 will display an error message similar to that shown in the screen display of Figure 30 instructing the user to first select a topic and then press the Change button. If the user selects the Personal Information display  
 20 location 276 and presses the Change button 172, the IFAX 10 changes to the screen display shown in Figure 37 which displays personal information of the user. The user may modify any of the entries by touching the appropriate button. For example, the user may change his name by pressing a "Your Name" button 290. Pressing the Your Name button 290 causes the IFAX 10 to display the  
 25 typewriter keyboard 86, shown in Figure 38, so that the user may change the name as desired. The prompt 48 instructs the user to enter his new name. The user uses the typewriter keyboard 86 to enter the new name. The user presses the OK button 158 to confirm the new name and return to the menu shown in the screen display of Figure 37. Similarly, if the user wishes to change the name of  
 30 the company, the user presses a "Company" button 292. Pressing the Company button 292 causes the IFAX 10 to display the typewriter keyboard 86 as shown in Figure 38, and the prompt 48 to instruct the user to enter a new company name.

The user may change the voice number by pressing a "Voice  
 35 Number" button 294. Pressing the Voice Number button 294 causes the IFAX 10 to change to the screen display shown in Figure 39. The prompt 48 instructs the user to enter a new voice number using the numeric keypad 80.

Alternatively, the user may enter the new voice number using the optional hardware numeric keypad 26 (see Figure 1). The user presses the OK button 158 to confirm the new voice number and return to the menu shown in the screen display of Figure 37. Similarly, the user may change the fax number by pressing a "Fax Number" button 296. Pressing the Fax Number button 296 causes the IFAX 10 to change to a screen display similar to that of Figure 39, and the prompt 48 to instruct the user to enter a new fax number. The user may cancel the changes to personal information by pressing the Cancel button 156. The user confirms changes to the personal information by pressing the OK button 158. Pressing the Cancel button 156 or the OK button 158 causes the IFAX 10 to return to the menu shown in the screen display of Figure 36.

With reference to Figure 36, the user may specify the handling of incoming faxes by pressing the Handling of Incoming Faxes display location 278 and the Change button 172, causing the IFAX 10 to change the screen display shown in Figure 40 which displays the various routing options for incoming facsimile messages. The user may print messages on the IFAX 10 by pressing a "Printed by IFAX" button 300, save incoming facsimile messages in the inbox 70 (see Figure 2) by pressing a "Saved in Inbox" button 302, or specify that incoming facsimile messages be forwarded to a personal computer by pressing a "Forwarded to PC" button 304. The prompt 48 instructs the user to select the desired settings and press the OK button 158 to confirm the selection. The user can cancel the routing selection process at any time by pressing the Cancel button 156. Pressing the Cancel button 156 or the OK button 158 causes the IFAX 10 to return to the menu shown in the screen display of Figure 36.

If the user has elected to print incoming facsimile messages on the IFAX 10 by pressing the Printed by IFAX button 300, the IFAX 10 changes to the screen display of Figure 40 and the setup for the print engine 30 (see Figure 1) may be specified by pressing a "Printer Setup" button 306. Pressing the Printer Setup button 306 causes the IFAX 10 to change to the screen display of Figure 41. As shown in Figure 41, the IFAX 10 displays number of copies currently selected as well as a reverse printing order option. The user may select any number of copies to be printed by the IFAX 10 by pressing a "Number of Copies" 310. Pressing the Number of Copies button 310 causes the IFAX 10 to display the alphanumeric keypad 80, and the prompt 48 instructs the user to select the desired number of copies and press the OK button 158. As shown in Figure 41, the user may also specify reverse order of printing by pressing a "Reverse Order Printing" button 312. A reverse order of printing will cause the

IFAX to print the first page of a facsimile message last so that the pages of the facsimile message are in numerical order with the first page on top. The prompt 48 instructs the user to select the desired options and touch the OK button 158 to confirm the selection. The user may cancel the printer setup procedures at any time by pressing the Cancel button 156. Pressing the Cancel button 156 or the OK button 158 causes the IFAX 10 to return to the screen display of Figure 40.

Returning now to the menu shown in the screen display of Figure 36, the user can specify security keys by pressing the Security Key display location 280 and the Change button 172 causing the IFAX 10 to change to the screen display of Figure 42. The user may change the mailbox password by pressing a "Change Mailbox Password" button 320. Pressing the Change Mailbox Password button 320 causes the IFAX to change to the screen display shown in Figure 43. The prompt 48 instructs the user to change settings and press the OK button 158 to confirm changes to the security keys. The user may cancel changes to the security keys at any time by pressing the Cancel button 156. Pressing the Cancel button 156 or the OK button 158 causes the IFAX 10 to return to the menu shown in the screen display of Figure 36.

As seen in Figure 43, the prompt 48 instructs the user to use the typewriter keyboard 86 to enter the old password. When the user has entered the old password and pressed the OK button 158, the IFAX 10 changes to the screen display shown in Figure 44, and the prompt 48 instructs the user to use the typewriter keyboard 86 to enter the new password. If the user enters a new password and presses the OK button 158, the IFAX 10 changes to the screen display shown in Figure 45. As seen in Figure 45, the prompt 48 instructs the user to use the typewriter keyboard 86 to confirm the new password. The user may confirm the new password by pressing the OK button 158, which causes the IFAX 10 to change to the screen display shown in Figure 46 and display a message indicating that the password has been changed. In response, the user presses the OK button 158, which causes the IFAX 10 to return to the screen display shown in Figure 42. The user may cancel the password changes at any time by pressing the Cancel button 156. Pressing the Cancel button 156 causes the IFAX 10 to change to the screen display shown in Figure 47 and display a message indicating that the mailbox password has not been changed. In response, the user presses the OK button 158, which causes the IFAX 10 to return to the screen display shown in Figure 42.

Again with reference to Figure 42, the user may change the public key by pressing a "Change Public Key" button 322. Pressing the Change Public

Key button 322 causes the IFAX 10 to change to the screen display shown in Figure 48. As shown in Figure 48, the IFAX 10 calls up the key center to apply for a new key. The user confirms this message by pressing the OK button 158, which causes the IFAX 10 to return to the screen display shown in Figure 42.

- 5           Returning now to Figure 36, the user may specify a desired cover page style by pressing the Cover Page Styles display location 282. Pressing the Cover Page Styles display location 282 and the Change button 172 causes the IFAX 10 to change to the menu shown in the screen display of Figure 49. The IFAX 10 displays a list of stored cover page styles on the touch-sensitive display
- 10   24. If the number of cover page styles exceeds the display capacity of the touch-sensitive display 24, the user can use the arrow keys 104 to scroll through the list. The user may install a new cover page style by pressing an "Install" button 330. Alternatively, the user may remove a cover page style from the list shown on the touch-sensitive display 24 by selecting a cover page style and pressing a
- 15   "Remove" button 332. The user selects a cover page style to send with the facsimile message by touching one of the cover page styles shown in the list displayed on the touch-sensitive display 24 of Figure 49, and pressing the OK button 158. Selecting a cover page style and pressing the OK button 158 causes the IFAX 10 to change to the screen display shown in Figure 36. The prompt 48
- 20   instructs the user to select the desired cover page style and press the OK button 158 to confirm the selection. The user may cancel the cover page style selection process at any time by pressing the Cancel button 156. Pressing the Cancel button 156 causes the IFAX 10 to return to the menu shown in the screen display of Figure 36.
- 25           The user presses the Install button 330 to install a new cover page style, causing the IFAX 10 to search the file storage unit 28 (see Figure 1) for the new cover page style. The IFAX 10 then switches to the screen display shown in Figure 50 and displays a message on the touch-sensitive display 24 asking the user to confirm installation of the selected cover page style. The user may cancel
- 30   the selection by pressing the No button 248, or confirm installation of the selected cover page style by pressing the Yes button 246. Pressing the No button 248 causes the IFAX 10 to return to the menu shown in the screen display of Figure 49. Pressing the Yes button 246 causes the IFAX 10 to go to the screen display shown in Figure 51. As seen in Figure 51, the IFAX 10 displays a
- 35   message on the touch-sensitive display 24 inquiring whether there should be public access of the selected cover page style. The user may deny public access of the cover page style by pressing the No button 248, or allow public access of

the cover page style by pressing the Yes button 246. Pressing the No button 248 or the Yes button 246 causes the IFAX 10 to change to the screen display shown in Figure 52. As seen in Figure 52, the IFAX 10 displays a message on the touch-sensitive display 24 indicating to the user that a selected cover page style  
 5 has been installed. The user confirms this message by pressing the OK button 158, which causes the IFAX 10 to return to the menu shown in the screen display of Figure 36. Thus, the user may select a cover page style for his personal use from a list of stored cover page styles. The selected cover page style may be used as the default cover page style for that particular user. The user may also  
 10 add new cover page styles to the list and may reserve the new cover page style for personal use or allow public access to the new cover page style.

Again with reference to Figure 36, the user may specify a preferred initial screen by pressing the Preferred Initial Screen display location 284. Pressing the Preferred Initial Screen display location 284 and the Change button  
 15 172 causes the IFAX 10 to change to the screen display shown in Figure 53. The prompt 48 instructs the user to select the desired initial screen from the list shown on the touch-sensitive display 24. The user may cancel the initial screen selection by pressing the Cancel button 156. The user may select one of the initial screen entries in the list displayed on the touch-sensitive display 24 and  
 20 press the OK button 158 to confirm the selection. Pressing the OK button 158 will cause the IFAX 10 to display the selected initial screen whenever that particular user logs on to the IFAX. The logon procedures used by the IFAX 10 will be discussed in detail below. Pressing the Cancel button 156 or the OK button 158 causes the IFAX 10 to return to the menu shown in the screen display  
 25 of Figure 36.

With reference to Figure 36, the user may set up a phonebook entry by pressing the Phonebook display location 286, and the Change button 172, causing the IFAX 10 to change to the screen display shown in Figure 8. As previously described, the user may enter new entries into the phonebook, edit  
 30 entries in the phonebook, or remove entries from the phonebook. The user may change any of personal settings to suit his particular needs, and the IFAX 10 will store the selected settings. Each time a user logs on to the IFAX 10, the IFAX will use the personal settings selected by that particular user.

As previously described with reference to Figure 35, the user may  
 35 alter system settings by pressing the System Settings display location 268 and the Change button 172, causing the IFAX to change to the menu shown in the screen display of Figure 54 which displays a list of system settings options on the touch-

sensitive display 24. If the number of system settings exceeds the size of the list shown on the touch-sensitive display 24, the user may use the arrow keys 104 to scroll through the list. The prompt 48 instructs the user to touch the desired setup topic and press the Change button 172. The user may change settings in the administrative mode by pressing an "Administrative Mode" display location 336, the discount rate period by pressing a "Discount Rate Period" display location 338, a system identification by pressing a "System Identification" display location 340, remote trouble notification by pressing a "Remote Trouble Notification" display location 342, automatic redial parameters by pressing an "Automatic Redial" display location 344, or alter access restriction by pressing an "Access Restriction" display location 346. Pressing the down arrow key 104 causes the IFAX 10 to scroll in a downward direction through the list, thus displaying additional system setting options, as shown in Figure 55. As seen in Figure 55, the user may also alter mailbox accounts by pressing a "Mailbox Accounts" display location 348.

The user may change administration mode parameters by pressing the Administration Mode display location 336 and the Change button 172, causing the IFAX 10 to change to the screen display shown in Figure 56. Settings in the administration mode are accessible only to an administrator with the appropriate access code. The administrator presses a "System Password" button 352 and enters the appropriate system password. The administrator also enters an access code by pressing an "Access Code" button 354 and entering the appropriate access code. Once the appropriate system password and access code have been entered, the administrator may allow all users on the IFAX 10 by pressing an "Allow Public Users" button 356, allow all users to change default settings on the IFAX by pressing an "Allow Public to Change Defaults" button 358, or allow all users to change system settings by pressing an "Allow Users to Change System Settings" button 360. The administrator enables any of these features by pressing the desired button, or may disable a previously enabled feature by touching the desired button a second time. The prompt 48 instructs the user to change the desired parameters and press the OK button 158 to confirm the selection. The user may cancel the changes to the system settings at any time by pressing the Cancel button 156. Pressing the Cancel button 156 or the OK button 158 which then causes the IFAX 10 to return to the menu shown in the screen display of Figure 55.

With reference to Figure 55, the user may select the discount phone rate period by selecting the Discount Rate display location 338 and the Change

button 172, causing the IFAX 10 to change to the screen display shown in Figure 57. As seen in Figure 57, the currently selected discount rate time is displayed on the touch-sensitive display 24. The user may manually change the discount phone period by selecting the desired time indicator 152 and pressing the time set arrows 150 to manually set the desired time. Alternatively, the user may set discount rates automatically by pressing a "Set Discount Rates Automatically" button 362. The prompt 48 instructs the user to change settings and touch the OK button 158 to confirm the changes. The user may cancel the discount phone rate setting procedure at any time by pressing the Cancel button 156. Pressing the Cancel button 156 or the OK button 158 causes the IFAX 10 to return to the menu shown in the screen display of Figure 55.

Returning now to the menu shown in the screen display of Figure 55, the user may modify the system identification by pressing the System Identification display location 340 and the Change button 172, causing the IFAX 10 to change to the screen display shown in Figure 58. The user may change the company name transmitted on facsimile messages by pressing a "Company Name (TTI)" button 366, change the company name transmitted to other FAX machines sending a facsimile message to the IFAX 10 by pressing a "Company Name (RTI)" button 368, change the facsimile telephone number by pressing a "Fax Number (CSI)" button 370, change the voice telephone number by pressing a "Voice Number" button 372 or change the Contact individual by pressing a "Contact" button 374. If the user presses the Company Name (TTI) button 366 or the Company Name (RTI) button, the IFAX 10 displays the typewriter keyboard 86 on the touch-sensitive display 24, and the prompt 48 instructs the user to enter the new company name. Similarly, if the user presses the Fax Number (CSI) button 370 or the Voice Number button 372, the IFAX 10 displays the numeric keypad 80 on the touch-sensitive display 24, and the prompt 48 instructs the user to enter a new phone number. If the user presses the Contact button 374, the IFAX changes to the typewriter keyboard 86, and the prompt 48 instructs the user to enter the name of the contact person. As seen in Figure 58, the prompt 48 instructs the user to change the system identification settings then touch the OK button 158 to confirm the changes. The user may cancel the changes to the system identification settings at any time by pressing the Cancel button 156. Pressing the Cancel button 156 or the OK button 158 causes the IFAX 10 to return to the menu shown in the screen display of Figure 55.

Returning now to Figure 55, the user may select an individual to receive remote trouble notification by pressing the Remote Trouble Notification display location 342 and the Change button 172, causing the IFAX 10 to change to the screen display shown in Figure 59. The user changes the name of the individual receiving remote trouble notification by pressing a "Notify User" button 376. Pressing the Notify User button 376 causes the IFAX 10 to display the typewriter keyboard 86, and the prompt 48 instructs the user to enter the name of the person receiving remote trouble notification messages. The prompt 48 instructs the user to change the settings and touch the OK button 158 to confirm changes. The user may cancel changes to the remote trouble notification at any time by pressing the Cancel button 156. Pressing the Cancel button 156 or the OK button 158 causes the IFAX 10 to return to the menu shown in the screen display of Figure 55.

Returning now to Figure 55, the user may select automatic redial parameters by pressing the Automatic Redial display location 344 and the Change button 172, causing the IFAX to change to the screen display shown in Figure 60. The user may change the number of automatic redial retries by pressing a "Number of Retries" button 380. The user may also change the redial interval by pressing a "Redial Interval" button 382. Pressing the Number of Retries button 380 or the Redial Interval button 382 causes the IFAX 10 to display the numeric keypad 80 on the touch-sensitive display 24, and the prompt 48 instructs the user to enter the desired number of retries or redial interval. Alternatively, the user can enter the desired number using the optional hardware numeric keypad 26. As seen in Figure 60, the prompt 48 instructs the user to change automatic redial settings then touch the OK button 158 to confirm changes to the settings. The user may cancel automatic redial changes at any time by pressing the Cancel button 156. Pressing the cancel button 156 or the OK button 158 causes the IFAX 10 to return to the menu shown in the screen display of Figure 55.

Returning again to Figure 55, the user may restrict access to the IFAX 10 by pressing the Access Restriction display location 346 and the Change button 172, causing the IFAX to change to the screen display of Figure 61. The user may restrict transmission of facsimile messages to facsimile machines listed in the phonebook 62 (see Figure 2) by using a "Restrict Transmission to Phonebook List" button 386. If this option is selected, outgoing facsimile messages can only be transmitted to FAX machines contained within the phonebook 62.



Similarly, the user may restrict reception of incoming facsimile messages to FAX machines listed in the phonebook 62 (see Figure 2) by pressing a "Restrict Reception by Phonebook List" button 388. In this manner, the user may eliminate "junk" facsimile messages that may be received from unwanted sources. The IFAX 10 checks the identification of the FAX machine sending a facsimile message against the authorized FAX machine list in the phonebook 62. The IFAX 10 will not accept a facsimile message from a FAX machine that is not contained in the phonebook 62. Similarly, the user may restrict reception of incoming facsimile messages to facsimile machines transmitting a system password by pressing a "Restrict Reception by System Password" button 390. If this option is selected, the IFAX 10 will only receive messages from facsimile machines transmitting the appropriate system password.

The user may permit remote access to the IFAX 10 by pressing a "Remote Procedure Calls Allowed" button 392. Enabling this feature allows a person to remotely access the IFAX 10 to perform such procedures as checking an individual mailbox and forwarding facsimile messages stored in the inbox 70 (see Figure 2) for that person. The prompt 48 instructs the user to change access restriction settings then touch the OK button 158 to confirm the changes. The user may cancel changes to access restriction settings at any time by pressing the Cancel button 156. Pressing the cancel button 156 or the OK button 158 causes the IFAX 10 to return to the menu shown in the screen display of Figure 55.

Returning again to Figure 55, the user may alter individual mailbox accounts by pressing the Mailbox Account display location 348 and the Change button 172, causing the IFAX 10 to change to the screen display shown in Figure 62. The IFAX 10 displays a list of all individual mailbox accounts on the touch-sensitive display 24. If more individual accounts exist than can be displayed on the touch-sensitive display 24, the arrow keys 104 can be used to scroll through the list of mailbox accounts. The user may enter a new mailbox account by pressing a "New" button 396, edit existing mailbox accounts by selecting the desired mailbox account and pressing an "Edit" button 398, remove existing mailbox accounts by selecting the desired mailbox account and pressing a "Remove" button 400, or perform other administrative functions by pressing a "User Administrator" button 402. The prompt 48 instructs the user to change settings then touch the OK button 158 to confirm changes to the mailbox accounts. The user may cancel changes to mailbox accounts at any time by pressing the Cancel button 156. Pressing the Cancel button 156 or the OK

button 158 causes the IFAX 10 to return to the menu shown in the screen display of Figure 55.

With reference to Figure 62, if the user presses the New button 396, the IFAX 10 changes to the screen display shown in Figure 63 where the prompt 48 instructs the user to change settings then touch the OK button 158 to confirm the changes. The user may cancel entry of a new mailbox account at any time by pressing the Cancel button 156. Pressing the Cancel button 156 or the OK button 158 causes the IFAX 10 to return to the mailbox account listing shown in Figure 62. As seen in Figure 63, the user enters information relating to the individual such as name, address, telephone number, and company name by pressing an associated one of several buttons 406. The user may specify a local area network (LAN) address by pressing a "LAN Address" button 408. The user also enters the password for the new mailbox account by pressing a "Password" button 410. The user may also specify individual parameters such as the initial screen by pressing a "Set Initial Screen" button 412, set the desired routing for incoming facsimile messages by pressing a "Set Routing" button 414, and limit the mailbox size for the new mailbox account by pressing a "Mailbox Size" button 416. The procedures for setting the initial screen have previously been described. The procedures for setting the mailbox routing will be described in detail below.

With reference to Figure 35, the user may alter hardware settings by pressing the Hardware Settings display location 270. Pressing the Hardware Settings display location 270 causes the IFAX 10 to expand the hardware settings list to that shown in the menu of the screen display of Figure 64. The IFAX 10 displays the list of hardware setting options on the touch-sensitive display 24, and the prompt 48 instructs the user to select a desired set up topic and press the Change button 172.

The user may change the system clock parameters by pressing a "System Clock" display location 470 and the Change button 172, causing the IFAX to change to the screen display shown in Figure 65. The user may change the date or time by selecting the appropriate parameter, such as the hour button 153, and using the time set arrows 150 to change the selected parameter. The prompt 48 instructs the user to change the desired settings and press the OK button 158. The user may cancel changes to the system clock setting at any time by pressing the Cancel button 156. Pressing the Cancel button 156 or the OK button 158 causes the IFAX 10 to return to the menu shown in the screen display of Figure 64.

With reference to Figure 64, the user may change phone line settings by pressing a "Phone Line Settings" display location 422 and the Change button 172, causing the IFAX 10 to change to the screen display shown in Figure 66. The prompt 48 instructs the user to change settings then press the OK button 158 to confirm the changes. The user may cancel changes to the phone line settings at any time by pressing the Cancel button 156. Pressing the cancel button 156 or the OK button 158 causes the IFAX 10 to return to the menu shown in the screen display of Figure 64. As seen in Figure 66, the user may specify whether the IFAX 10 will automatically or manually receive incoming facsimile messages by pressing an "Auto Receive" button 428 or a "Manual Receive" button 430. The user may also specify whether the IFAX 10 would use tone dialing or pulse dialing by press a "Tone Dial" button 432, or a "Pulse Dial" button 434. The user may specify the number of rings on the telephone line before the IFAX 10 answers an incoming call by pressing a "Number of Rings to Answer" button 436. Pressing the number of rings to answer button 436 causes the IFAX 10 to display the numeric keypad 80, and the prompt 48 instructs the user to select the desired number of rings. The user may also specify the dial prefix by pressing a "Dial Prefix" button 438. This feature may be used if the IFAX 10 must first dial a number such as the digit 9 to get an outside telephone line.

Returning now to Figure 35, the user can specify parameters associated with advanced facsimile features by pressing the Advanced Features display location 272. Pressing the Advanced Features display location 272 causes the IFAX 10 to display the list of parameters associated with the Advanced Features display location, as shown in Figure 67. The IFAX 10 displays a list of advanced features on the touch-sensitive display 24. If the list of advanced features exceeds the display capacity of the touch-sensitive display 24, the user may use the arrow keys 104 to scroll through the list. The prompt 48 instructs the user to select the desired topic and press the Change button 172. The user may return to the main menu, shown in the screen display of Figure 3, by pressing the Menu button 132.

The user may select automated reporting parameters by pressing an "Automated Reporting" display location 442 and the Change button 172, causing the IFAX 10 to change to the screen display shown in Figure 68. The IFAX 10 displays a list of possible reports and allows the user to select the time interval at which reports will be generated. If the list of possible reports exceeds the display capacity of the touch-sensitive display 24, the user may use the arrow

keys 104 to scroll through the list. The user may select reports relating to transmitted outgoing facsimiles by pressing a "Transmission Log" display location 454. The user may also obtain information about stored facsimile messages by pressing a "Stored File Report" display location 456. Information relating to a particular department's usage of the IFAX 10 may be obtained by pressing a "Department Code Summary" display location 458. The user may also print the phonebook listings by pressing a "Phonebook Listings" display location 460 or obtain user configuration information by pressing a "User Configuration" display location 462. The user may specify the frequency with which any of these reports are generated by pressing a "Send Reports Every X Days" button 464. The prompt 48 instructs the user to change automated report settings and press the OK button 158 to confirm changes. The user may cancel changes to the automated reporting parameters at any time by pressing the Cancel button 156. Pressing the Cancel button 156 or the OK button 158 causes the IFAX 10 to return to the menu shown in the screen display of Figure 67. In the example shown in Figure 68, reports are generated every seven days. However, the user may wish to have certain reports, such as the transmission log, generated on a daily basis. This option may be selected by pressing the Transmission Log display location 454, and the Send Reports Every X Days button 464. Pressing the Send Reports Every X Days button 464 causes the IFAX 10 to display the numeric keypad 80, and the prompt 48 instructs the user to select the desired period for transmission log reports to be generated.

Returning now to the menu shown in the screen display of Figure 67, the user may select parameters associated with automated facsimile routing by pressing an "Automated G3 Routing" display location 444 and the Change button 172 causing the IFAX 10 to change to the screen display shown in Figure 69. The user may specify that incoming G3 facsimile messages be routed to the user mailbox or the tool box application by pressing a "User's Mailbox" button 468 or a "Tool Box Application" button 470. The user may specify the mailbox owner by pressing a "Mailbox Owner" button 472. Pressing the Mailbox Owner button 472 causes the IFAX 10 to display the typewriter keyboard 86, and the prompt 48 instructs the user to enter the name of the mailbox owner. The prompt 48 instructs the user to change settings and touch the OK button 158 to confirm changes to the facsimile routing. The user may cancel changes to the facsimile routing at any time by pressing the Cancel button 156. Pressing the Cancel button 156 or the OK button 158 causes the IFAX 10 to return to the menu shown in the screen display of Figure 67.

With reference to Figure 67, the user may specify procedures for handling facsimile overflows by pressing a "Fax Overflow" display location 446 and the Change button 172 causing the IFAX 10 to change to the screen display shown in Figure 70. The prompt 48 instructs the user to change settings and touch the OK button 158 to confirm changes to the fax overflow handling procedure. The user may cancel changes to the fax overflow handling procedures at any time by pressing the Cancel button 156. Pressing the Cancel button 156 or the OK button 158 causes the IFAX 10 to return to the menu shown in the screen display of Figure 67. If the IFAX 10 has incoming facsimile messages that exceed the storage capacity of the inbox 70 (see Figure 2), an overflow situation exists. The IFAX 10 can be programmed to notify a selected individual in the event of overflow by pressing a "Notify User" button 476 shown in Figure 70. Pressing the Notify User button 476 causes the IFAX 10 to display the typewriter keyboard 86, and the prompt 48 instructs the user to enter the name of the person to receive overflow notification. The user may also specify overflow handling procedures by pressing a "Do Not Answer" button 478 or a "Route Faxes to PC" button 480. If the IFAX 10 is coupled to a personal computer (PC) (not shown) or other computer through a commercial line or a local area network interface 30 (see Figure 1), overflow messages may be routed directly to the PC. If the IFAX 10 is not coupled to a PC, or the user does not wish to have overflow messages routed to the PC, the user may press the Do Not Answer button 478. If the Do Not Answer button 478 is selected, the IFAX 10 will not answer the telephone for an incoming facsimile message until the overload in the inbox 70 has been eliminated by deleting, printing, forwarding, or saving facsimile messages stored in the Inbox. In the example of Figure 70, the Do Not Answer button 478 is shown in the depressed position, indicating the selection of this fax overflow handling procedure.

With reference to Figure 67, the user may specify automated fax relay parameters by pressing an "Automatic Fax Relay" display location 448 and the Change button 172 causing the IFAX 10 to change the display shown in Figure 71. The IFAX 10 displays a list of automatic fax relay options on the touch-sensitive display 24. If the number of automatic fax relay options exceeds the display capacity of the touch-sensitive display 24, the user may use the arrow keys 104 to scroll through the list. The prompt 48 instructs the user to change the desired settings and touch the OK button 158 to confirm changes in the automated fax relay parameters. The user may cancel changes to the automated fax relay parameters at any time by pressing the Cancel button 156. Pressing the

Cancel button 156 or the OK button 158 causes the IFAX 10 to return to the menu shown in the screen display of Figure 67. As seen in Figure 71, the user may add additional fax relay locations by pressing an "Add" button 484, edit existing fax relay locations by selecting the desired fax relay location and pressing an "Edit" button 486, or remove automatic fax relay locations by selecting the desired location and pressing a "Remove" button 488. The automatic fax relay option permits the IFAX 10 to automatically forward facsimile messages to a predetermined location.

If the user presses the Add button 484, the IFAX changes to the display shown in Figure 72. Still referring to Figure 72, the user may specify the dial prefix of the automatic relay location by pressing a "Dial Prefix" button 492. Pressing the Dial Prefix button 492 causes the IFAX 10 to display the numeric keypad 80, and the prompt 48 instructs the user to enter the desired dial prefix. The user enters the name of the automatic relay location by pressing a "Relay Station" button 494. Pressing the Relay Station button 494 causes the IFAX 10 to display the typewriter keyboard 86, and the prompt 48 instructs the user to enter the name of the automatic relay location. The prompt 48 instructs the user to change the settings and touch the OK button 158 to confirm changes in the automatic relay location. The user may cancel the addition of a new relay location at any time by pressing the cancel button 156. Pressing the cancel button 156 or the OK button 158 causes the IFAX 10 to return to the screen display of Figure 71.

With reference to Figure 67, the user may specify facsimile load balancing by pressing a "Fax Load Balancing" display location 450 and the Change button 172, causing the IFAX 10 to change to the screen display shown in Figure 73. Facsimile load balancing permits two or more IFAXs 10 coupled together to share the work load for more efficient facsimile message processing. The IFAXs 10 may be coupled together on a local area network through the LAN interface 30 (see Figure 1), or other suitable interface connection. If the IFAX 10 has a large number of outgoing facsimiles stored in the outbox 72 (see Figure 2), the IFAX may transfer one or more outgoing facsimile messages to a second IFAX to more effectively balance the work load. Similarly, if the IFAX 10 has a number of facsimile messages stored in the outbox 72 (see Figure 2), and the IFAX 10 receives an incoming facsimile message, the IFAX may again transfer one or more of the outgoing facsimile messages to a second IFAX to more effectively balance the work load. The prompt 48 instructs the user to change settings and press the OK button 158 to confirm changes in the facsimile

load balancing. The user may cancel changes in the facsimile load balancing at any time by pressing the Cancel button 156. Pressing the Cancel button 156 or the OK button 158 causes the IFAX 10 to return to the menu shown in the screen display of Figure 67.

5           As seen in Figure 73, the user may add the name of another IFAX 10 by pressing the Add button 484. The user may edit information about an existing IFAX by selecting the desired IFAX and pressing the Edit button 486. User may also remove an IFAX from the list shown in Figure 73 by selecting the desired IFAX and pressing the Remove button 488.

10           Returning now to Figure 35, the user may select the reports menu from the Toolbox 56 (see Figure 2) by pressing the Reports button 262, causing the IFAX 10 to display the menu shown in the screen display of Figure 74. The IFAX 10 displays a list of report options on the touch-sensitive display 24. If the  
15           number of report options exceeds the display capacity of the touch-sensitive display 24, the user can use the arrow keys 104 to scroll through the list. The prompt 48 instructs the user to touch the desired report names and press the Print button 172. The user may return to the main menu, shown in Figure 3, by pressing the Menu button 132. The user may print a list of all autokey functions by pressing an "Autokey Listing" display location 500. A department code  
20           summary listing may be printed by pressing a "Department Code Summary" display location 502. A diagnostic report may be printed by pressing a "Diagnostics Report" display location 504. The error log may be printed by pressing an "Error Log" display location 506. A list of all mailbox accounts may be printed by pressing a "Mailbox Account List" display location 508. The  
25           contents of a phonebook listing may be printed by pressing a "Phonebook Listing" display location 510. A report on stored facsimile message files may be printed by pressing a "Stored File Report" display location 512.

          The user can press the down arrow key to show additional report options, as shown in Figure 75. The user may print the system settings by  
30           pressing a "System Settings" display location 514. The user may print a copy of the transmission log by pressing a "Transmission Log" display location 516. The user may also print a copy of the user settings by pressing a "User Settings" display location 518.

          If the user presses the Print button 172 without selecting any  
35           reports from the list displayed on the touch-sensitive display 24, the IFAX 10 generates an error message, shown in Figure 76, instructing the user to first select a report in the list, then press the Print button 172. The user presses the

OK button 158 to confirm the error message and return to the previous menu shown in the screen display of Figure 74 or Figure 75.

The user selects a desired report listing, such as by pressing the Error Log display location 506, and pressing the Print button 172, causing the IFAX 10 to display the printing confirmation message shown in Figure 77. The prompt 48 indicates that the IFAX 10 is operating satisfactorily. The user may stop the printing by pressing the Stop button 240, or may press the Continue button 242 to perform other operations on the IFAX 10.

Returning now to Figure 35, the user may select a tools menu by pressing the Tools button 264, causing the IFAX 10 to display the tools menu shown in the screen display of Figure 78. The IFAX 10 displays a list of the IFAX tool applications on the touch-sensitive display 24. If the number of IFAX tool applications exceeds the display capacity of the touch-sensitive display 24, the user may use the arrow keys 104 to scroll through the list. The prompt 48 instructs the user to touch the desired application and press a "Start" button 522 to run the selected application. The user may return to the main menu shown in Figure 3, by pressing the Menu button 132. Alternatively, the user may switch to the reports menu of Figure 74 by pressing the Reports button 262, or the set-up menu of Figure 54 by pressing the Set-up button 498.

The user install a new tools application by pressing a "Install New" button 524 causing the IFAX to search for a new tools application. The user may remove an existing IFAX tools application by selecting the desired application and pressing a "Remove" button 526.

If the user presses the Start button 522 without previously selecting a desired IFAX tool application, the IFAX 10 displays the error message of Figure 79 instructing the user to first select a tool application and then press the start button 522. The user presses the OK button 158 to confirm the error message and to return to the menu shown in the screen display of Figure 78. The user may execute a fax on demand application by pressing a "Fax on Demand" display location 528.

Still referring to Figure 78, the user may use the IFAX 10 to copy files from a user-specified source to a user-specified destination by pressing a "File Copy" display location 530. If the user selects the File Copy display location 530 and presses Start button 522, the IFAX 10 changes to the screen display of Figure 80. The prompt 48 instructs the user to select a source, a file name and a destination, and to touch the Start button 157. The user can cancel the copy in process at any time and return to the menu shown in the screen



display of Figure 78 by pressing the Cancel button 156. The user may specify a file source by pressing a "Copy From" button 542 and specify a copy destination by pressing a "Copy To" button 544. Pressing either the Copy From button 542 or the Copy To button 544 causes the IFAX 10 to display the typewriter keyboard 86, and the prompt 48 instructs the user to enter the appropriate information. In the example of Figure 80, the file to be copied is stored on a floppy disk or other file storage unit 28 (see Figure 1), which is a part of the IFAX 10. The IFAX 10 displays a list of the files contained within the selected source on the touch-sensitive display 24. If the number of files contained in the selected source exceeds the display capacity of the touch-sensitive display 24, the user may use the arrow keys 104 to scroll through the list. When the user has selected a source, file and destination and touched the start button 157, the IFAX 10 displays the confirmation message shown in Figure 81 indicating that the files are being copied. The user may stop the copying process by pressing the Stop button 240, or may press the Continue button 242 to perform other operations on the IFAX 10.

Returning to the menu shown in the screen display of Figure 78, the user may select other IFAX tool applications such as home banking by pressing a "Home Banking" display location 533, and the Start button 522. The user may also scan a document by pressing a "Scan Document" display location 534 and the Start button 522, causing the IFAX 10 to change to the screen display shown in Figure 82. The prompt 48 instructs the user to select a source file and a destination and to touch the Start button 157. The user may stop the scanning process and return to the menu shown in the screen display of Figure 78 by pressing the Cancel button 156. The user specifies a destination for the scanned document by pressing a "Scan To" button 548. The user can specify the name of the document by pressing a "Document Name" button 550.

The user may also adjust the settings of the scanner by pressing a "Set Scanner Settings" button 552. Pressing the Set Scanner Settings button 552 causes the IFAX 10 to change to the previously discussed screen display shown in Figure 19, and the prompt 48 and instructs the user to select the desired scanner settings. With reference to Figure 82, if the user presses the Document Name button 550, the IFAX 10 displays the typewriter keyboard 86 shown in Figure 83. The prompt 48 instructs the user to use the typewriter keyboard 86 to enter the document name and to press the OK button 158 to confirm the document name. The user may cancel naming a scanned document and return to the menu shown in the screen display of Figure 82 by pressing the Cancel button

156. If the user has selected a destination and document name and pressed the Start button 157, the IFAX 10 displays the confirmation message shown in Figure 84 indicating that the document is being scanned. The user may stop the scanning process and return to the menu shown in the screen display of Figure 78 by pressing the Stop button 240, or may press the Continue button 242 to perform other operations on the IFAX 10.

With reference to the menu shown in the screen display of Figure 78, the user may select a poll retrieve IFAX tool application by pressing a "Poll Retrieve" display location 536 or a poll store IFAX tool application by pressing a "Poll Store" display location 538, and the start button 522.

The user may install a new IFAX tool application by pressing an "Install New" button 524 causing the IFAX 10 to display the message shown in Figure 85 indicating that the IFAX is searching for IFAX tool applications. The user presses the OK button 158 to confirm the message. When the IFAX 10 has identified a new IFAX tool application, the IFAX displays the message shown in Figure 86 requesting that the user confirm installation of the selected IFAX tool application. The user can cancel installation of the IFAX tool application by pressing the No button 248, or may confirm installation of the selected IFAX tool application by pressing the Yes button 246. Pressing the Yes button 246 causes the IFAX 10 to display the message shown on the screen display of Figure 87 requesting whether there should be public access to the selected IFAX tool application. The user may restrict public access to the selected IFAX tool application by pressing the No button 248, or may permit public access by pressing the Yes button 246. Pressing the Yes button 246 or the No button 248 causes the IFAX 10 to display the confirmation message shown in Figure 88 confirming that the selected IFAX tool application has been installed. The user presses the OK button 158 to confirm the message and to return to the menu shown in the screen display of Figure 78. The IFAX 10 then updates the list of IFAX tool applications displayed on the touch-sensitive display 24.

If the user selects an IFAX tool application, or any other function not yet implemented on the IFAX 10, the IFAX displays the message shown in the screen display of Figure 89 indicating that the selected feature has not yet been implemented. The user presses the OK button 158 to confirm the message and to return to the previous screen display.

As can readily be seen, the IFAX 10 provides numerous sophisticated features associated with the Toolbox button 56 (see Figure 3). The

numerous menus, screen displays and error messages guide the user in the selection and operation of these sophisticated procedures.

With reference to Figure 3, the user may press the Autokeys button 58 to define a macro instruction comprising a series of user selected steps that are given a user selected name. For example, if a particular user frequently sends a report, such as a sales report, to a number of different sales offices throughout the world, the user may define a sequence of steps with a given name such as "SALES." The IFAX 10 stores the predefined sequence of steps and allows the user to later easily initiate the predefined sequence of steps. The user presses the Autokeys button 58 to define a sequence of steps, initiate use of the predefined sequence, or remove an undesired sequence of steps. When the user presses the Autokeys button 58, the IFAX 10 changes to the menu shown in the screen display of Figure 90. The autokeys function has been previously described in connection with the operational flowchart of Figure 4J. The Autokeys icon shown as part of the prompt 48, indicates that the user is in the Autokeys portion of the main menu. The prompt 48 instructs the user to touch the name of the desired Autokey function and press a "Start" button 556. The IFAX 10 displays a list of all previously defined Autokeys on the touch-sensitive display 24. If the number of Autokey entries exceeds the display capacity of the touch-sensitive display 24, the user can use the arrow buttons 104 to scroll through the list. The user may execute any of the Autokey functions by selecting the desired Autokey function and pressing the Start button 556. The user may create a new Autokey function by pressing a "Record" button 558. Pressing the Record button 558 causes the IFAX 10 display the typewriter keyboard 86, and the prompt 48 instructs the user to enter the name of the new Autokey function. When the user has entered an Autokey function name, the IFAX 10 changes to the main menu shown in the screen display of Figure 3. From this point the user may select any sequence of steps to be executed by the IFAX 10. The user may press a stop button in any of the screen displays to end recording of the Autokey function. The user may remove any undesired Autokey function by selecting the function and pressing a "Remove" button 560. The user may cancel Autokey operation at any time by pressing the "Cancel" button 156, which causes the IFAX 10 to return to the main menu shown in the screen display of Figure 3.

With reference to Figure 3, the user performs a logon operation on the IFAX 10 by pressing the Sign In button 60, causing the IFAX to change to the screen display shown in Figure 91. The Sign In function has been previously described in connection with the operational flowchart of Figure 4K. The IFAX

10 displays a list of all IFAX users on the touch-sensitive display 24. If the number of users exceeds the display capacity of the touch-sensitive display 24, the user may use the arrow keys 104 to scroll through the list. The prompt 48 instructs the user to select his name and press the OK button 158. The user may  
5 cancel the logon procedure and return to the main menu of Figure 3 at any time by pressing the "Cancel" button 156.

When the user has selected his name from the list displayed on the touch-sensitive display 24, and pressed the OK button 158, the IFAX 10 changes to the screen display shown in Figure 92. The IFAX displays the typewriter  
10 keyboard 86 on the touch-sensitive display 24, and the prompt 48 instructs the user to enter his password. The user may cancel the login procedure at any time and return to the main menu of Figure 3 by pressing the cancel button 156. The IFAX 10 cannot be used by any individual entering an incorrect password. If the user correctly enters his password and presses the OK button 158, the IFAX 10  
15 changes to the screen display shown in Figure 93, confirming the user identity and indicating the number of unread facsimile messages currently in the particular user's mailbox. The user presses the OK button 158 to confirm the message, and the IFAX 10 displays the main menu, with the current user identity, as shown in Figure 94. The main menu shown in Figure 94 is identical  
20 to that of Figure 3 with the exception of an indication of the current user. The IFAX 10 installs any personal user settings and the initial screen previously selected by that particular user. Thus, the IFAX 10 is customized for each user when the user has logged on using the Sign In button 60. The main menu shown in Figure 3 contains a "Sign Out" button 564 instead of the Sign In button 60.  
25 The current user uses any of the procedures previously discussed in connection with the IFAX 10. When the user has completed operations on the IFAX 10 he presses the Sign Out button 564 to end his session on the IFAX 10. When the user presses the Sign Out button 564, the IFAX 10 changes to the screen display shown in Figure 95 to confirm whether the current user wishes to sign-out. The  
30 current user may cancel the sign out procedure by pressing the "No" button 248. The user confirms the desire to sign out by pressing the "Yes" button 246, which causes the IFAX 10 to display the confirmation message shown in Figure 96. The user presses the OK button 158, shown in Figure 96, to complete the sign out procedures and cause the IFAX 10 to return to the main menu shown in the  
35 screen display of Figure 3.

As is apparent from the above detailed description, the IFAX 10 provides numerous sophisticated features that are not available on facsimile

machines of the prior art. In addition, the IFAX 10 provides a series of menus, display screens, and error messages to assist the user through all phases of operation of the IFAX. The user may easily utilize any of the sophisticated features of the IFAX 10 by simply following instructions displayed on the touch-sensitive display 24. Alternatively, the IFAX 10 may be part of a computer system in which a computer display screen and a pointing device replace the touch-sensitive display 24. The sophisticated and context sensitive error messages assist the user in making the proper selections.

The above description describes the user interface and serves as an introduction to the functional description of the IFAX 10 provided below.

#### Send a Facsimile Message

The user can send a fax from the IFAX User Interface using a standard numeric keypad, a phonebook address, or Autokeys. As an alternative, the user can dial manually using a handset or the keypad (if an on-hook dial button is provided). The ability to specify multiple destinations is described in greater detail in the Broadcast Send feature description.

#### Options:

- Send Now specifies that the fax should be sent immediately.
- Send Later specifies that the fax should be sent later or when rates are cheaper.
- Include A Digital Cover Page lets users transmit a custom cover style that automatically fills in the proper header information.
- Enclose A File lets users transmit binary files, other fax messages, phonebook listings, cover page styles, Toolbox Applications and even setup configurations.
- Resolution lets users control the image quality, time and cost of transmission.
- Contrast controls lighten or darken the image.

## 61

- Halftoning improves the quality of most images but increases the time and cost of the transmission.
- 5 • Security offers Encryption, Authentication and Digital Signature for sending of secure fax documents.
- Turnaround Poll checks receiving machine for stored documents addresses to the caller.
- 10 • Department Code tracks fax usage for different corporate accounts. This assists in billing and tracking of machine usage.
- Include Fax Header displays a fax header with the name, company and fax number of the machine owner at the top of each page.
- 15 • Number Outgoing Pages displays the page number in the lower right hand corner of each page. When the user specifies the number of pages, the page count appears 1/4, 2/4, 3/4 and 4/4. Without the number of pages, the page count appears 1, 2, 3, 4.
- 20 • Print Confirmation Report returns a message when the transmission is completed.
- 25 • Send From Memory scans the document into the Outbox before dialing the destination.

## Procedure:

Send Fax allows the user to send an IFAX Message to a single recipient. The send facsimile procedure is shown in the flowchart of Figures 97-99. Begin the procedure when the User presses *Send Now* or *Start* as shown in Figure 97. If there is no document or binary file, display the "Please Insert Document" dialog box. Continue when the user inserts a document.

If the recipient list is empty, scan the top of the first page for OMR Cover Page information. If it is not an OMR Cover Page, display the "Recipient list is empty (no OMR information either)." dialog box. If there is OMR Cover Page information, scan it in and configure the message accordingly.

If *Access Restriction* is on and the recipients are not members of the phonebook, abort the call and print an error report "Access restriction is currently limited to members of the phonebook. This destination is not in the phonebook."

- 5 If the Automatic Relay Fax Request is configured, setup the Send operation through the proper relay station (usually by recipient area or country code). The relay station becomes the recipient. See the Automatic Relay Fax Request section for more information.

- 10 If *Send Later* is requested, scan the entire document into the Sender's outbox. Proceed with the Send operation in the background at the time specified. If *Send From Memory* is requested, scan the entire document into the Sender's outbox. Proceed with the Send operation in the background when possible.

- 15 When scanning the document, observe the user's settings for resolution, contrast, and halftoning. For more information, see the High Resolution Scan, Print, Send & Receive, Gray Scale, and Automatic and Manual Contrast Control sections.

- 20 Before beginning the transmission, check to see if other outgoing faxes are headed to the same destination fax number as seen in Figure 98. See the Intelligent Fax Queuing and Multicasting section for more details. Also, determine if the current outgoing load factor requires network redistribution. See the Fax Load Balancing section for more information.

- 25 Dial the recipient to begin the transmission. Use the dial mode (Pulse/Tone) specified in the Phone Line Settings dialog. Wait *n* seconds for a carrier, where *n* is specified as the time to carrier in the Phone Line Settings dialog. If a carrier is detected, light the Communicating LED. Otherwise, try the recipient's alternative fax number (if available). If there is still no connection, increment the redial count and try again after the redial interval.

- 30 If the facsimile message is a Relay Fax Request, verify the relay password or the system password. If the sender does not have relay access, abort the call and issue an Error Report "You do not have relay access at this destination."

- 35 Request then update (in the Phonebook) the recipient's address entry. This obtains the entire address entry for a particular user including his public key.

Determine the transmitting resolution most appropriate for this recipient's fax machine.

If *Include Digital Cover Page* has been selected, generate it as the first page of the transmission. If the recipient fax machine is Intelligent, just send the cover page as a binary header. Otherwise, render the cover page for transmission. The default cover page style is described in the Digital Cover Page  
5 Section.

If *Include Personal Header* is on, include the following header at the top of each transmitted page (after the cover page). The header should contain the Sender's Name, Fax Number, Company Name and Date (as shown below).  
10

Mr. James Smith (206) 555-5555

Microsoft Corporation

September 15, 1992

If *Number Outgoing Pages* is on, transmit the page count at the bottom right corner of each page. If the Number of Pages has been specified in  
15 the Cover Page dialog, use the page numbering style 1/4, 2/4, 3/4, 4/4 otherwise number them sequentially 1, 2, 3, 4.

Scan each page checking for OMR Fax Stacking headers. If there is no header, transmit each page and continue. If an OMR header appears, complete the transmission without transmitting any subsequent pages. See the  
20 High Resolution, Scan, Print, Send & Receive section for details on transmitting resolutions and paper size.

Send any binary attachments. If *Send Renderable* is selected, render any attachments of supported file types. See the High Quality Renderable Document Transmission section for details. If sending to a G3 Machine, render a  
25 "This Intelligent Fax Message contains a binary file which your fax machine does not support." message.

If *Encryption* is selected, encrypt all transmission data using the recipient's public key.

If *Digital Signature* is selected, compute a hash code on all  
30 transmitted data. Encrypt and transmit the hash code at the end of the call with the recipient's public key.

If *Authentication* is selected, transmit the sender's Digital Certificate.

As seen in Figure 99, if *Turnaround Polling* is selected, poll the  
35 recipient's IFAX Machine for Personal Messages. Issue a Poll Retrieve Results report and route it with any retrieved messages according to the Sender's Receive Fax settings. See the Poll Retrieve section for more information.



When the transmission is complete, hang up the line. Turn off the Communicating LED.

- 5 Check that the number of pages transmitted matched the number specified by the user (if available). If the number of pages does not match, issue an error report. Log any other transmission errors that occurred.

Enter the results into the Activity Report (TCR) with the name of the currently signed in user (or Public) and the Department Code (if specified).

If *Print Confirmation Report* is on, issue a Confirmation Report. See the Basic Activity Reporting section for more information.

10

#### Exceptions:

Connection Lost	If the carrier is found but the line is interrupted during the send, abort the operation and issue a "Connection was lost" Error Report.
Document Cover Open	Display a dialog to give the user 15 seconds to close the Document Cover. If it is not closed, abort the operation and issue an Error Report.
Memory Full	If a Memory Full condition occurs on a Send From Memory, begin the transmission. Send the part that has been stored in memory and scan and transmit the rest on-the-fly.
	If a Memory Full condition occurs on a Send At Discount Rates or Send At Scheduled Time, display the "Out of memory. Holding fax in feeder until Time xx:xx" dialog box. Complete the Send at the specified time.
No Connection	If the line is busy or no carrier is found, the Alternative Fax Number should be tried (if available). If this too fails, the number of retries should be incremented. If it is equal to the standard number of retries, issue an "No Connection" Error Report. Otherwise, re-initiate the send after the retry interval.
OMR Cover Page Invalid	Abort the call. Issue an "OMR Cover Page Invalid" Error Report.
Paper Jam	Abort the Send operation and issue an Error Report. Display the "Paper Jam" dialog box.

Power Off	Issue an Error Report after the next Power On indicating that the interruption occurred.
Public Key Missing	If the public key cannot be obtained, abort the call and issue a "Can't obtain public key" Error Report.
Stop	<p>Abort the operation. Issue an Error Report and indicate the page in which the interruption occurred.</p> <p>If the send is in the background, check if the user has authority to stop the current send process. If so, display a "Interrupt transmission?" dialog box. Otherwise, display a "You do not have access to this transmission."</p>
Transmission Error	If the Number of Pages scanned and transmitted does not correspond to the number specified by the user, issue a "Did not transmit page x of y" Error Report.

## Receive Fax

### Description:

The IFAX 10 can receive faxes from both Intelligent and G3 fax machines. Received messages can be printed, stored in mailboxes, forwarded to  
5 PC's connected via LAN or Serial or routed to a Tool Application for special handling or OCR.

Intelligent messages are typically routed directly to their recipient, either to their mailbox or their PC.

G3 messages are typically printed or routed to a special mailbox.  
10 However, when a special OMR cover sheet is included in the G3 fax, IFAX machines can interpret them and route them as an intelligent fax message. IFAX machines can also route G3 faxes to special Tool Applications that will properly route them using OCR or other methods.

IFAX machines also support on-screen preview of received faxes  
15 from the Mailbox.

### Options:

- Print Received Faxes is the standard default. Each incoming fax is printed as it arrives.  
20
- Store In Mailbox lets the user retrieve their messages at their convenience while adding an extra level of security.
- Forward To PC actually routes the faxes directly to the users PC via LAN or Serial.  
25
- Forward To Tool Application routes the fax to a specific Tool Application for special handling. OCR Tools will probably be the most frequently used.  
30
- Multi-Document Sort prints multiple copies of each incoming fax.
- Reverse Order Printing prints received faxes backwards so that the pages will be in the proper order.
- Automatic Paper Selection prints incoming messages on paper that most closely fits the size of the document being received (on systems with  
35

multiple paper sources). If desired, the user can manually select the paper source instead.

- 5 • Automatic Reduction can adjust slightly oversized received messages to fit the available paper supplies. If the difference is extreme, page breaks will be used.

Procedure:

10 As seen in Figure 100, after detecting the *Number of Rings* specified by the Administrator, answer the incoming call. If a carrier is detected, light the Communicating LED.

Display a Receiving Fax dialog box. This notifies the user that a fax is coming in. If a user is present, he can simply touch Continue to regain control of the User Interface. If no one presses Continue, remove the dialog  
15 when the Receive is completed.

Determine if the incoming message is G3 or EFAX.

If the incoming message is an EFAX Message, handle it according to the user's *Routing Setup*:

- 20 • Print on the IFAX
- Route to the user's mailbox
- Route to user via LAN/Serial
- 25 • Secure Faxes routed to user's Mailbox/Others Printed

Faxes to unknown users are routed to the G3 Operator destination (see below).

30 If the message contains a binary Attachment, always route it to the User (not printed) or his Mailbox.

Note: All automated activity reports should be routed according to the Sender's receive settings:

35 If the incoming message is *Encrypted*, decrypt it using the recipient's private key. If the private key is not available or if the user is unknown, store the document as an encrypted message.

If the incoming message is *Digitally Signed*, compute a hash code on all incoming data. Decrypt the incoming hash code and compare the two. If they are not equal, issue an Error Report "Document has been tampered with." and enter it into the Error Log.

- 5 If the incoming message requests *Authentication*, decrypt the sender's Digital Certificate and use it to decrypt the message.

If the incoming message is a G3 Message, check to see if it has an IFAX OMR cover page. If so, obtain the addressing information; see the Automatic G3 OMR Cover Sheet Recognition section for more information.

- 10 Route the message as an EFAX Message (see above).

If there is no IFAX OMR cover page, the G3 fax should be routed according to the following settings:

- 15 • Route to Automated G3 Inbound Routing Support Feature
- Route to PC Based G3 Routing Application via LAN/Serial
- Route to specific G3 Operator via LAN/Serial
- 20 • Route to specific G3 Operator Mailbox
- Printed by the IFAX

- 25 If the Automated G3 Inbound Routing Feature is used, route the fax according to the resulting Recipient's EFAX Routing Setup (once this information has been obtained).

Use the G3 TTI to indicate the sender of G3 faxes in the users Inbox listing.

- 30 Enter the reception results in the *Activity Report (TCR)*. If the *Print Reception Reports* option is on, issue a Reception Report as described in the Basic Activity Reporting section.

If the Public Mailbox is specified as the G3/unknown fax destination, always print the Reception Report.

- 35 If the *Store Received Phonebook Entries* option is on, cache the Sender's Address Information and public key in the Recipient's Phonebook.

## Exceptions:

Connection Lost	If a Phone Line Interruption occurs during the receive, issue a "Connection Lost" Error Report.
Document Cover Open	Display the Document Cover Open dialog. If it is not closed within 15 seconds, abort the receive operation. Issue an Error Report once the Paper Feed is closed.
Mailbox Full	If the Recipient's Mailbox is Full, print the message.  If the message is Secure or contains a binary Attachment, abort the operation, issue a "Mailbox Full" Error Report and instruct the calling machine to try again later.
Memory Full	Display the Memory Full dialog box. If the IFAX runs Out of Storage (disk space/memory), the message should be treated as above in Mailbox Full.
Paper Jam	Display the Paper Jam dialog box. Route the remainder of the message to the user's mailbox (if possible). Otherwise, or if the mailbox becomes full, abort the operation and issue an error report. If the error report is to be printed, store it until the paper jam is fixed.
Paper Out	Display the Paper Out dialog box. Route the message to the User's Mailbox (Public Mailbox if G3). If no Mailbox storage is available, abort the Receive operation and issue an Error Report. If the error report is to be printed, store it until there is paper.
Power Off	Issue an Error Report and route it with the partially received message at the next Power On.
Stop	Abort the operation. Disconnect the line and clear the paper feed on the printer.  If the receive is in the background, check if the user has authority to stop the current process. If so, display a "Interrupt reception?" dialog box. Otherwise, display a "You do not have access to this reception."

Transmission Error	If the Number of Pages received does not correspond to the number specified by the message header, notify the Sending machine and issue an Error Report.
--------------------	--

### High Resolution Scan, Print, Send & Receive

#### Description:

IFAX platforms can scan, print, send and receive at a variety of resolutions. We presently support the following bitmap resolutions:

#### Options:

- 203 x 98 (Vertical by Horizontal) is the low quality, economy transmission resolution.
- 203 x 196 is the Standard G3 transmission resolution.
- 203 x 392 is the high quality, fine transmission resolution.
- 406 x 392 is currently the optimal transmission resolution.

The IFAX software also supports the 200 x 200, 300 x 300 and 400 x 400 English scanning resolutions.

The IFAX 10 software can also be easily extended to support even higher resolutions. As processor and peripheral speeds increase with technology advancements, it is expected that the resolutions supported by both the EFAX and G3 protocols will also increase.

#### Procedure:

The Send Fax, Receive Fax, Broadcast Fax, Poll Retrieve, and Poll Store contain instructions for choosing optimal scanning and printing resolutions as well as paper size information.

When scanning for a remote destination via Serial/LAN Interface (see Figure 1), operate the scanner at the resolution specified by the remote configuration. See the Remote Scan Over Serial Connection feature description.

When printing from a remote destination via LAN or Serial Interface, operate the printer at the resolution specified by the remote configuration.

There are four counters on each fax machine: Scanned Pages, Printed Pages, Transmitted Pages and Received Pages. Increment the appropriate counter after each page has been scanned, printed, transmitted or received.

5

### High Speed Send and Receive

#### Description:

The IFAX 10 will support transmission speeds up to 14,400 bps. It will step down to lower speeds when connected to slower machines.

10

While transmission speeds are approaching the current limitations of the PSTN transport media, these limitations will inevitably be extended with time. The proposed V.fast fax transmission standard is one example of this, allowing transmission at 28 kbps on connections where the subscriber loop is the only analog portion of the communications channel. The IFAX machine architecture will be designed so that higher transport speeds will not be unnecessarily precluded. These higher speeds, may, however, require the use of faster CPU's or special modem access methods.

15

#### Procedure:

20

The IFAX Machine should always use the maximum possible communication speed, 14.4 K Baud, stepping down when connected to slower machines. The user should be isolated from selecting modem transmission speeds.

### 25 Poll Store

#### Description:

Poll Store retains document(s) until requested by a calling fax machine. IFAX platforms support extended G3 Polling: File Number + Password, EFX Polling: File Name + optional Password, and free access retrieval (public).

30

If sufficient memory exists in the IFAX to store the document or the IFAX is equipped with a disk, the document will be scanned and stored awaiting the polling request. Otherwise, the document will remain in the document feeder until the poll request is received. In this case, the document will only be available to the first polling machine.

35



Users will also be able to access a list of documents currently stored for polling in order to delete particular documents or change access information. Retrieval Reports are generated whenever a file is deleted.

## 5 Options:

In addition to all of the standard Send Fax options, Poll Store supports:

- 10 • Group Store lets the user store the document for any number of recipients to retrieve. Once all of the specified recipients have retrieved the fax it is deleted from the store.
- Unrestricted Access allows any caller to retrieve the document(s).
- 15 • Days To Store specifies the number of days until the file should be deleted regardless of the number of retrievals.
- Title specifies a filename for the given document. A file number can be specified instead.
- 20 • Password restricts document access to callers that can provide this password.

## Procedure:

- 25 Allows user to store document(s) and binary Attachments to be retrieved by other callers. Begin the poll store operation, shown in Figure 101, when the user presses Start.

- 30 If *Access Restriction* is on and the recipients are not members of the phonebook, abort the store operation and print an error report "Access restriction is currently limited to members of the phonebook. This recipient is not in the phonebook."

If there is no document or binary file, display the "Please Insert Document" dialog box. Continue when the user inserts a document.

- 35 Scan the document according to user's settings for resolution, contrast, and gray scale settings chosen in the Poll Store Options dialog of the

User Interface. See the High Resolution Scan, Print, Send & Receive, Automatic and Manual Contrast Control, and Gray Scale sections for more details.

As you place the document in the Outbox, prepare it for transmission as in Send Fax, i.e. with *Digital Cover Page*, *Fax Header*, *Page*  
5 *Numbering*, etc.

If the message is placed in the outbox 72 (see Figure 2) without errors and the *Poll Store File Report* option is on, issue a Poll Store File Report. If there are errors, issue an Error Report and enter it into the Error Log. In the case of any error, the Poll Store configuration of the User Interface should be  
10 maintained, including all recipient and document information, to allow the user to easily retry the task.

Note: All reports should be routed according to the Sender's receive settings.

Remove the message from the Outbox after the number of days  
15 specified by the *Days To Store* option.

When the IFAX Machine is Polled for documents:

The calling machine will make a request for certain document title(s) and password(s). It may also request all publicly available documents, all documents addressed to the caller, and a list of available documents.

20 If it is a G3 machine, it will specify a file number plus optional password. This supports the proposed convention for handling multiple stored messages in the 1992 G3 extensions.

Check for each available document. If the document is stored for public access, transmit it to the calling machine. If the document is addressed to  
25 specific users, verify the caller's name before transmitting.

Determine the transmitting resolution most appropriate for this recipient's fax machine.

If *Encryption* is selected, encrypt all transmission data using the caller's public key.

30 If *Digital Signature* is selected, compute a hash code on all transmitted data. Encrypt and transmit the hash code at the end of the call with the caller's public key.

If *Authentication* is specified, verify the caller's identity using the Digital Certificate before transmitting.

35 If no documents are available, issue a Poll Results report stating that the query failed.

Once documents have been retrieved by all of the designated recipient(s), they should be removed from the outbox 72.

**Exceptions:**

Document Cover Open	Display a dialog prompting the user to close it within 15 seconds. If it is not closed, abort the Poll Store. Issue an Error Report. If it is to be printed, hold it until the cover is closed.
Mailbox Full	If the Recipient's Mailbox is too full to Poll Store the message, display a "Mailbox Full, Cancel Poll Store or leave document in feeder?" dialog.  If other users remove the document to do their own faxing, issue an error report to the original sender.
Memory Full	If the IFAX runs Out of Storage (disk space/memory), the message should be treated as above in Mailbox Full.
No Attachment Support	Poll Store documents may also contain binary attachments not supported by G3 callers. Render a "This is an Intelligent Fax Message Attachment which is not supported on your fax machine." on the calling machine.
Paper Jam	If a Paper Jam occurs, abort the operation. Give the user the option of clearing the Poll Store user interface setup or retrying once the Jam is fixed.
Power Off	If the IFAX is Powered Off while scanning or placing the message in the Outbox, issue an Error Report at the next Power On.
Stop	If Stop is pressed during scanning, the operation should be aborted. Display a dialog prompting the user to clear the Poll Store User Interface configuration. If the user does not respond within 60 seconds, the Poll Store User Interface configuration should be cleared and the User Interface reset.

### Polled Fax Retrieve

#### Description:

Polled Fax Retrieve allows users to retrieve documents from remote fax machines or document servers (see the Poll Store feature description).

- 5 The user can specify retrieval of multiple titles from multiple poll stations.

#### Options:

- Poll Now performs the poll operation immediately.
- 10 • Poll Later performs the poll operation at a user specified time or when rates are cheaper.
- Persistent Poll performs the poll operation at a user specified time and again at regular intervals (e.g. each day at 4 p.m.)
- 15 • Retrieve Personal Documents specifies retrieval of documents addressed specifically to the user.
- Retrieve By File Name/Number specifies retrieval of particular document(s) with optional password.
- 20 • ~~Retrieve All Public Documents specifies retrieval of any documents available for public access.~~
- 25 • Request List of Available Documents specifies retrieval of a list of any documents that are available to this caller (including public access documents and password protected documents).
- Remote Destination specifies that the retrieved documents should be forwarded to another destination.
- 30 • Poll Results Report specifies that a summary report should be printed at the end of the poll retrieve operation.
- 35 • Request Activity Reports requests current activity reports be routed back to the user. The user must include the system password to receive these reports.

- Check Relay Status requests a status report from the destination machine for a previous fax relay request. The user must include the system password to receive this report.

5

Procedure:

Polled Fax Retrieve allows user to retrieve document(s) and binary Attachments stored on remote fax machines or servers. Begin the Poll Retrieve operation when the user presses *Poll Now* or *Start* as shown in Figure 102.

10

If *Poll Later* is specified, store the request in the user's outbox until the appropriate time.

15

Before beginning the retrieve request, the IFAX should check to see if other outgoing faxes are headed to the same destination fax number. See the Intelligent Fax Queuing and Multicasting section for more details. It should also determine if its load factor requires network redistribution. See the Fax Load Balancing section for more information.

20

Dial the recipient to begin the Poll Retrieve. If a carrier is detected, light the Communicating LED. Otherwise, try the recipient's alternative fax number (if available). If there is still no connection, increment the redial count and try again after the redial interval.

If the *Retrieve All Public Documents* option is on, request all public documents from the Poll Station and route them according to the user's Receive settings.

25

If the *Retrieve All Personal Documents* option is on, request all personal documents and route them according to the user's Receive settings.

If the *Request Activity Reports* option is on, request the Activity Reports and route them according to the user's receive settings.

30

If *Request List of Available Documents* option is on, request a list of all documents (public and personal) and route them according to the user's receive settings.

If a *Poll Result Report* has been requested, route it with the retrieved documents (if any) to show the results of each document query.

35

If the *Check Relay Status* option is on, query the Recipient machine for Relay Fax Requests from the caller. Once this information is retrieved, the status of all the relays from this user should be routed in a Relay Status Report according to the user's receive settings.

End the call. If a *Remote Destination* for the documents has been specified, forward all retrieved items to the remote destination as a Send Fax operation.

- 5 If the *Persistent Poll* option, is specified, maintain a scheduled copy of this operation in the user's Outbox. This will implement the re-occurring poll operation on a regular basis. When the user wants to end this operation, they will delete the poll operation from their Outbox.

Exceptions:

Connection Lost	If a Phone Line Interruption occurs during the Poll Retrieve, issue an Error Report and enter it in the Error Log. Route the incomplete Poll Retrieve document(s) with the Error Report.
Document Cover Open	If the Paper Feed is opened during a Poll Retrieve, display a "Close Paper Feed" dialog for 15 seconds. If it is not closed, abort the operation. Issue an Error Report once the Paper Feed is closed.
Memory Full	If the User's Mailbox is too full to retrieve the document(s), the abort the operation. Display a "Clear Poll Retrieve Settings?" dialog. Pressing No from the Clear dialog would allow the user to switch to the Mailbox, clear up space, and retry the Poll Retrieve operation.
No Connection	If the line was busy or no carrier is found, try the Alternative Fax Number (if available). If this too fails, increment the number of retries. If it is equal to the standard number of retries, issue a "No Connection" Error Report. Otherwise, re-initiate the Poll Request after the retry interval.
Paper Jam	Abort the operation and display a "Paper Jam" dialog box.
Paper Out	Route the rest of the document to the User's mailbox. If mailbox storage becomes full, abort the operation. Display an "Out of Paper" Dialog Box.
Power Off	Print an Error Report at the next Power On and route the partially received Poll Retrieve document(s) to the user.

Stop	If Stop is pressed during the Poll Retrieve, abort the operation. Display a "Clear Poll Retrieve settings?" dialog. If the user does not respond within 60 seconds, clear the Poll Retrieve settings.
Transmission Error	If the Number of Pages received does not match the number specified by the message header, issue an Error Report.

### Broadcast Send

#### Description:

Broadcast send allows users to send a document to multiple destinations. It is not a separate user command, but rather an enhancement on the basic message addressing process described in the Send Fax feature description.

When two fax recipients are located on the same destination IFAX machine, the fax message will be sent only once, as discussed in the Intelligent Fax Queuing and Multicasting feature description.

#### Options:

- Sending to multiple destinations allows the user to enter multiple fax recipients for a given message.
- Group lists allow users to pre-program common broadcast lists into the Phonebook for easy access. Group lists can also be nested for enhanced distribution.
- Relay Lists allow users to pre-program relay requests into the Phonebook. (See Relay Fax Request feature description). Relay requests may be entered when the recipient's information is added to the address book (as described in the Address Book Maintenance feature), or may be entered by the user when the recipient is added to the broadcast send list. Relay lists can also be nested.

#### Procedure:

The Broadcast procedure is the same as the Send Fax procedure except for:

Once the recipient list exceeds one user, the *Send From Memory* option should be used automatically.

Recipient fax numbers in the recipient list should be consolidated so that duplicate calls aren't made to the same destination. Intelligent Fax Queuing checks should also be performed (as in the Send Fax procedure).

- 5 If *Include Digital Cover Page* is selected, list the entire group of broadcast recipients, including Cc: recipients on the cover page.

When scanning the document, one entry should be added to the user's Outbox list for each fax recipient (at a different fax number). This allows users to see the status of and redial individual faxes within a broadcast.

- 10 If *Print Confirmation Report* is on, issue a summary Confirmation Report. Do not issue individual Confirmation Reports for each transmission. See the Basic Activity Reporting section for more information.

#### Exceptions:

- 15 Since each recipient's message is handled as a separate Send, all the same Send Fax exceptions apply.

#### Relay Fax Request

##### Description:

- 20 The user can specify that the fax should be sent via a "relay point." This relay point must be another IFAX machine, since relay is not part of the adopted G3 standard or the 1992 proposed G3 enhancements.

Relay addresses can be stored in the Phonebook for easy access or created on the fly during each send operation.

#### 25 Options:

- Direct Relay Combinations allow users to specify recipients that reside on the relaying IFAX machine (the relay point) in combination with other relay recipients that reside at different fax numbers.
  - 30 • Multiple Relay Recipients can be specified so that the relay point is actually performing a Broadcast operation.
  - Nested Relay Recipients can be included so that one relay point will send a broadcast list to another relay point, and so on. This enables advanced document distribution over complex corporate networks.
- 35



- Discount Rate Relays control the time and costs of the relay point transfer. This option specifies that the Relay Point should forward the fax to the relay recipient during its discount rate period.
- 5 • Relay Confirmation Report returns a summary of receipts and failures to the original caller.
- Relay Password Security restricts access to relay point machines to callers that include a special password for fax relays. A different password may  
10 be required for each relay point.
- System Password Security restricts access to relay point machines to calling machines that share the same system password as the relay point.
- 15 • Automatic Relay Request allows the user to set up a system-wide table of automatic relays, as discussed in the Automatic Relay Request feature.

Procedure:

20 When a Relay Station is requested, the IFAX Machine sends the document to a Relay Station with the addresses of the intended recipient(s).

A Relay Fax Request consists of a Relay Station Address, a Relay List, a Relay Password and discount rate information. The Relay Station Address consists of a Name, a Fax Number and an alternate fax number. The Relay List consists of EFAX Addresses for each recipient.

25 To the Sender's IFAX Machine, the Relay Fax Request is handled like a typical Send operation. All the Send Options and Exceptions apply.

Once the relay station is connected, the calling system makes a relay request. The Relay Station checks the *Relay Password Security*. If this fails, it checks the *System Password Security*. If neither password is accepted,  
30 it returns an error report. However, if either of the passwords are correct, it accepts the documents.

Be sure to check for *Direct Relay Combinations*. In some cases, the message can be delivered to recipients that reside at the relay station even if the passwords fail for other relay recipients.

35 For information on how Relay Fax Requests are handled see the Advanced Fax Store and Forward section.

### Manual and Automatic Redial

#### Description:

Upon reception of a busy signal, the IFAX machine will automatically redial a prescribed number of times at a prescribed interval. The automatic redial flowchart is shown in Figure 103. If the IFAX fails to receive a fax tone from the destination x consecutive times, it will assume that this is not a fax phone number and will stop redialing.

This option will be settable for the entire system rather than on a per-user basis.

Each user will also have the ability to manually initiate a redial of a previously attempted job that is queued in the outbox or scanner.

#### Options:

- Number of Retries specifies the number of attempts to make before aborting the transmission.
- Redial Interval the number of minutes to wait in between attempts.

#### Procedure:

If a connection cannot be made, attempt to connect the Alternative Fax Number (if available). If the connection still fails, increment the redial count.

After each attempt, wait the number of minutes specified by the user in the *Redial Interval*. Random intervals of 10 - 50 seconds will be added on to this period to prevent glare situations.

When the redial count is equal to the *Number of Retries*, abort the operation and print an "Could not connect to recipient fax machine" Error Message.

30.

### Multi Access

#### Description:

The IFAX 10 is designed so that any activities that can be done at the same time without contending for the same hardware will be allowed. The set of simultaneous activities possible at any one time may be limited by system parameters, such as the available memory.

Multi Access also allows the system to continue to function even when a particular peripheral is not functional. For example, the system will continue to send and receive faxes (to the extent of available memory) even when the machine's printer is disabled (e.g., paper out, toner out, paper jam, door open, etc.).

Procedure:

There are basically four key components with regard to Multi Access: the User Interface, the Printer, the Scanner, and the Fax Modem. However, this section will also describe the Power On/Idle control flow, multi access handling of the Stop hardware key and multi user requirements of the Outbox. The power on and idle flowchart are shown in Figures 104 and 105.

The User Interface should be available at all times. Thus, all processes spawned by user commands work in the background, leaving the interface available to the user.

The remaining three components should be able to operate simultaneously. Thus, a given feature should be available if the components it needs are available. If they are not, the completion of the feature must be placed on hold.

Sometimes this will require that the User Interface display a dialog indicating that the operation is on hold. For example, if the user requests a copy while an incoming fax is being printed.

The following Table 1 describes the IFAX's capabilities at an internal system level:

User Foreground Tasks	Background Tasks												
	Send Fax From Scanner	Send Fax From Storage	Receive Fax and Print	Receive Fax and Store	Poll Retrieve Fax and Print	Poll Retrieve Fax and Store	Advanced Fax Store and Forward	Basic Activity Reporting	Remote Diagnostics	Remote Trouble Reporting	Copy	Remote Print from Windows	Routing EFAX Messages via Serial/LAN
Send Fax		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Receive Fax													✓
Poll Store		✓	✓	✓	✓	✓	✓	✓	✓	✓		✓	✓
Poll Retrieve	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
User/ System Administration	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Fax Mailbox Administration	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Run Application	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Basic Activity Reporting	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓		✓	✓
Copy		✓		✓		✓	✓			✓			✓
Remote Scan		✓	✓	✓	✓	✓	✓	✓	✓	✓			
On-Line Help	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

Table 1.

5 At Power On, the system should follow these steps:

- Initialize All Devices. Report any errors that occur.
- Perform Self Test. Report any problems that exist.

10

- Check For Power Interruption. If the machine lost power during an important operation, issue a *Power Interruption Report*.

15

- Initialize User Interface. If public user access is allowed, display the main menu. Otherwise, display the Sign In dialog.
- Enter Idle Mode

During Idle Mode, the system should:

- 5      • Check For Outgoing Transmissions every minute. Poll the Outbox every sixty seconds for outgoing faxes and redial operations.
- Monitor Fax Load balancing every five minutes.
- 10     • Check Night Timer (if included) every fifteen minutes to see if the printer engine should be turned off during certain hours.
- Re-Initialize User Interface every fifteen minutes. Sign out the current user. If public user access is allowed, display the main menu. Otherwise, display the Sign In dialog.
- 15     • Perform Quick Diagnostic Check every fifteen minutes. Report any problems that exist.
- 20     • Check Automatic Reporting every fifteen minutes. Route reports if the automatic reporting interval has passed.

Multi Access complicates the handling of the Stop hardware key.

---

Follow these steps whenever the Stop key is pressed:

- 25      • Does Stop apply to the action the user is currently performing? For example, is the user copying a document? Are they recording a quick key sequence? If so, stop the user's current action.
- 30      • Does Stop apply to a background task owned by the current user? For example, is a job currently being transmitted that was queued as *Send From Memory*? If so, display a dialog asking the user if they'd like to interrupt this task, cancel this task or continue working.
- 35      • Does Stop apply to a background task owned by another user? For example, is a job currently being transmitted that was queued by another private user? If so, display a dialog that says "You do not have authorization to interrupt this transmission."

Multi Access also complicates the functionality of the Outbox. IFAX platforms support an Inbox/Outbox messaging model. All immediate outgoing, scheduled outgoing, poll store, persistent poll retrieve and relay messages are stored in the system Outbox until they are ready for transmission (in the case of immediate outgoing messages, this is usually a very brief time period). They are removed from the Outbox once the messages have been successfully delivered or redialed to failure.

The System Outbox can be filtered in four different ways:

- 10     • Private Outbox filter is used once someone signs in. The Outbox only shows messages owned by the current signed in user and publicly available messages.
- 15     • Public Outbox filter is used when no one is signed in. The Outbox shows all publicly available outgoing messages.
- 20     • Relay Outbox filter shows messages from other machines that are being stored and forwarded.
- 20     • Administrator Outbox shows and provides access to all messages in the System Outbox when a user with administrative privileges signs in.

---

### Immediate Scan

#### Description:

25             In order to reduce the time required to send a fax, the IFAX machine can begin scanning the document into memory immediately after the start button has been depressed.

When this feature is disabled, the system will wait until it attempts to connect with the recipient before beginning to scan.

30

#### Options:

- Send From Memory turns off immediate scan. Each fax is scanned completely into memory before being transmitted.
- 35     • Broadcast Fax automatically turns off immediate scan. *Send From Memory* is always used for broadcasts.

### Full G3 Compatibility

#### Description:

The system will offer full backward compatibility with the existing worldwide G3 Fax Network.

5

#### Options:

- Error Correction Mode (ECM) for highly accurate image and data transmission.
- 10 • Page Retransmission Mode for re-transmission of corrupted pages.
- 1D and 2D Data Compression and Encoding Modes, including Modified Huffman (MH), Modified Read (MR), and Modified Modified Read (MMR) fax data encoding and decoding.
- 15 • Voice Request on machines that support this feature.
- Image reduction to accommodate different send and receive paper sizes.
- 20 • 8 minute close (for the German market)

---

### Copy Document

#### Description:

25 The user will be able to make copies of documents by inserting the document in the IFAX document feeder and pressing the copy button. The copy document setup flowchart is shown in Figure 106. The copy document control flowchart is shown in Figure 107.

#### Options:

- 30 • One Step Copy automatically makes one copy at the currently selected resolution when the user touches the Copy button. When this option is off, an additional dialog lets the user set these other options below:
- Number of copies, supported on machines with sufficient memory.
- 35 • Resolution, Contrast and Halftoning See the High Resolution Scan, Print, Send & Receive section for details.

- Image enhancement removes stray pixels from scanned copy images.
- Reduction/enlargement provided for certain paper sizes.

5

**Procedure:**

If *One Step Copy* is on, begin the copy operation with *Number of Copies* = 1 and use the currently set *Resolution*, *Contrast* and *Halftoning* modes. Otherwise, begin the copy operation when the user presses Start (following the  
10 Copy settings dialog box).

If there is no document in the feeder, display a "Please Insert Document" dialog box. Continue when a document is inserted.

Scan and copy the document according to the settings (either from the Copy settings dialog or the *One Step Copy* instructions).

15 If *Number of Copies* is greater than one, collate the copies. In other words, while making the first copy, store the entire document in memory to make the remaining copies.

If *Image Enhancement* is on, follow the steps described in the Image Enhancement For G3 section.

20

**Exceptions:**

Document Cover Open	Display a "Close Document Cover" dialog box.
Memory Full	Display a "Memory Full. Can only make one copy" dialog box. i.e. There is not enough memory to collate multiple copies.
Paper Jam	Display a "Paper Jam" dialog box.
Paper Out	Display a "Paper Out" dialog box.
Power Off	At next Power On, clear the paper feeder.
Stop	Abort the operation. Clear the paper feeder.



### Programmable Function Keys (Autokeys)

#### Description:

The user will be able to record software macros for single step execution from the top level menu. The Autokey recording flowchart is shown in Figure 108. Entire send or broadcast sequences can be easily recorded and repeated at the touch of a button.

#### Options:

- Start begins execution of selected Autokeys.
- Record allows the user to record a new Quick Key macro.
- Remove removes a Quick Key sequence.

#### 15 Procedure:

Quick Key sequences should be executed as if the user was pressing each button. This should be a simple procedure. If the user presses *Stop* during a Quick Key sequence, display a dialog "End Quick Key sequence x?"

Recording Quick Key sequences is a bit more complicated. When in Record mode, the status indicator of each screen and dialog should show "RECORD". When the user presses Start or Stop, terminate the record sequence.

~~Ask the user if the sequence just recorded should be set for public access. If not, this is a private key sequence (visible only when the current user is signed on).~~

25

### Advanced Document Transmission

#### High Quality Renderable Document Transmission

#### Description:

The user will be able to send a renderable document, one that can be printed on IFAX machines and EFAX PCs with high quality. When this option has been specified and the IFAX is communicating with a G3 fax machine, the IFAX will render the document into G3 format using the highest resolution supported by the receiving fax machine.

#### 35 Procedure:

This feature refers to the ability of an EFAX PC to render a document for transmission from an IFAX connected via LAN/Serial interface.

The IFAX can transmit and render the Jumbo data to other fax machines, including G3 and IFAX.

### Editable Document Transmission

#### 5 Description:

The user will be able to send a native format document (binary file) to the recipient. The IFAX will send such documents without regard to their contents. If the IFAX encounters a G3 fax machine, it will abort transmission and inform the sender of the failure and reason.

10 The user can also choose to send both a renderable and editable version of a document, if they so desire.

#### Procedure:

The IFAX can transmit Editable documents as binary Attachments.  
15 The IFAX will send such documents without regard to their contents. Only EMAX aware recipients will be able to receive the binary attachment.

Each binary attachment should be counted as a single page at the end of the document. The Fax Viewer and the Mailbox will allow users to transfer these binary attachments to their PC's using the Mailbox Feature Save to  
20 Floppy.

---

#### Exceptions:

If the IFAX encounters a G3 fax machine, render a short message stating that a binary attachment could not be transmitted.  
25

### Support for Different Message Types

#### Description:

The IFAX machine and EMAX protocol will be designed to support  
30 the sending and receiving of documents that consist of multiple parts, each of which may contain different media types.

Some messages will contain binary Attachments of different types. Other messages will contain Phonebook information, Custom Cover Sheets, Configuration Settings, etc.

35 Some of these message types will be automatically recognized and acted on by the system while others will require the user to extract elements from

each of these message types. Most of these message types will have to be defined in the Remote Access section.

### Digital Cover Sheets

#### 5 Description:

IFAX platforms can automatically generate digital cover sheets with custom styles and fax header information.

10 In communications between two IFAX 10 machines of the same construction, the cover sheet will be generated at the recipient's machine from message header information and the style template, contained as a message part. This will save transmission costs. However, when transmitting to G3 fax machines, the IFAX machine will render the cover page to a G3 format for transmission.

15 Unless the system also supports the Multiple Digital Cover Sheet Administration feature, the machine will probably ship with only one default Cover Style.

#### Options:

- 20 • Customized Style defined by a cover page template editor. This style will affect the layout of the cover page and the remaining options.
- Recipient List includes recipient names, fax numbers, phone numbers, (different cover styles display the list differently), To:'s and Cc:'s.
- 25 • Personal or Corporate Logo, not supported on low end fax machines, the cover page template can include a small corporate logo on each cover page
- Time and Date displays the time and date of the transmission.
- 30 • Number of Pages displays the number of pages transmitted and (if known) the number of pages the user specified.

#### Procedure:

35 If the *Include Digital Cover Page* option is on, insert a digital cover page as the first page of the document. If you are communicating with an

intelligent machine, transmit the cover template, otherwise (if G3), render the template to the current resolution.

It can include the following dynamic fields from the transmission:

- Sender's Name, Company name and Address, Phone Number and Fax Number
- Sender's cover page bitmap or default IFAX Logo
- Recipient List with To:/Cc: designations
- Time and Date
- Number of Pages
- List of Binary Attachments/Enclosures as "Encl: "

Cover sheets will be created with a Windows Cover Page Template Editor Applet. The editor will support dragging and dropping of text, picture objects and dynamic fields onto a blank cover sheet.

- Text can be any caption in a user selectable font & style placed anywhere on the page. Picture objects are any OLE compatible bitmap format that can also be placed anywhere on the page. And finally, Dynamic Fields are like those listed above: Name, Company, Recipient List, Time and Date, Number of Pages etc. The dynamic fields are filled in differently for each transmission whereas the other objects are static. Note: custom fonts may be substituted by default font styles on other IFAX Machines.

### Multiple Digital Cover Sheet Administration

#### Description:

- The IFAX 10 supports a library of cover sheet styles. Each can be used for different tasks, formal, informal, confidential, personal, corporate, etc. Once created on a Windows Cover Page Template Editor, Cover Sheets can be downloaded to IFAX machines, transmitted to other intelligent platforms, etc. Each user can maintain a private library of cover sheets in addition to the publicly available cover sheets on their system.

When a user sends a message, they will be presented the option of including a cover page. If the select "yes," they can accept the default cover

page specified during the user setup process or select an special purpose cover page.

Options:

- 5      • Install adds cover sheet styles to the public or private library on a given IFAX Machine.
- Remove deletes cover sheet styles from an IFAX Machine.
- 10     • Enclose allows users to send .CPX files to other users so that they can share and exchange cover sheet styles.
- Print allows users to print a copy of the cover page template before using.
- 15     • Preview allows users to see the cover page template on the LCD display before using or printing.

Procedure:

- IFAX platforms support the storage of Multiple Digital Cover
- 20    Sheets. Users can add or remove cover sheets to a private or public library of system cover styles. The cover page installation flowchart is shown in Figure 109.

- When new cover styles are installed, display a "Allow public access?" dialog. If the user presses no, then the cover style should be added to
- 25    the user's private list instead of the public list.

Automatic Relay Fax Request

Description:

- The system will optionally support automated routing of faxes via
- 30    selectable relay points. Administrators can establish that either all messages should be routed via a relay point or that messages with particular area codes or country codes should be relayed.

If the relay is unsuccessful, the system can be configured to either retry the relay point at a later time or attempt to send the message directly.

- 35            For more information, see the Relay Fax Request feature description.

#### Options:

- Default Relay Point specifies that all outgoing transmissions should be sent through this relay point.
- 5     • Relay by Prefix specifies that outgoing transmissions should be routed through various relay points according to their prefix.
- Send Directly After Failure specifies that the machine should try to send the message itself if the relay connection fails.

10

#### Procedure:

The automatic relay flowchart is shown in Figure 110. With each outgoing transmission, compare the prefix to those in the Automatic Fax Relay Request List. If they match, automatically re-route the transmission through the

15

relay point. If a *Default Relay Point* is specified, route all transmissions through this relay point. Note: *Relay By Prefix* settings have preference over the default.

20

If any of the relay connections fail and *Send Directly After Failure* is specified, transmit the document directly to the destination.

See the Relay Fax Request section for more information.

---

#### Advanced Fax Store and Forward

##### Description:

25

The system will be able to accept relay requests described in the Relay Fax Request and Automatic Relay Request features. Forwarding requests can be of the following types:

30

35

- Direct Relay Combinations allow users to specify recipients that reside on this relay point in combination with other relay recipients that reside at different fax numbers.
- Multiple Relay Recipients can be specified so that this relay point will actually perform a Broadcast operation.
- Nested Relay Recipients can be included so that this relay point will send a broadcast list to another relay point, and so on. This enables advanced document distribution over complex corporate networks.

- Discount Rate Relays control the time and costs of the relay point transfer. This option specifies the relay execution should wait until the discount rate period begins.

5

#### Procedure:

The IFAX 10 can operate as a Relay Station to provide Advanced Fax Store and Forward capabilities. The Relay Station accepts incoming Fax Relay Requests and then forwards them to the designated recipient(s). The advanced store and forward flowchart is shown in Figure 111.

When the Relay Station receives the Relay Fax Request, it must first verify the caller's relay access rights. Compare the *Relay Password* to the relay station's *System Password*. If they don't match, compare both system's *System Password*. If they don't match, issue an error report.

Be sure to check for *Direct Relay Combinations*. In some cases, the message can be delivered to recipients that reside at the relay station even if the passwords fail for other relay recipients.

If either of the passwords match, accept the relay message and store it in the Outbox. If *Discount Rate Relay* is specified, store the message in the Outbox until the start of the discount rate period.

As soon as the phone line is available, begin broadcasting the message to members of the Relay List. Since this operates as a normal Broadcast operation originating from the Relay Station, all of the Broadcast procedures should be used including Intelligent Fax Queuing, Automatic Relay Fax Request and Fax Load Balancing checks.

If the original sender requested a *Confirmation Report*, print a Confirmation Report when the Relay Station accepts the fax. Once the Relay Station delivers all the messages, send back a Relay Confirmation Report to the original Sender (using the return relay address, still an open issue).

Relay Stations can also be Polled for the transmission status of Relay Messages. See the Check Relay Status section of the Polled Fax Retrieve feature.

For more information on Fax Relay Requests, see the Fax Relay Request section.

35

## Exceptions:

Password Invalid	If neither the <i>Relay Password</i> or the <i>System Passwords</i> match, return an Error Report to the Sender stating that they have no Relay Access on this Relay Station.
Relay Delivery Failure	If the Relay Station cannot successfully relay the message to its destination(s), send back a Relay Failure Report to the original Sender.

Intelligent Fax Queuing and Multicasting

## Description:

5 IFAX platforms will automatically consolidate faxes headed to the same destination into one fax transmission. This will send multiple messages in a single call, saving connection charges.

When a single fax is sent to multiple recipients associated with a single destination IFAX machine, that fax will be sent only once and distributed  
 10 to each user by the destination IFAX machine (only supported during transmissions between two IFAX 10 of the same construction).

## Procedure:

The intelligent facsimile queuing and multicasting flowchart is  
 15 shown in Figure 112. Whenever a fax number is about to be dialed, the system Outbox should be checked for other faxes waiting to go to the same destination, this includes recipients at a common fax number on the initial message.

Transmissions scheduled for discount rates should never be consolidated with transmissions made during peak hours.

20 We should be careful about consolidating Secure faxes without maintaining the same high level of security.

Separate Confirmation Reports should still be generated for each consolidated fax message.

25 Fax Load Balancing

## Description:

IFAX platforms will automatically monitor system loads and reallocate jobs across a Local Area Network when necessary. When a machine becomes heavily loaded, it will send a message to other machines looking for



assistance. When another available machine responds, the IFAX machine will transfer outgoing fax messages to this available machine via a simple relay request.

## 5 Procedure:

The load balancing flowchart is shown in Figure 113. When there are more than five outgoing faxes (scheduled for as soon as possible) waiting in the Outbox, send out a request for assistance over the LAN to each of the IFAX Machines in the Load Balancing configuration list. This list must be set up in advance by a user or system administrator. Each machine must have identical system passwords.

If the requesting IFAX is listed in the other IFAX Machines' Fax Load Balancing List, they will respond with a Load Factor message. This shows the number of messages on their queue.

The requesting IFAX can then distribute the overloaded messages via LAN to the other IFAX Machines. An IFAX Machine should use caution not to overload another IFAX Machine's queue more than its own. The number of messages distributed should not force the destination machine's Load Factor over five messages.

The request is called a Load Balance Transfer Request. If the machine accepts the Transfer Request, it will send a confirmation to the original machine. If the confirmation message is not received within ten minutes, assume that the transfer request failed (was denied). This should assure that messages do not get lost while between two machines. Therefore, don't delete the message from the Outbox until the Transfer Request confirmation has been received.

Once the messages have been transferred to the other IFAX Machines, they behave just like Relay Fax Requests. So status and confirmation work similarly to the Advanced Fax Store and Forward section.

IFAX Machines cannot make Transfer Requests on messages that they have accepted from other IFAX Machines. This should prevent a glare situation on the network.

Alternatively, the IFAX 10 could make a Load Balance Transfer Request based on the size of the outgoing facsimile messages or the time required to transmit the outgoing facsimile messages.

**Exceptions:**

Network IFAX No Permission	If the requesting IFAX Machine is not listed in the Network IFAX's Fax Load Balancing List, permission will be denied. An Error Report should be sent to the System Administrator.
Network IFAX Not Found	The IFAX Machine in the Fax Load Balancing List was not found on the network. Send an Error Report to the System Administrator. Put the original message back in the IFAX Machine's own queue.
Transfer Request Denied	If the destination Load Balancing machine denies the transfer request, attempt to transfer jobs to other machines.

**Fax Stacking****Description:**

- 5 When the IFAX machine's document feeder contains a fax message that is either being scanned or waiting to be scanned, the user will be able to "stack" another fax on top of the currently loaded sheets. The first page of a stacked message must be an OMR-coded IFAX cover sheet, from which the system will determine the message's sender and recipient.

10

**Procedure:**

When scanning the top of each page, check for the OMR mark at the top left of the page. If the mark is found, the previous job should be completed and the OMR job started next.

15

**Exceptions:**

Missing Information	If the OMR Engine cannot locate parts of the data, the fax should be fed through until another OMR Cover Page is found. An Error Message should be printed after the fax is fed through indicating that it was not sent.
Paper Stuck	If the last page of one fax feeds in with the OMR Cover Page of the next fax, we might accidentally transfer documents to an incorrect destination.

### Alternative Number Calling

#### Description:

The user may specify an alternative number to send a fax to if the first number is busy or otherwise unavailable. The alternative fax number is part  
5 of the standard intelligent fax address type.

#### Procedure:

If a Send, Broadcast, Poll Retrieve or Relay Fax Request is unable to connect to a remote machine (No Carrier), it should try the Alternative Fax  
10 Number entry of the Recipient Address (if available) before incrementing the Redial count.

Each subsequent retry should try both the standard fax number and the alternative fax number in that order. For more details, see the Manual and Automatic Redial feature description.  
15

### Fax Outbox Management

#### Description:

The user will be able to view a list of all messages queued for transmission and perform the following actions:  
20

- 
- View Messages allows users to use the previewer to look at outgoing messages and see the status of the transmission.
  - Print Messages prints copies of outgoing messages.  
25
  - Cancel A Fax aborts outgoing fax messages and cancels persistent poll retrievals.
  - Edit A Fax allows users to change the recipient list and fax settings of outgoing transmissions.  
30
  - Manual Redial specifies immediate redial of outgoing messages.
  - Sort orders outgoing faxes by recipient or status.  
35

### Received Fax Preview

#### Description:

The system will support viewing fax messages held in the user's mailbox. Users will be able to select from several viewing modes, including full  
5 page, and actual size. The quality of viewing in these modes will depend upon the resolution of the IFAX machine's screen and the fax message.

#### Options:

- 10 • View Messages allows users to look at received faxes, zooming in or out on specific areas and providing special handling of binary attachments.
- Print Messages prints copies of received faxes.
- Delete removes messages from the Mailbox.
- 15 • Save copies the message and attachments to a peripheral drive (e.g. floppy)
- Forward lets users send messages on to other recipients.
- 20 • Sort orders received faxes by sender or status.

---

### Remote Access

#### Description:

25 Users will be able to control features of their IFAX 10 from remote locations using Windows PC's connected via serial or through any PSTN interface using an IFAX or EFAX PC.

#### Options:

- 30 • Fax From Windows allows users to send, receive, broadcast, poll, etc. from a Windows platform using an IFAX Machine as a gateway.
- Remote Printing From Windows allows users to print documents from Windows using the IFAX Machine.
- 35 • Remote Scanning From Windows allows users to scan documents to their PC using the IFAX Machine.

- Remote Mailbox Control allows users to browse their mailbox, view, print and retrieve files remotely.
- 5 • User Administration allows users to setup the preferences from a remote location. Users will be able to access all features described in the User Administration feature description previously described in connection with Figure 61.
- 10 • System Administration allows administrators to configure and monitor a single IFAX 10 or entire network of IFAX Machines from a Windows PC. System administrators will be able to access all features described in the System Administration feature description.

15 The system will support such remote connections via all available and appropriate external interfaces e.g., PSTN, LAN, and serial connections (including those with attached external data modems - this connection method is considered low priority for the first release).

## 20 Voice Playback and Record Support

Description:

---

25 The IFAX 10 will provide the ability to install voice playback and recording hardware, as would be used in a fax-on-demand application. The hardware vendor will be responsible for developing the system driver to support this functionality and the application that uses this functionality. The IFAX software will provide system level support, which includes storing and accessing sound files and delivering these files to the sound device driver.

30 The installation of such systems can have potentially significant impact on system hardware requirements. These include additional system memory, hardware to decompress and play sound files, hardware to receive microphone input and convert it to sampled, compressed sound files, and the ability to distinguish between voice and fax incoming calls.

## Secure Transmission and Reception

### 35 Document Encryption

Description:

The system will allow users to encrypt fax transmissions to guard against reception of readable documents by unintended recipients.

Procedure:

- 5           If the *Encryption* option is on, the contents of the document is encrypted with the public key of the Recipient(s). The encryption process must be done separately for each Recipient.

- If the Recipient's Public key is stored with their address, the encryption can be done before the call is initiated. Otherwise, the encryption may  
10   have to occur on the fly once the key has been obtained.

          The Public Key should be stored for later use with the Recipient's Address.

Document Authentication

- 15   Description:

          The IFAX 10 has the ability to verify the identity of the sender and recipient before transmitting the fax message.

Procedure:

- 20           If the *Authentication* option is on, the document should be encrypted with the private key of the sender and attached to the sender's Digital Certificate.

          The Digital Certificate is a copy of the sender's Public Key encrypted with the Private Key of the IFAX Security Authority.

- 25           The Recipient can then verify the identity of the Sender by decrypting the Digital Certificate with the Public key of the IFAX Security Authority and using it to decrypt the document.

          The Authentication process can occur before the call is made since all the necessary keys should be available.

30

Digital Signature

Description:

- The system will have the ability to include a checksum (or conceptual equivalent) to verify that the received document contents are the  
35   same as those sent by the sender.

Procedure:

If the *Digital Signature* option is on, the document should be processed through an IFAX hashing algorithm. The resulting hash code should be encrypted with the Public Key of the Recipient(s).

- 5       The receiving IFAX Machines run the document through the IFAX Hashing algorithm as well and compare their hash code result to the hash code they decrypt with their private key.

If the hash codes are identical, the document has not been tampered with.

- 10       The Hashing can be done before the call is made but the encryption of the hash code must be done when the Recipients' Public Keys are available (possibly before the call).

Send, Receive, and Relay Access Restriction

15   Description:

This feature allows users to place restrictions on the external fax machines that can communicate with their fax machine.

Options:

- 20       • Restrict Transmission To Phonebook List prevents users from sending to members outside the phonebook. This can prevent mis-dialing as well as unwanted long distance calling. Of course, users can override this by adding members to the phonebook.
- 25       • Restrict Reception By Phonebook List prevents junk fax by restricting accepted faxes from members of the phonebook.
- 
- 30       • Restrict Reception By System Password restricts reception of faxes to machines that have the same system password, usually a small closed network of machines.
- Remote Procedure Calls Allowed turns on/off remote access to the fax machine.
- 35       • Relay Passwords prevent outside callers from using fax relay features without specifying a specific password.

### User Access Restriction

#### Description:

Users and administrators can create password-protected personal mailboxes for receiving and storing faxes. IFAX platforms also support  
 5 personalization of user account settings and preferences. Users can access these personal mailboxes and settings by signing in to the IFAX Machine.

#### Options:

- 10 • Sign In personalizes the system according to the user's preferences and provides them access to their personal mailbox.
- Sign Out returns the system to its default mode, restricting access to secure mailboxes.
- 15 • Public Access allows the system to be used without signing in. Public access provides the same functionality as personalized access without the security.

#### Procedure:

20 The sign in flowchart is shown in Figure 114. At *Sign In*, request a password to verify the user's identity. If the password is correct, check to see if the user has any new unread messages. If so, display the "You have x unread messages" dialog.

25 Switch the main menu Mailbox status indicators so that they indicate the status of the personal Mailbox. Adhere to personal preferences specified in the User Level Administration section.

If the system has been idle for fifteen minutes, automatically sign out any logged-in user. The sign out flowchart is shown in Figure 115.

### 30 PC Connectivity

#### Automatic Inbound Routing

#### Description:

The IFAX 10 support automatic routing of incoming messages. When a fax message is received from another IFAX machine or a G3 message is  
 35 received that includes an OMR cover sheet, that message will be routed to the destination specified by the recipient.



## Options:

- Print Received Faxes specifies that incoming faxes should be printed.
- 5      • Store In Mailbox specifies that incoming faxes should be stored in the recipient's own mailbox.
- Forward To PC actually routes the faxes directly to the recipients PC via LAN or Serial.
- 10      • Forward To Tool Application routes the fax to a specific Tool Application for special handling.

Support for Automated G3 Inbound Routing Software

## Description:

- 15      The IFAX 10 can support different methods for inbound routing of G3 faxes.

## Options:

- 20      • Optical Mark Recognition (OMR) determines recipient's from marks on a special cover page.
- Optical Character Recognition (OCR) converts cover page to text and searches for the recipient's name.
- 25      • Direct Inward Dial (DID) provides each fax user a unique fax phone number. Many such phone numbers are mapped by the telephone company's switch onto a physical telephone line. When an incoming call is answered, the central office sends touch tones that represent the number being called.
- 30      • Dual Tone Multifrequency (DTMF) prompts the sender to enter touch tone digits to identify the fax recipient when a fax call is answered.
- 35      • G3 Sub-addressing Field supports future extensions of G3 that identify recipients.

- Route To Special Mailbox specifies that G3 and unknown faxes should just be routed to a particular mailbox where they will be handled manually.

5 Procedure:

If *Route To Special Mailbox* is selected, the all unknown faxes should be routed to the specified mailbox.

Otherwise, unknown faxes should be routed to the specified Toolbox Application. The Application will then handle the routing as above.

10

Automatic G3 OMR Cover Sheet Recognition

Description:

The system will automatically scan received G3 messages and detect whether the first page is an IFAX-compatible OMR cover sheet. If so, it will do the following:

15

1. Read the OMR-coded information (including at least the sender and recipient name)

20

2. Determine whether the recipient is a valid IFAX user.

3. If so, route it in the manner designated by that user for all incoming messages. The sender's name decoded from the OMR marks will be displayed in the incoming fax log.

25

4. If the decoded recipient is not a valid user or the system is unable to decode the recipient from the cover page, the message will be routed to a mailbox designated for such messages by the system administrator.

30 Procedure:

Scan the upper left corner and look for an OMR identifying symbol. If the symbol is not present, this is not an OMR cover page.

Scan the OMR bar code and determine what kind of form this is. Scan the fields and form appropriately and return the information to the calling application.

35

Local and Remote Administration

## User Level Administration

## Description:

IFAX platforms will let individual users personalize their system and maintain a secure mailbox for storing messages. Because IFAX platforms are consumer devices, we do not assume that an administrator is necessary. Therefore, individual users can also change system settings listed in the System Administration section.

## Options:

- Create/Edit Personal Mailbox allows the user to set up a secure personal mailbox for receiving and storing fax messages. Also lets the user fill in their EFAX Address information.
- Security Keys allows the user to obtain, add and remove their RSA IFAX Public Security Keys.
- Handling of Incoming Faxes allows the user to select from among the routing options described in the Receive Fax feature description.
- Preferred Initial Screen allows the user to select a default initial screen.
- Cover Page Styles allows the user to modify the public and private Cover Style library.
- Phonebook allows the user to modify the public and private phonebook list.

## Procedure:

If a user *Creates A Personal Mailbox*, create a mailbox file for them on the hard disk. Add their name and password to the accounts list. Also, add their name and address to the public phonebook.

In *Security Keys*, if the user chooses to change their public key, dial the Key Authority and issue a change key request. Delete the old key and store the new key. If the user chooses to print the key, render a fat bits image of the 512 bit key. Ask the user if they want to remove the key from the system so they are holding the a secure paper copy. If so, delete the key from the system.

They can always re-install the key by scanning the paper copy. Use OMR to scan fat bit security keys into memory.

The *Preferred Initial Screen* should be displayed at Power On, after a transmission operation has been successfully Started (by user pressing  
5 Start), or after fifteen minutes of idle time.

When the user asks to install *Cover Page Styles*, search the mailbox and peripheral drives for cover page files or attachments. For each one, ask the user if they want to install it and whether it should be public or private access. If they do install it, add it to the Cover Page Style list.

10 For comments on *Incoming Fax Handling*, see the Receive Fax section. For comments on *Phonebook*, see the Phonebook Maintenance section.

Exceptions:

Duplicate Mailbox Name	If a user tries to create a mailbox with a name that already exists, display a "Duplicate Mailbox Name" dialog and force them to change the name somewhat so that there is not an exact match.
------------------------	--

15 System Administration

Description:

IFAX platforms support changing of System settings and other Administration functions by individual users or administrators. Because IFAX platforms are consumer devices, we do not assume that an administrator is  
20 necessary. Therefore, at first, individual users can change most of these feature settings. Later, experienced users can add higher levels of security very easily.

Options:

- 25 • IFAX Identification Information allows the changing of TTI, RTI and CSI-equivalent fields.
- Time and Date sets the system clock.
- 30 • Discount Rate Period sets the starting time for discount rates or lets the IFAX Machine determine this automatically.

- Automatic Redial sets the number of retries and redial interval.
  - Phone Line Settings sets the dial mode (pulse/tone) and other settings.
  - 5 • Mailbox Accounts lets administrators configure and remove mailbox accounts.
  - Administration Mode turns on more of the security features. Administration mode can limit system settings to particular users.
  - 10 • Touch Screen Calibration allows setup and re-calibration of the touch screen display.
  - Access Restriction sets the transmission and reception restrictions.
  - 15 • Automated Store and Forwarding sets default relay stations.
  - Automated Activity Reporting sets the frequency and destination of automated activity reports.
  - 20 • Automated G3 Routing sets the handling for G3 and unknown faxes.
- 
- Fax Load Balancing sets the network for Fax Load Balancing.
  - 25 • Fax Overflow sets the handling of fax overflow situations.
  - Remote Trouble Notification sets the user and location for remote trouble reporting.

### 30 Procedure:

The *Administration Mode* dialog is the most important since it allows administrators to restrict access of some system activities. In order to access this feature, users must present the system access code or already have administrative privileges.

### Phonebook Maintenance

#### Description:

The phonebook 62 (see Figure 62) allows users to quickly send to commonly used fax destinations. Phonebook entries are entered by the users directly or automatically during send and receive operations.

#### Options:

- Public/Private entries are separated in the address book so that each user can have his own private list.
- Group Addresses are supported so that users can pre-program commonly used broadcast lists.
- Relay Addresses are supported for simplifying complex fax network transmission.

#### Procedure:

Each Phonebook has three types of entries: Single Recipient entries, Group entries, and Relay Station entries.

Single Recipient entries consist of the following:

- Name
- Fax Number
- Alternative Fax Number
- Voice number
- Company Name/Comment
- Street Address
- Technical Protocol Parameters

Group entries consist of:

- Group Name
- 5 • Member List of Phonebook entries (Single Entry, Group, or Relay Station)

Relay Stations consist of:

- 10 • Relay Station
- Relay Fax Number
- Relay Alternative Fax Number
- 15 • Relay List of Phonebook entries (Single Entry, Group, or other Relay Stations)
- Relay Password
- 20 • Relay Discount Rates Setting

When users change a phonebook entry, check all outgoing faxes to see if they are affected. Before changing the entry, ask the user if the outgoing  
25 fax addresses should be updated.

Exceptions:

Duplicate Address	If a duplicate address is entered, display a dialog to the user. Do not create a copy.
Duplicate Name	If just the Name is duplicated, display a dialog to alert the user that there is a name entry with multiple fax numbers.
Phonebook Corrupted	If the Phonebook is corrupted, incomplete entries should be printed in the Error Report and then erased.

Phonebook Full	If the Phonebook becomes full, a dialog should alert the user that no more entries can be added. No additional EFAX Addresses from Received Faxes should be added to the Phonebook.
----------------	---

### Fax Overflow

#### Description:

5 The IFAX 10 allows users or administrators to designate how the system should respond when there is insufficient storage space to receive and store another fax message.

#### Options:

- 10 • Alert User/Administrator will send a message to this person that the fax is in overflow mode.
- Don't Answer will prevent other faxes from coming in.
- 15 • Route To PC presents messages to a PC attached to the IFAX via Serial/LAN

20 The system will also display a "Fax Overflow" dialog box on the LCD indicating that the fax can no longer receive messages due to the overflow condition.

#### Procedure:

If a fax overflow condition occurs, display a "Fax Overflow" dialog box. Redisplay the dialog every fifteen minutes as necessary. Notify the user specified about the overflow condition.

25 If *Don't Answer* is specified, don't answer the phone if it rings. Otherwise, route incoming messages to a PC attached via Serial/LAN (running special IFAX software).

### On-line Help

#### 30 Description:

The user will be able to access help information at all times. When users press the Help button, help specific to the operation being performed will



be presented (context-sensitive help). The user will also be able to access an index of available help and search for help on a particular subject.

### Activity and Trouble Reporting

#### 5 Basic Activity Reporting

##### Description:

The IFAX 10 provides the following reports automatically:

- 10 • Activity Report (TCR) describes each fax reception/transmission.
- Reception Report announces each fax reception.
- Transmission Confirmation Report describes the final status of each transmitted message.
- 15 • Error Report describes any errors that occur in the system.
- Communication Failure reports any line failures that occur during transmission and reception.
- 20 • Power Failure Report notifies the user of any power interruptions and what actions they may have disturbed.
- Relay Result Report details the final results of a relay operation.
- 25 • Poll Store Report printed when a document is stored for later retrieval.
- Poll Result Report printed when documents are retrieved from a remote fax machine.
- 30 • Poll Clear Report printed when a stored poll file is removed from the system.

35 request: The IFAX 10 can provide the following reports at the user's

- Activity Report (TCR) provides a break down of each fax transmission and reception. This can be filtered by user and/or department code. It also includes the value of each system counter.
  - 5 • Diagnostics Report provides the results of a self-test on any group of available system components.
  - Phone List contents of private or public phone listings.
  - 10 • Quick Key List shows each of the names of private or public programmable functions.
  - Mailbox Account List shows the names of each the mailbox owners and the current status, number of read/unread messages, percentage capacity remaining, etc.
  - 15 • File List shows a public and/or private breakdown of all the documents stored on the system.
  - 20 • User Settings summarizes all of the current user preferences.
  - System Settings summarizes the current system configuration.
- 

### Remote Trouble Reporting

#### 25 Description:

An alert message will be sent to an address specified by the system administrator (either email address or phone number) that a problem has been detected with the IFAX machine. Each error will also be logged for reporting purposes.

30

#### Options:

- Diagnostic Failure on power up or periodic test
- Off-line for more than a specified period (e.g., open lid, detached phone line, phone off-hook, etc.)
- 35 • Out of Paper

- Toner Low
- Paper Jam
- Persistent Line Failures
- Persistent HDLC Transfer Errors
- Persistent Remote Terminal Incompatibilities
- Apparent Unauthorized User Access Attempt
- Persistent Out of Memory Condition

It is to be understood that even though various embodiments and advantages of the present invention have been set forth in the foregoing description, the above disclosure is illustrative only, and changes may be made in detail, yet remain within the broad principles of the invention. Therefore, the present invention is to be limited only by the appended claims.

Claims

1. A method in a facsimile machine for facsimile communication, the method comprising the steps of:

(a) displaying a plurality of menu options on a touch-sensitive display, each of said menu options having a corresponding predetermined location on said display with each of said predetermined locations being sensitive to the touch of a user, each of said predetermined locations including a label corresponding to said menu option;

(b) displaying an instruction to the user on a portion of said display;

(c) sensing a user input in proximity with said display in one of said predetermined locations on said display in response to said instructions; and

(d) in response to sensing said user input, activating a facsimile function corresponding to said user input.

2. The method of claim 1 for use with a facsimile having a hardware keypad with a plurality of buttons, with at least one button corresponding to one of said predetermined locations, the method further including the step of sensing a user input on the hardware keypad, and in response to sensing said user input on the hardware keypad, activating a facsimile function corresponding to said user input.

3. The method of claim 1 wherein step (a) of displaying said plurality of menu options is initially performed by displaying a main menu listing with a plurality of categories of said plurality of menu options, with each category having one of said predetermined locations on said display to permit the user to select one of said categories from said plurality of main menu categories.

4. The method of claim 3 wherein said plurality of main menu categories comprises sending a facsimile message, examining received facsimile messages, changing parameters of the facsimile machine, selecting preprogrammed sequences of facsimile functions, and a sign in option to log in the user.

5. The method of claim 4 wherein said step (d) of activating said facsimile function causes the display on said display of the ones of said plurality of menu options in said selected menu category.

6. The method of claim 1 wherein said plurality of menu options are system parameters, said step (c) of sensing said user input senses a particular one of said system parameters selected by the user.

7. The method of claim 6 wherein said particular system parameter is selected by touching a first time said predetermined location on said display corresponding to said system parameter and said particular system parameter is subsequently deselected by touching said predetermined location on said display corresponding to said system parameter a second time.

8. The method of claim 1, further including displaying at least a first scrolling control on said display and a screen indicator movable on said display in a direction indicated by said label corresponding to said scrolling control, the method further including the steps of sensing said user input on said display in a predetermined location corresponding to the location of said scrolling control and moving said screen indicator in said direction to scroll through said plurality of displayed menu options and select a particular menu option using said scroll bar.

9. The method of claim 1 wherein said plurality of menu options exceeds a display capacity of said display, the method further including the steps of:

(1) displaying at least a first scrolling control on said display, said scrolling control having a label indicating a desired direction of scrolling movement of said plurality of menu options on said display;

(2) sensing said user input on said display in a predetermined location corresponding to the location of said scrolling control; and

(3) scrolling said plurality of menu options in a direction opposite to said direction to scroll through said plurality of displayed menu options.

10. The method of claim 1 further includes storing a plurality of facsimile messages in storage locations within the facsimile machine, sensing said user input to select a particular one of said stored facsimile messages and selecting said user selected facsimile message in response to said user message selection input.

11. The method of claim 10 wherein said plurality of menu options includes a display option, and the method further includes the step of displaying said user selected facsimile message on said display in response to said user message

selection input and sensing said user input of said display option from said plurality of menu options.

12. The method of claim 1 further includes storing a plurality of outgoing facsimile messages in storage locations within the facsimile machine, sensing said user input to select a particular one of said stored outgoing facsimile messages and selecting said user selected outgoing facsimile message in response to said user message selection input.

13. The method of claim 12 wherein said plurality of menu options includes a transmit option, and the method further includes the step of transmitting said user selected outgoing facsimile message in response to sensing said user input of said transmit option.

14. The method of claim 12 wherein said plurality of menu options includes a transmit later option, and the method further includes the step of selecting a transmission time for transmitting said user selected outgoing facsimile message, and transmitting said user selected outgoing facsimile message at said user selected transmission time in response to sensing a user input of said transmit later option.

15. The method of claim 14 wherein said plurality of menu options includes a cancel option, and the method further includes the step of canceling said transmit later option of said user selected outgoing facsimile message in response to sensing a user input of said cancel option from said plurality of menu options, whereby said user selected outgoing facsimile message is not transmitted.

16. The method of claim 12 wherein said plurality of menu options includes a transmission parameter option, and the method further includes the step of changing a transmission parameter of said user selected outgoing facsimile message in response to sensing a user input of said transmission parameter option from said plurality of menu options, whereby said user selected facsimile message is transmitted in accordance with said user selected transmission parameter.

17. The method of claim 16 wherein said transmission parameter option is the time of transmission of said user selected outgoing facsimile message.

18. The method of claim 1 wherein steps (c) and (d) of sensing said user input and activating said facsimile function comprises the steps of:

- (1) sensing the placement of a finger of the user in proximity with said display;
- (2) altering the display of said display to indicate the selection of said user selected facsimile function;
- (3) sensing the removal of the finger of the user from proximity with said display; and
- (4) activating said user selected facsimile function in response to step (3) of sensing the removal of the finger of the user.

19. A system for facsimile communication, comprising:

a touch-sensitive display displaying a plurality of menu options, each of said menu options having a corresponding predetermined location on said display with each of said predetermined locations being sensitive to the touch of a user, each of said predetermined locations including a label corresponding to said menu option;

a prompt displaying operational instructions to the user on a portion of said display;

an input interface coupled to said display and sensing a user input in proximity with said display in one of said plurality of predetermined locations in response to said instructions; and

~~activation means for activating a facsimile function corresponding to~~  
said user input.

20. The system of claim 19, further including a hardware keypad with a plurality of buttons, with at least one button corresponding to one of said predetermined locations, said input interface sensing user input on said hardware keypad, and in response to sensing said user input on said hardware keypad, said activation means activating said facsimile function corresponding to said user input.

中華民國專利公報 (19)(12)

(11)公告編號: 238450

(44)中華民國84年(1995)01月11日

發明

全67頁

(51)Int. Cl. 5: H04L29/10

(54)名稱: 使用具有觸感顯示之傳真機使用者介面及其使用方法

(21)申請案號: 82104570

(22)申請日期: 中華民國82年(1993)06月09日

(72)發明人:

傑夫瑞·布萊安·瑞夫愛

美國

柯特·迪班尼

美國

克瑞斯·艾德華·吐拜

美國

瑞尼·馬西奧

美國

(71)申請人:

微軟公司

美國

(74)代理人: 陳長文 先生

1

2

[57]申請專利範圍:

1. 一種在傳真機上傳真通信的方法, 其步驟包括:

(A) 在觸感顯示上, 顯示多個選單選項, 在該顯示上每個選單選項具有一個相對預定位置, 在該位置上感測使用者的觸摸, 每個該預定位置包含相對於功能的標識;

(B) 在該顯示部份顯示指令;

(C) 在該顯示的一個預定位置上, 感測使用者在該顯示的輸入的相對指令; 和

(D) 相對所感測的使用者輸入, 起動相對於該使用者輸入的傳真機功能。

2. 如申請專利範圍第1項方法, 利用多個硬體按鍵使用傳真機, 至少一個鍵相對於一個該預定位置, 進一步包含感測在硬體鍵上的使用者輸入的步驟, 並且相對該使用者輸入起動傳真機的功能。

3. 如申請專利範圍第1項方法, 其中步驟(A)在開始時從顯示具有多個種類

的選單選項中, 顯示該多個選單選項, 其中在該顯示預定位置上每個種類均有一個位置, 允許使用者從該主選單多個種類中選擇一個種類。

4. 如申請專利範圍第3項方法, 其中主選單種類包含送出送傳真機信息、查所接收傳真信息、改變傳真機的參、選擇傳真機功能的程式順序、和允許使用者使用的簽入功能。

5. 如申請專利範圍第4項方法, 其中步驟(D)起動該傳真功能, 在該顯示上顯示在該選擇選單選項種類中多個選單選項的各選單選項。

6. 如申請專利範圍第1項方法, 其中該多個選單選項係系統參數, 該感測該使用者輸入的步驟(C)感測使用者選擇之該系統參數中的特定一個。

7. 如申請專利範圍第6項方法, 其中在顯上第一次觸摸預定位置選擇特定系統參數, 當在顯示上第二次觸摸該預定位置時將取消選擇。



附件2. for 93104105.

公告本

第93104105號初審引證附件2.

238450

申請日期	82. 6. 9.
案 號	82104570
類 別	H04L 29/0

A4  
C4

(以上各欄由本局填註)

發明專利說明書  
新 型

一、發明 名稱	中 文	使用具有觸感顯示之傳真機使用者介面及其使用方法
	英 文	FACSIMILE USER INTERFACE WITH TOUCH-SENSITIVE DISPLAY AND METHOD OF USE
二、發明人	姓 名	1. 傑夫瑞·布萊安·瑞夫曼 2. 柯特·迪班尼 3. 克瑞斯·艾德華·吐拜 4. 瑞尼·馬西奧
	籍 貫 (國籍)	均美國
	住、居所	1. 美國華盛頓州西雅圖市東北雷威那廣場5307號 2. 美國華盛頓州瑞蒙市微軟道1號 3. 美國華盛頓州西雅圖市東北第二大道6529號 4. 美國華盛頓州西雅圖市東北第五大道7108號
三、申請人	姓 名 (名稱)	美商微軟公司
	籍 貫 (國籍)	美國
	住、居所 (事務所)	美國華盛頓州瑞蒙郡微軟道1號
	代表人 姓 名	威廉·曲·尼康

經濟部中央標準局員工消費合作社印製

## 五、發明說明 (129)

個人分類。

使用者設定可將所有目前使用者優先綜合為摘要。

系統設定可將目前系統組態綜合為摘要。

遠距故障報告說明：

送一警示訊息至系統管理員(電子郵件或電話號碼)指定位址告知在IFAX機偵測到問題。

選項：

診斷故障 — 在打開電源時或周期性測試。

線外 — 在指定期間以外(如打開蓋子，卸下電話線，拿下聽筒等。)

缺紙

顯影液少

紙張堵塞

持續性線路故障

持續性HDL C轉移失誤

持續性遠距終端不相容

顯然未授權之使用者嚐試進出

上述雖然以各種實施例說明並提出本發明各種優點，但上述的揭示僅供說明而已，其他細部變化仍應屬本發明之廣義原理的範圍。因此，本發明僅由附列之申請專利範圍加以限制。

## 六、申請專利範圍

- ✓ 1. 一種在傳真機上傳真通信的方法，其步驟包括：
- (A) 在觸感顯示上，顯示多個選單選項——在該顯示上每個選單選項具有一個相對預定位置，在該位置上感測使用者的觸摸，每個該預定位置包含相對於功能的標識；
  - (B) 在該顯示部份顯示指令；
  - (C) 在該顯示的一個預定位置上，感測使用者在該顯示的輸入的相對指令；和
  - (D) 相對所感測的使用者輸入，起動相對於該使用者輸入的傳真機功能。
2. 如申請專利範圍第 1 項方法，利用多個硬體按鍵使用傳真機，至少一個鍵相對於一個該預定位置，進一步包含感測在硬體鍵上的使用者輸入的步驟，並且相對該使用者輸入起動傳真機的功能。
3. 如申請專利範圍第 1 項方法，其中步驟 (A) 在開始時從顯示具有多個種類的選單選項中，顯示該多個選單選項，其中在該顯示預定位置上每個種類均有一個位置，允許使用者從該主選單多個種類中選擇一個種類。
4. 如申請專利範圍第 3 項方法，其中主選單種類包含送出送傳真機信息、查所接收傳真信息、改變傳真機的參、選擇傳真機功能的程式順序、和允許使用者使用的簽入功能。
5. 如申請專利範圍第 4 項方法，其中步驟 (D) 起動該傳真功能，在該顯示上顯示在該選擇選單選項種類中多個選單

(請先閱讀背面之注意事項再填寫本頁)

裝

訂

線

## 六、申請專利範圍

選項的各選單選項。

6. 如申請專利範圍第1項方法，其中該多個選單選項選項係系統參數，該感測該使用者輸入的步驟○感測使用者選擇之該系統參數中的特定一個。
7. 如申請專利範圍第6項方法，其中在顯上第一次觸摸預定位位置選擇特定系統參數，當在顯示上第二次觸摸該預定位位置時將取消選擇。
8. 如申請專利範圍第1項方法，進一步在該顯示上至少顯示第一捲幕控制，在顯示上可移動的幕指示器利用相對於該捲幕控制的該標識指示方向，進一步包含在該顯示的預定位位置感測該使用者輸入，並且移動該幕指示器捲動經由多個顯示選單選項，並且使用該捲幕棒選擇特定的選單選項。
9. 如申請專利範圍第1項方法，其中該多個選單選項超過該顯示的容量，進一步的步驟包括：
  - (1) 在該顯示至少顯示第一捲幕控制，捲幕控制的標識指出多個選單選項的移動方向；
  - (2) 感測該使用者輸入的相對於該捲幕控制的位置；和
  - (3) 以相反方向捲該多個選單選項，捲動經由多個顯示選單選項。
10. 如申請專利範圍第1項方法，進一步在傳真機內儲存位置儲存多個傳真機信息，感測使用者輸入選擇一個特定傳真信息，選擇該使用者所選擇傳真信息。
11. 如申請專利範圍第10項方法，其中該多個選單選項選項

(請先閱讀背面之注意事項再填寫本頁)

六、申請專利範圍

包括一個顯示選項，並且步一步包括在顯示上顯示使用者選擇傳真信息的步驟，並且從多個選單選項中感測該使用者該顯示選項的輸入。

12. 如申請專利範圍第1項方法，進一步包括在傳真機內儲存多個送出去的傳真信息，感測使用者輸入選擇一個特定傳真信息，並且相對使用者信息選擇輸入，選擇該使用者傳真信息的步驟。

13. 如申請專利範圍第12項方法，其中該多個功能表包含傳送功能，進一步包括傳送該使用者選擇送出的傳真信息的步驟。

14. 如申請專利範圍第12項方法，其中該多個功能表包括延後傳送功能，進一步包括選擇傳送時間的步驟，並且相對於感測延後傳送功能的使用者輸入，在使用者所選擇時間傳送傳真信息。

✓ 15. 如申請專利範圍第14項方法，其中該多個功能表包括取消功能，進一步包括取消延後傳送能的步驟，因此不傳送該使用者選擇送出的傳真信息。

16. 如申請專利範圍第12項方法，其中該多個選單選項包括傳送參數功能，進一步包括改變該使用者所選擇傳真信息的傳送參數的步驟，因此根據使用者所選擇傳送參數，傳送使用者所選擇傳真信息。

17. 如申請專利範圍第16項方法，其中傳送參數功能是該傳真信息的傳送時間。

✓ 18. 如申請專利範圍第1項方法，其中步驟○和○的感測該

(請先閱讀背面之注意事項再填寫本頁)

裝

打

線

## 六、申請專利範圍

使用者輸入和起動傳真機功能包括：

- (1) 在顯示附近感測使用者手指的位置；
- (2) 轉變顯示成為指示使用者所選擇的傳真功能；
- (3) 感測手指從示附近移開；和
- (4) 當感測手指移開時，起動使用者所選擇的傳真機功能。

19. 一種傳真通信的系統，其包括：

一個觸感顯示，其顯示多個選單選項，在該顯示上每個選單具有一個相對預定位置，在該位置上感測使用者的觸摸，每個該預定位置包含相對於功能的標識；

在該顯示的部份上，一個提示顯示操作指令使用者；

連接該顯示的輸入介面，在該顯示的一個預定位置上感測使用者輸入相對的該指令；和

起動裝置，起動相關於該使用者輸入的一個傳真功能。


20. 如申請專利範圍第19項~~本項~~，進一步包括多個硬體按鍵

，至少一個鍵相對於一個該預定位置，該輸入介面感測在硬體鍵上的使用者輸入，並且相對該輸入利用起動裝置起動該相對的傳真機功能。

(請先閱讀背面之注意事項再填寫本頁)


238450

83年12月6日修正/更正/補充

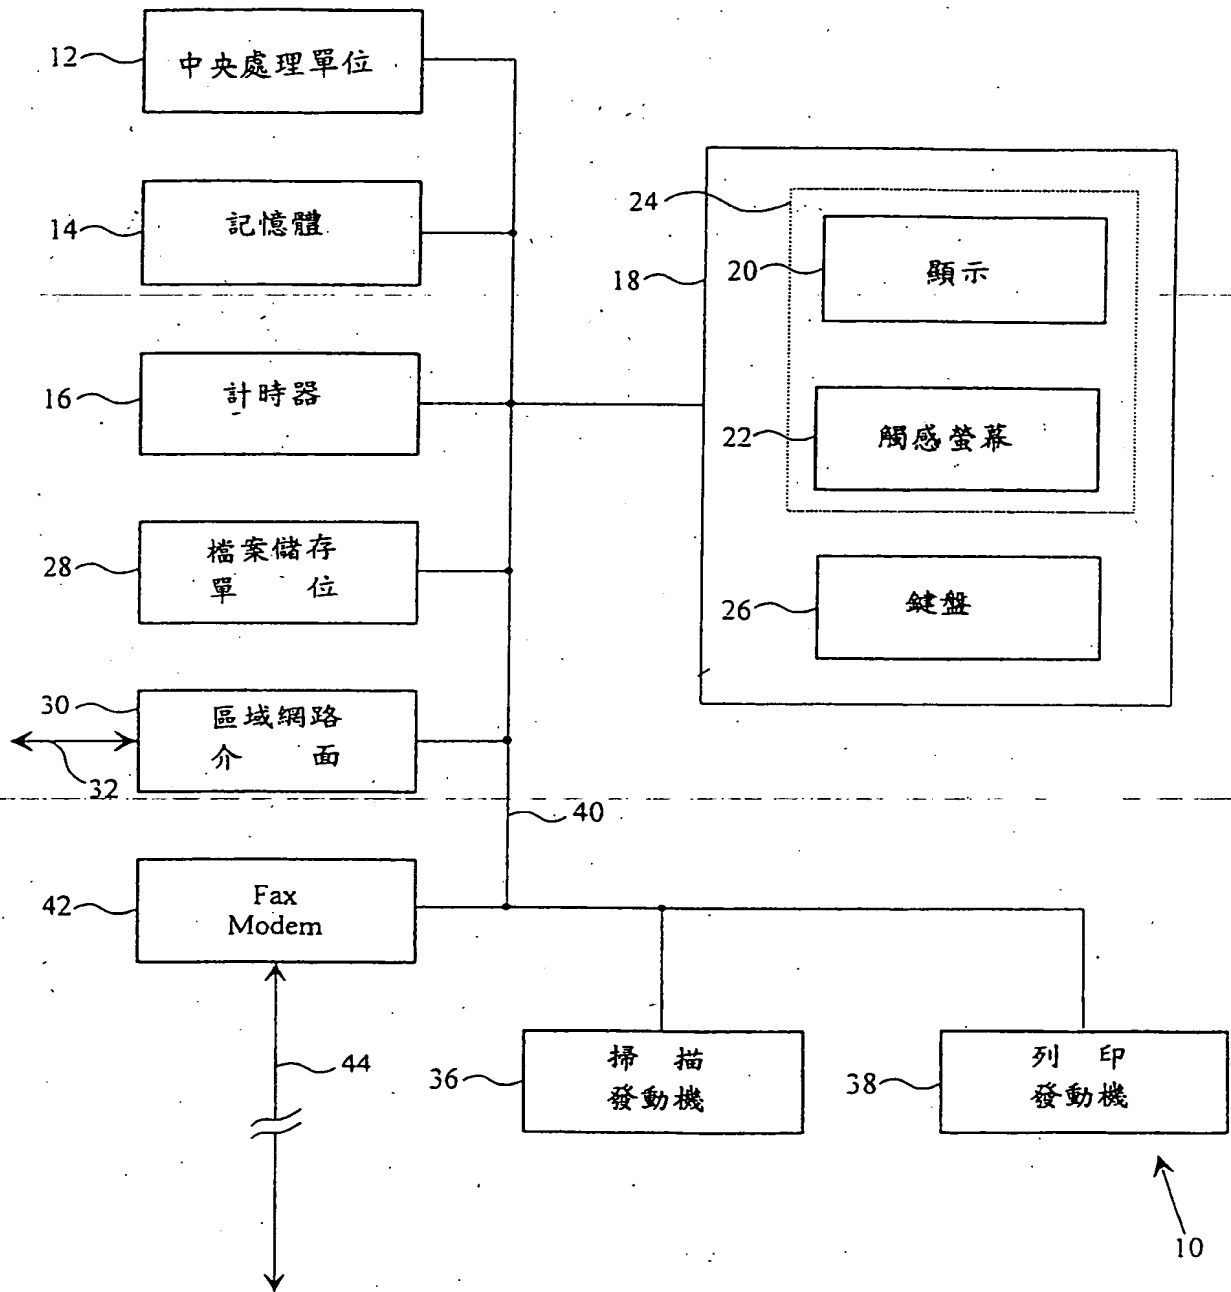

第 1 圖


238450

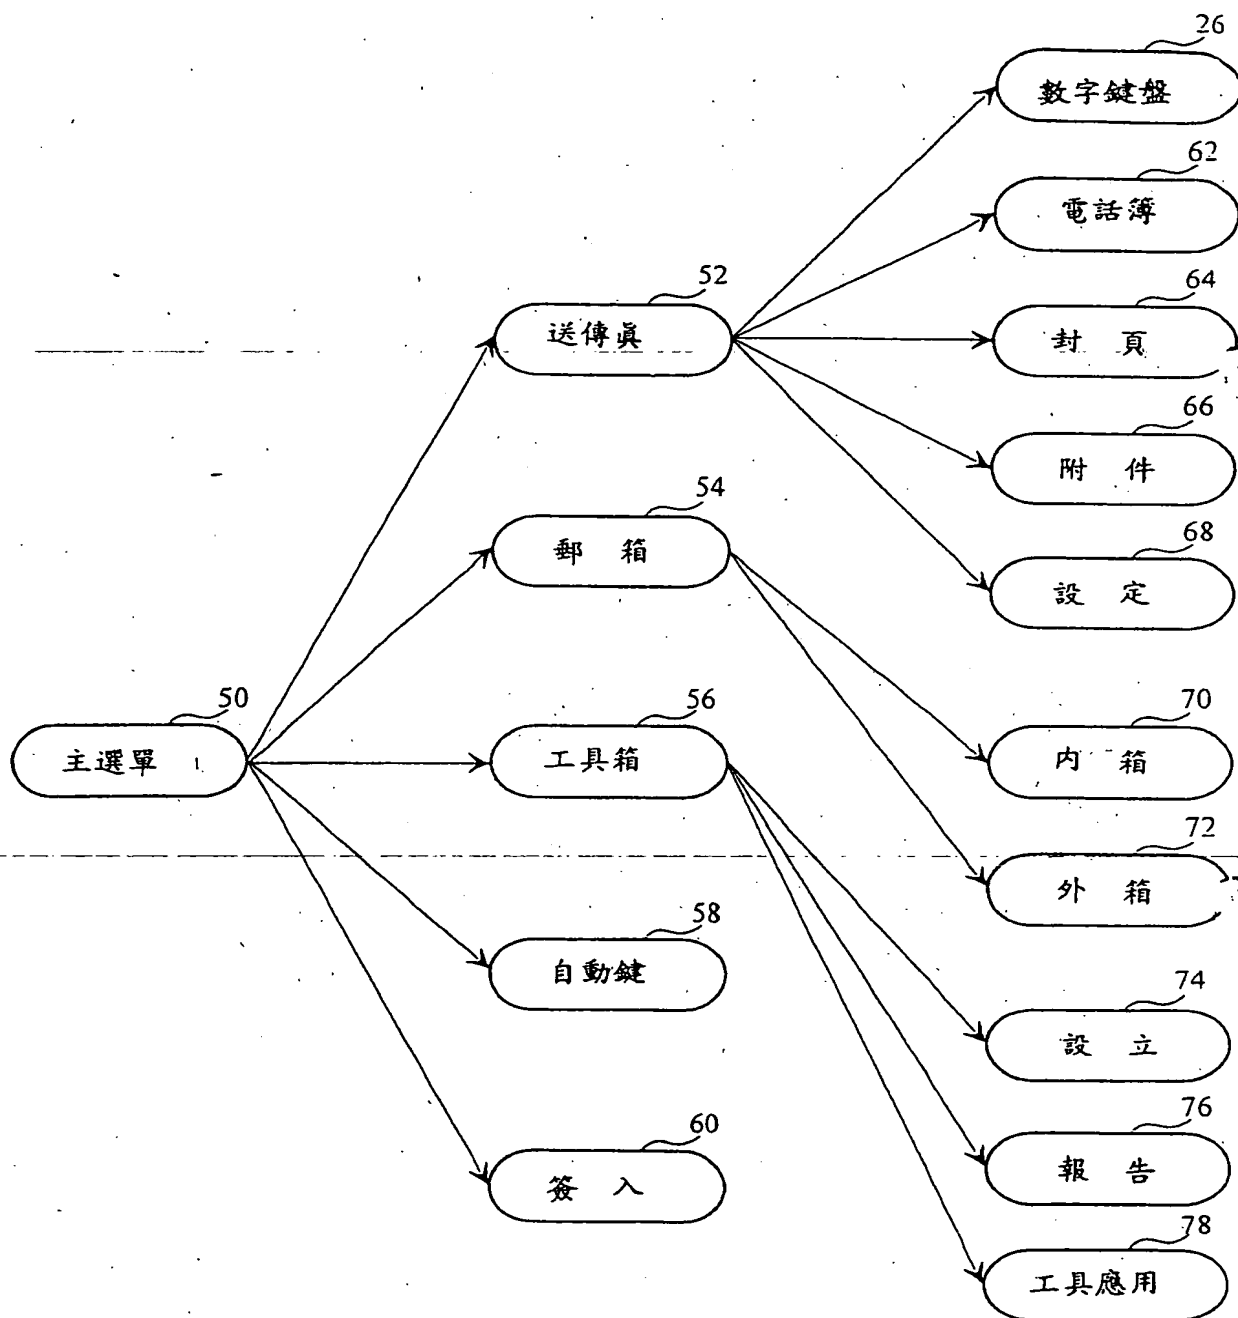

第 2 圖




138480

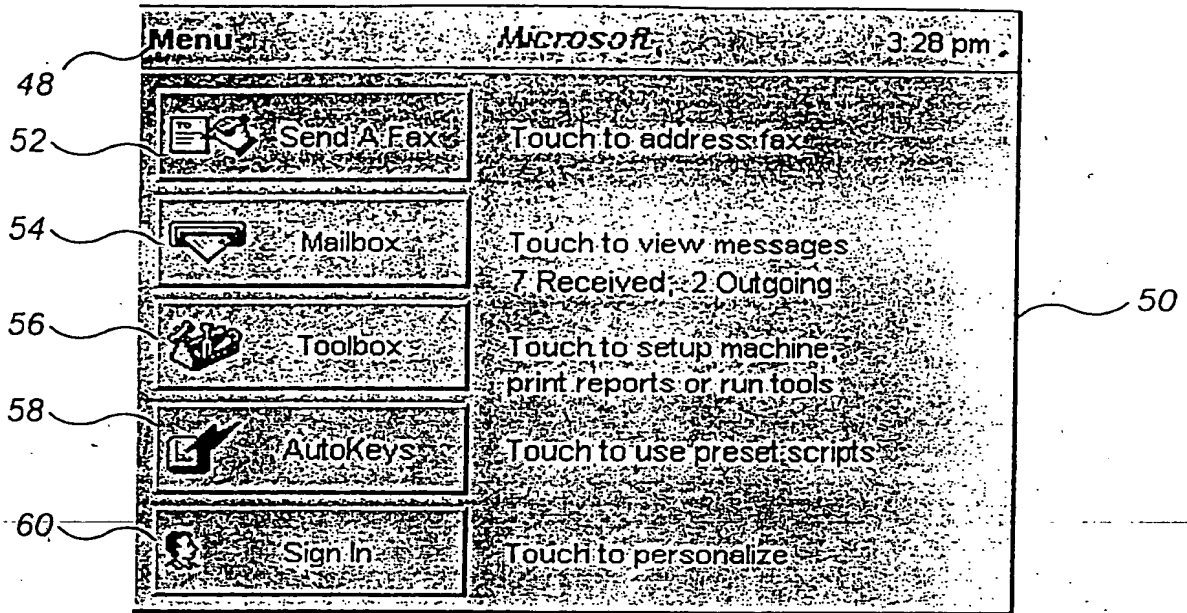

24


第 3 圖

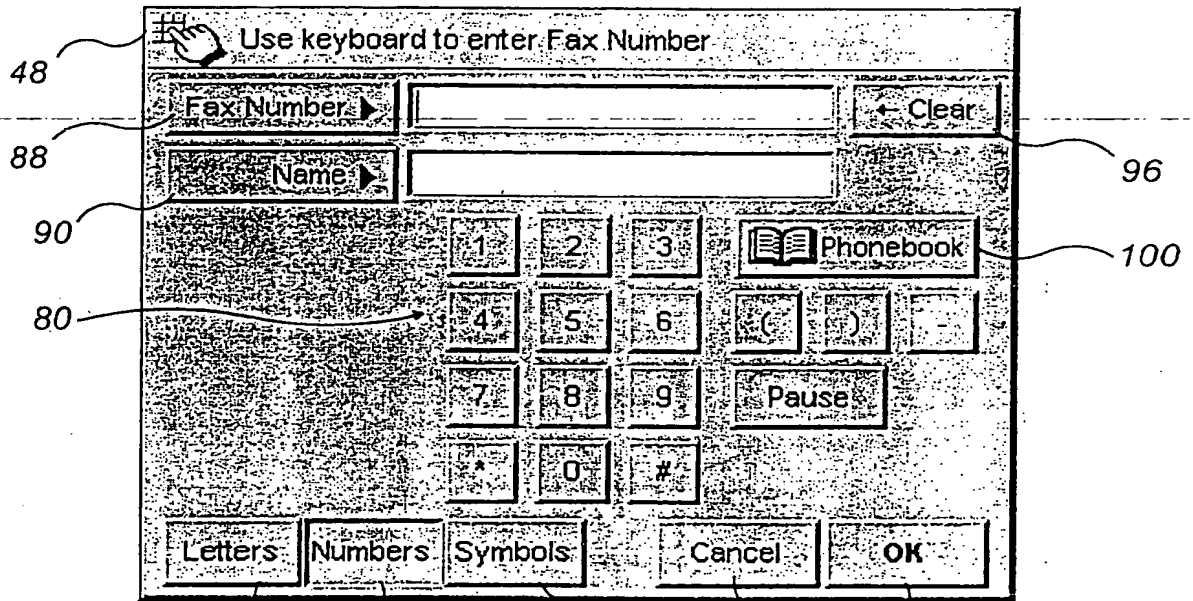


24

第 5 圖



133450

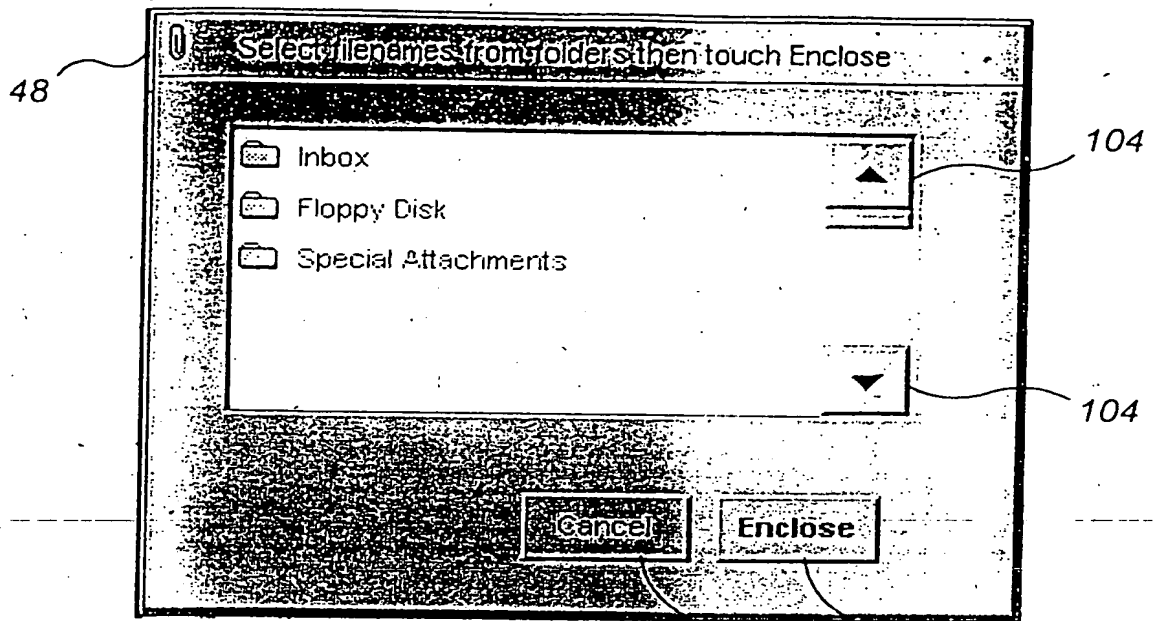

第 16 圖

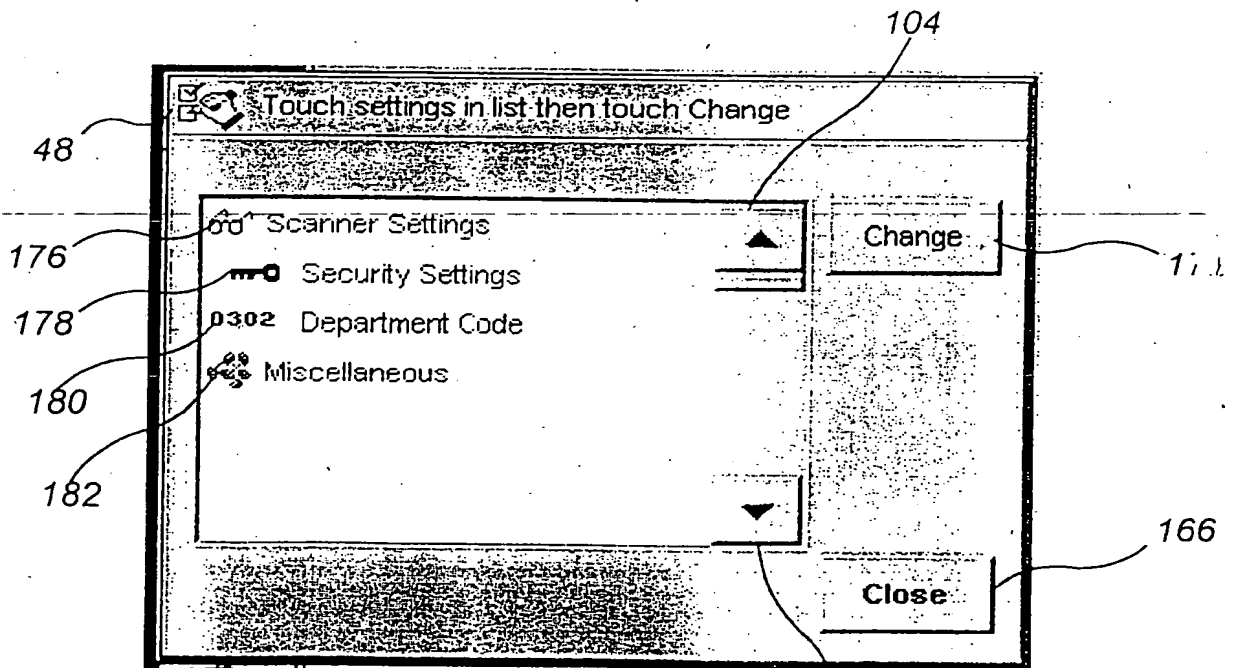

第 17 圖

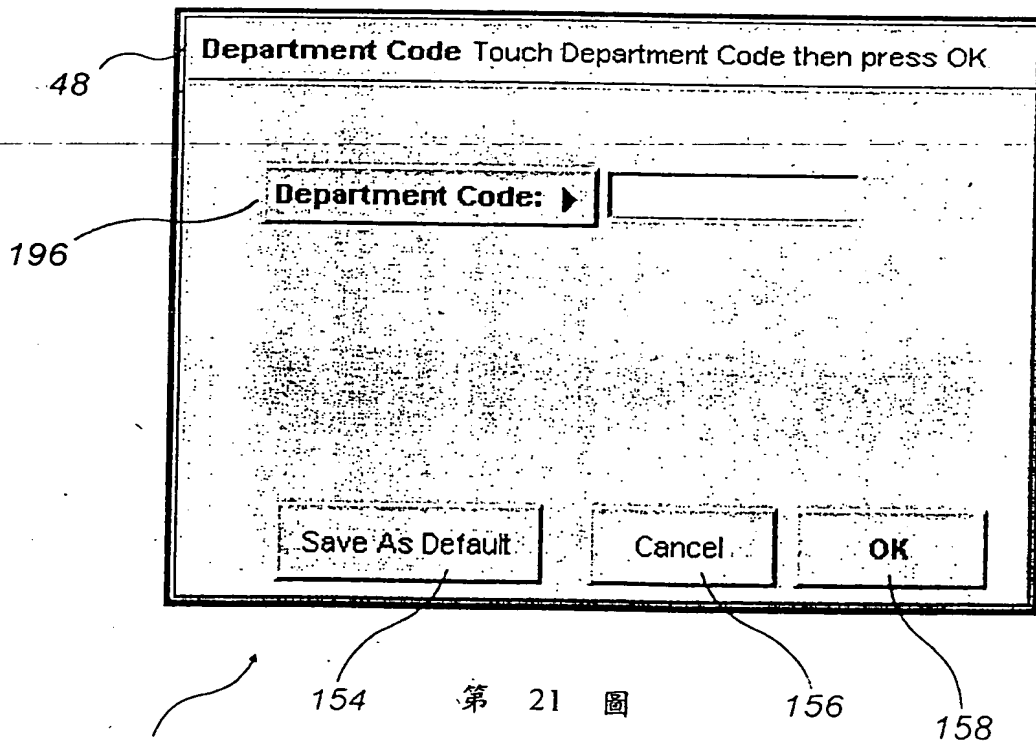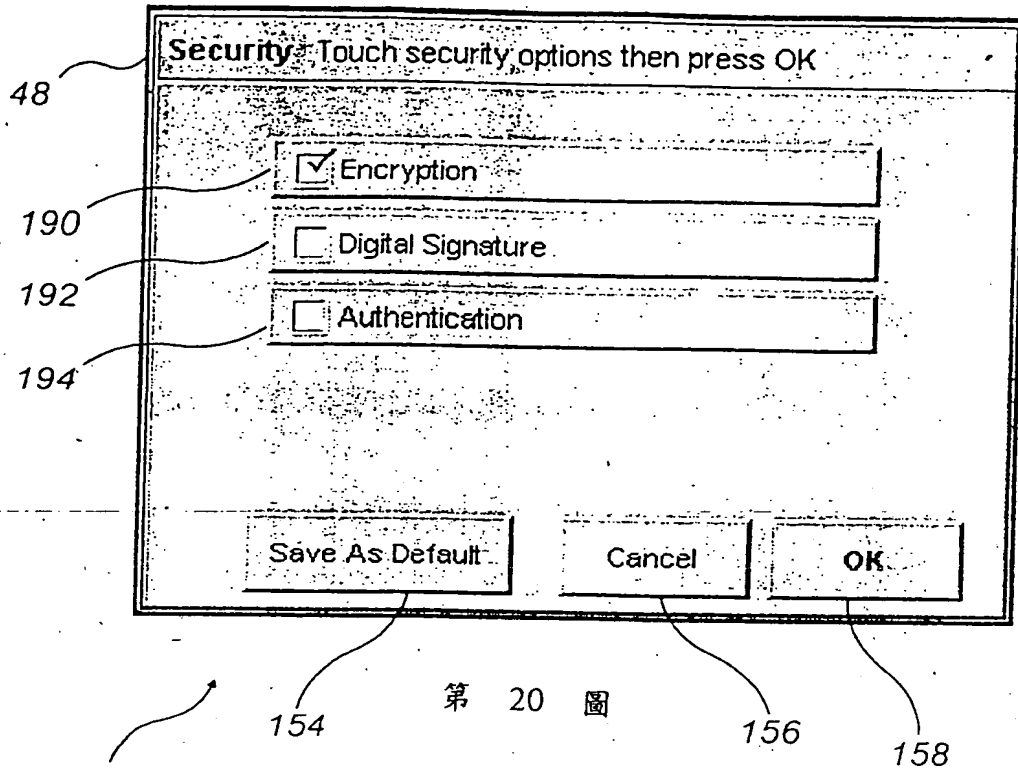

**This Page is Inserted by IFW Indexing and Scanning  
Operations and is not part of the Official Record.**

## **BEST AVAILABLE IMAGES**

Defective images within this document are accurate representations of the original documents submitted by the applicant.

Defects in the images include but are not limited to the items checked:

- ☐ **BLACK BORDERS**
- ☐ **IMAGE CUT OFF AT TOP, BOTTOM OR SIDES**
- ☐ **FADED TEXT OR DRAWING**
- ☐ **BLURRED OR ILLEGIBLE TEXT OR DRAWING**
- ☐ **SKEWED/SLANTED IMAGES**
- ☐ **COLOR OR BLACK AND WHITE PHOTOGRAPHS**
- ☐ **GRAY SCALE DOCUMENTS**
- ☐ **LINES OR MARKS ON ORIGINAL DOCUMENT**
- ☒ **REFERENCE(S) OR EXHIBIT(S) SUBMITTED ARE POOR QUALITY**
- ☐ **OTHER:** \_\_\_\_\_

**IMAGES ARE BEST AVAILABLE COPY.**

**As rescanning these documents will not correct the image problems checked, please do not report these problems to the IFW Image Problem Mailbox.**